



ICESat (GLAS) Science Processing Software Document Series

**The GLAS Science Algorithm Software (GSAS) Detailed
Design Document Version 6**

Jeffrey E. Lee

National Aeronautics and
Space Administration

**Goddard Space Flight Center
Greenbelt, Maryland 20771**

NASA STI Program ... in Profile

Since its founding, NASA has been dedicated to the advancement of aeronautics and space science. The NASA scientific and technical information (STI) program plays a key part in helping NASA maintain this important role.

The NASA STI program operates under the auspices of the Agency Chief Information Officer. It collects, organizes, provides for archiving, and disseminates NASA's STI. The NASA STI program provides access to the NASA Aeronautics and Space Database and its public interface, the NASA Technical Report Server, thus providing one of the largest collections of aeronautical and space science STI in the world. Results are published in both non-NASA channels and by NASA in the NASA STI Report Series, which includes the following report types:

- **TECHNICAL PUBLICATION.** Reports of completed research or a major significant phase of research that present the results of NASA Programs and include extensive data or theoretical analysis. Includes compilations of significant scientific and technical data and information deemed to be of continuing reference value. NASA counterpart of peer-reviewed formal professional papers but has less stringent limitations on manuscript length and extent of graphic presentations.
- **TECHNICAL MEMORANDUM.** Scientific and technical findings that are preliminary or of specialized interest, e.g., quick release reports, working papers, and bibliographies that contain minimal annotation. Does not contain extensive analysis.
- **CONTRACTOR REPORT.** Scientific and technical findings by NASA-sponsored contractors and grantees.
- **CONFERENCE PUBLICATION.** Collected papers from scientific and technical conferences, symposia, seminars, or other meetings sponsored or co-sponsored by NASA.
- **SPECIAL PUBLICATION.** Scientific, technical, or historical information from NASA programs, projects, and missions, often concerned with subjects having substantial public interest.
- **TECHNICAL TRANSLATION.** English-language translations of foreign scientific and technical material pertinent to NASA's mission.

Specialized services also include organizing and publishing research results, distributing specialized research announcements and feeds, providing help desk and personal search support, and enabling data exchange services. For more information about the NASA STI program, see the following:

- Access the NASA STI program home page at <http://www.sti.nasa.gov>
 - E-mail your question via the Internet to help@sti.nasa.gov
 - Fax your question to the NASA STI Help Desk at 443-757-5803
 - Phone the NASA STI Help Desk at 443-757-5802
 - Write to:
NASA STI Help Desk
NASA Center for AeroSpace Information
7115 Standard Drive
Hanover, MD 21076-1320
-



ICESat (GLAS) Science Processing Software Document Series

**The GLAS Science Algorithm Software (GSAS) Detailed
Design Document Version 6**

Jeffrey E. Lee
Stinger Ghaffarian Technologies, Inc., Wallops Island, VA

National Aeronautics and
Space Administration

Goddard Space Flight Center
Greenbelt, Maryland 20771

Notice for Copyrighted Information

This manuscript has been authored by employees of *Stinger Ghaffarian Technologies* with the National Aeronautics and Space Administration. The United States Government has a non-exclusive, irrevocable, worldwide license to prepare derivative works, publish, or reproduce this manuscript, and allow others to do so, for United States Government purposes. Any publisher accepting this manuscript for publication acknowledges that the United States Government retains such a license in any published form of this manuscript. All other rights are retained by the copyright owner.

Trade names and trademarks are used in this report for identification only. Their usage does not constitute an official endorsement, either expressed or implied, by the National Aeronautics and Space Administration.

Level of Review: This material has been technically reviewed by technical management

Available from:
NASA Center for AeroSpace Information
7115 Standard Drive
Hanover, MD 21076-1320

National Technical Information Service
5285 Port Royal Road
Springfield, VA 22161 Price Code: A17

Foreword

The GEOSCIENCE LASER ALTIMETER SYSTEM (GLAS) is the primary instrument for the ICESat (Ice, Cloud and Land Elevation Satellite) laser altimetry mission. ICESat was the benchmark Earth Observing System (EOS) mission for measuring ice sheet mass balance, cloud and aerosol heights, as well as land topography and vegetation characteristics. From 2003 to 2009, the ICESat mission provided multi-year elevation data needed to determine ice sheet mass balance as well as cloud property information, especially for stratospheric clouds common over polar areas. It also provided topography and vegetation data around the globe, in addition to the polar-specific coverage over the Greenland and Antarctic ice sheets.

This is the final version of GLAS Science Algorithm Software Detailed Design (GSAS-DD) document. This document is developed under the structure of the NASA STD-2100-91, a NASA standard defining a four-volume set of documents to cover an entire software life cycle. Under this standard a section of any volume may, if necessary, be rolled out to its own separate document. This document is a roll-out of the detailed design within the Product Specification Volume.

This document was created by the GLAS Science Algorithm Software (GSAS) Development Team in support of B. E. Schutz, GLAS Science Team Leader for the GLAS Investigation. This work was performed under the direction of David W. Hancock, III, who may be contacted at (757) 824-1238, David.W.Hancock@nasa.gov (e-mail), or (757) 824-1036 (FAX).

This document was created through the efforts of the GLAS Science Algorithm Software (GSAS) Development Team. Current team members include:

SGT, Inc./Kristine Barbieri

SGT, Inc./Suneel Bhardwaj

SGT, Inc./John DiMarzio

614/David W. Hancock, III

SGT, Inc./Peggy Jester

SGT, Inc./Jeffrey Lee

SGT, Inc./Lisa Lee

SSAI/Steve Palm

SGT, Inc./Carol Purdy

SGT, Inc./Lee Anne Roberts

SGT, Inc./Jack Saba

Table of Contents

| | |
|---|------|
| Foreword | v |
| Table of Contents | vii |
| List of Figures | xiii |
| List of Tables | xv |
| Section 1 Introduction | |
| 1.1 Identification of Document | 1-1 |
| 1.2 Scope of Document | 1-1 |
| 1.3 Purpose and Objectives of Document | 1-2 |
| 1.4 Document Organization | 1-2 |
| 1.5 Document Change History | 1-2 |
| Section 2 Related Documentation | |
| 2.1 Parent Documents | 2-1 |
| 2.2 Applicable Documents | 2-1 |
| 2.3 Information Documents | 2-2 |
| Section 3 Design Issues | |
| 3.1 Requirements | 3-1 |
| 3.2 Single vs. Multiple Executables | 3-1 |
| 3.3 Software Reuse | 3-2 |
| 3.4 I/O and Unit Conversion | 3-2 |
| 3.5 Reprocessing and Pass-Thrus | 3-2 |
| 3.6 Data Buffering | 3-3 |
| Section 4 Design Overview | |
| 4.1 GSAS Design Overview | 4-1 |
| 4.2 PGEs | 4-1 |
| 4.3 Files | 4-3 |
| 4.4 Science Algorithms | 4-3 |
| 4.5 Utilities | 4-3 |
| Section 5 Foundation Libraries | |
| 5.1 The Platform Library (platform_lib) | 5-1 |
| 5.2 The Control Library (cntrl_lib) | 5-2 |
| 5.3 The Error Library (err_lib) | 5-3 |
| 5.4 The Math Library (math_lib) | 5-4 |
| 5.5 The Ancillary Library (anc_lib) | 5-5 |
| 5.6 The File Library (file_lib) | 5-7 |
| 5.7 The Time Library (time_lib) | 5-7 |
| 5.8 The Product Library (prod_lib) | 5-8 |
| 5.9 The Exec Library (exec lib) | 5-9 |

Section 6 **GSAS Core PGEs**

| | | |
|--------|--------------------|------|
| 6.1 | Function | 6-1 |
| 6.2 | Requirements | 6-1 |
| 6.3 | Approach..... | 6-1 |
| 6.4 | Design..... | 6-2 |
| 6.4.1 | MainInit | 6-3 |
| 6.4.2 | eCntl_Init | 6-5 |
| 6.4.3 | GetControl | 6-5 |
| 6.4.4 | OpenFiles | 6-6 |
| 6.4.5 | PrintCntl | 6-6 |
| 6.4.6 | Write_LibVer | 6-6 |
| 6.4.7 | ReadAnc | 6-7 |
| 6.4.8 | Write_AncVer..... | 6-7 |
| 6.4.9 | ReadData..... | 6-7 |
| 6.4.10 | Managers..... | 6-9 |
| 6.4.11 | MainWrap..... | 6-10 |

Section 7 **Common Functionality**

| | | |
|-------|---|------|
| 7.1 | Control File Parsing | 7-1 |
| 7.1.1 | PASSID Specification..... | 7-2 |
| 7.1.2 | Input/Output File Specification | 7-3 |
| 7.1.3 | Input Data Time Selection | 7-4 |
| 7.1.4 | Output Data Time Selection | 7-4 |
| 7.1.5 | Execution scenarios | 7-5 |
| 7.2 | ANC07 Constants Files | 7-5 |
| 7.3 | Invalid Values and Error/Status Reporting..... | 7-6 |
| 7.3.1 | Invalid Values..... | 7-6 |
| 7.3.2 | Exit Status..... | 7-7 |
| 7.3.3 | Error and Status Reporting | 7-7 |
| 7.4 | ANC06 Metadata/Log File | 7-9 |
| 7.5 | Product Internal Data Storage, Conversion and I/O | 7-10 |
| 7.5.1 | Product Modules..... | 7-10 |
| 7.5.2 | Internal Product Data Storage..... | 7-11 |
| 7.5.3 | Product Input/Output | 7-11 |
| 7.5.4 | Product-to-Algorithm Conversion (P2A) | 7-11 |
| 7.5.5 | Pass-Thru | 7-12 |
| 7.5.6 | Managers..... | 7-12 |
| 7.5.7 | Algorithm to Product Conversion (A2P) | 7-12 |

| | | |
|-------------------|--|-------|
| 7.6 | Product Headers | 7-12 |
| 7.7 | Summary | 7-13 |
| Section 8 | GLAS_L0proc | |
| 8.1 | Overview | 8-1 |
| 8.2 | Function | 8-1 |
| 8.3 | Approach | 8-2 |
| 8.4 | Input and Output Files | 8-2 |
| 8.4.1 | GLA00 APID Files | 8-4 |
| 8.4.2 | ANC47 PDS Files | 8-5 |
| 8.4.3 | ANC33 MET Counter to UTC Conversion File | 8-5 |
| 8.4.4 | Control File | 8-6 |
| 8.4.5 | ANC29 Index File | 8-6 |
| 8.4.6 | ANC32 GPS File | 8-6 |
| 8.5 | Design | 8-8 |
| 8.5.1 | PGE Core Routines | 8-9 |
| 8.5.2 | ReadGLOP | 8-10 |
| 8.5.3 | sort_gla00_index | 8-10 |
| 8.5.4 | sort_gps | 8-11 |
| 8.5.5 | utc_time_conversion | 8-11 |
| 8.5.6 | Index_Grouping | 8-11 |
| Section 9 | GLAS_L1A | |
| 9.1 | Overview | 9-1 |
| 9.2 | Function | 9-1 |
| 9.3 | Design Approach | 9-1 |
| 9.4 | Input and Output Files | 9-2 |
| 9.5 | GLAS_L1A PGE | 9-3 |
| 9.5.1 | PGE Core Routines | 9-4 |
| 9.6 | L1A Manager (L1A_Mgr) | 9-5 |
| 9.7 | PGE/Manager Implementation Details | 9-6 |
| 9.7.1 | ANC29/ANC32/GLA00 Input | 9-6 |
| 9.7.2 | Missing APIDs | 9-7 |
| 9.8 | L1A_Subsystem | 9-8 |
| 9.8.1 | Subsystem Design Decisions and Assumptions | 9-8 |
| 9.8.2 | DFDs and their Descriptions | 9-8 |
| Section 10 | GLAS_Alt | |
| 10.1 | Function | 10-1 |
| 10.2 | Design Approach | 10-1 |
| 10.3 | Input and Output Files | 10-2 |
| 10.4 | GLAS_Alt | 10-6 |
| 10.4.1 | PGE Core Routines | 10-6 |
| 10.5 | Waveform Manager (WFMgr) | 10-6 |
| 10.5.1 | WFMgr Subprocesses | 10-9 |
| 10.6 | Elevation Manager (Elev_Mgr) | 10-10 |
| 10.6.1 | ElevMgr Subprocesses | 10-12 |

| | | |
|-------------------|--|-------|
| 10.7 | PGE/Manager Implementation Details | 10-14 |
| 10.7.1 | GLA05 Requirement. | 10-14 |
| 10.8 | WF_Subsystem | 10-14 |
| 10.8.1 | Assess Waveforms (W_Assess) | 10-14 |
| 10.9 | Elev_Subsystem | 10-22 |
| 10.9.1 | L1B DFDs and their Descriptions | 10-22 |
| 10.9.2 | L2 DFDs and their Descriptions | 10-24 |
| Section 11 | GLAS_Atm | |
| 11.1 | Overview | 11-1 |
| 11.2 | Function | 11-1 |
| 11.3 | Design Approach | 11-1 |
| 11.4 | Input and Output Files | 11-2 |
| 11.5 | Functions | 11-4 |
| 11.5.1 | PGE Core Routines | 11-5 |
| 11.5.2 | Atm Manager (Atm_Mgr) | 11-6 |
| 11.6 | Atm_Subsystem | 11-9 |
| 11.6.1 | DFDs and their Descriptions | 11-10 |
| 11.6.2 | Structure Charts | 11-16 |
| Section 12 | GLAS_Reader | |
| 12.1 | Function | 12-1 |
| 12.2 | Design Approach | 12-1 |
| 12.3 | Input and Output Files | 12-1 |
| 12.4 | GLAS_Reader | 12-2 |
| Section 13 | met_util | |
| 13.1 | Overview | 13-1 |
| 13.2 | Function | 13-1 |
| 13.3 | Design Approach | 13-1 |
| 13.4 | Input and Output Files | 13-1 |
| 13.5 | Functions | 13-3 |
| 13.6 | Functional Overview | 13-3 |
| Section 14 | reforbit_util | |
| 14.1 | Overview | 14-1 |
| 14.2 | Function | 14-1 |
| 14.3 | Design Approach | 14-1 |
| 14.4 | Input and Output Files | 14-1 |
| 14.5 | Functions | 14-1 |
| 14.6 | Functional Overview | 14-2 |
| Section 15 | createGran_util | |
| 15.1 | Overview | 15-1 |
| 15.2 | Function | 15-1 |
| 15.3 | Design Approach | 15-1 |
| 15.3.1 | Definitions | 15-1 |

| | | |
|-------------------|--|------|
| 15.3.2 | Assumptions | 15-3 |
| 15.4 | Input and Output Files | 15-3 |
| 15.5 | Functions. | 15-5 |
| 15.6 | Functional Overview. | 15-5 |
| Section 16 | atm_anc | |
| 16.1 | Overview. | 16-1 |
| 16.2 | Function | 16-1 |
| 16.3 | Design Approach | 16-1 |
| 16.4 | Input and Output Files | 16-1 |
| 16.5 | Functions. | 16-2 |
| 16.6 | Functional Overview of Calibration Modules | 16-2 |
| 16.6.1 | Segment Averaging Module (SAM). | 16-2 |
| 16.6.2 | CALibration Module (CALM). | 16-5 |
| Section 17 | GLAS_Meta | |
| 17.1 | Function | 17-1 |
| 17.2 | Design Approach | 17-1 |
| 17.3 | Input and Output Files | 17-1 |
| 17.4 | GLAS_Meta | 17-3 |
| 17.4.1 | PGE Core Routines. | 17-3 |
| 17.4.2 | Metadata Processing. | 17-4 |
| 17.4.3 | ANC45/ANC46 File Updates. | 17-4 |
| Section 18 | GLAS_Tick | |
| 18.1 | Function | 18-1 |
| 18.2 | Design Approach | 18-1 |
| 18.3 | Input and Output Files | 18-1 |
| 18.4 | GLAS_Tick. | 18-2 |
| 18.4.1 | PGE Core Routines. | 18-2 |
| 18.4.2 | Engineering Statistics Processing. | 18-3 |
| 18.4.3 | GPS Update Processing | 18-3 |
| Section 19 | GLAS_APID | |
| 19.1 | Function | 19-1 |
| 19.2 | Design Approach | 19-1 |
| 19.3 | Input and Output Files | 19-1 |
| 19.4 | GLAS_APID. | 19-2 |
| 19.4.1 | PGE Core Routines. | 19-3 |

Section 20 Maker

| | | |
|------|------------------------------|------|
| 20.1 | Overview | 20-1 |
| 20.2 | Function | 20-1 |
| 20.3 | Design Approach | 20-1 |
| 20.4 | Input and Output Files | 20-1 |
| 20.5 | Functions | 20-1 |
| 20.6 | Functional Overview | 20-3 |

1

Appendix A Processing Scenarios

| | | |
|-----|-----------------|-----|
| A.1 | Scenarios | A-1 |
|-----|-----------------|-----|

1

Appendix B Makefiles and Libraries

| | | |
|-------|--|-----|
| B.1 | Compilation | B-1 |
| B.1.1 | To compile the whole distribution | B-1 |
| B.1.2 | To compile only the libraries | B-1 |
| B.1.3 | To recompile a library in debug mode | B-1 |
| B.1.4 | To recompile a library in optimized mode | B-1 |
| B.1.5 | To compile a specific executable | B-1 |
| B.1.6 | To compile a specific executable in debug mode | B-1 |
| B.1.7 | To compile a specific executable in optimized mode | B-1 |
| B.2 | Using Libraries | B-2 |
| B.2.1 | Development | B-2 |
| B.2.2 | Runtime | B-2 |
| B.3 | Some Development Hints | B-2 |
| B.4 | Makefile Details | B-3 |
| B.5 | Types of Makefiles | B-3 |
| B.5.1 | The Main Makefile | B-3 |
| B.5.2 | The src Makefile | B-3 |
| B.5.3 | Library Makefiles | B-3 |
| B.5.4 | Subsystem Makefiles | B-4 |
| B.5.5 | Exec makefiles | B-4 |
| B.6 | A Sample Heavily-Commented Makefile | B-4 |

| | |
|--------------------------------|------|
| Abbreviations & Acronyms | AB-1 |
|--------------------------------|------|

| | |
|----------------|------|
| Glossary | GL-1 |
|----------------|------|

List of Figures

| | | |
|--------------|---|-------|
| Figure 1-1 | I-SIPS Software Top-Level Decomposition | 1-1 |
| Figure 4-1 | GSAS Layers | 4-1 |
| Figure 4-2 | Simplified GSAS Data Flow Diagram. | 4-2 |
| Figure 6-1 | Top-Level Structure Chart. | 6-3 |
| Figure 6-2 | MainInit | 6-4 |
| Figure 6-3 | GetControl | 6-5 |
| Figure 6-4 | ReadData | 6-8 |
| Figure 7-1 | Error Ancillary File Format. | 7-8 |
| Figure 8-1 | GLAS_L0proc Structure Chart | 8-9 |
| Figure 9-1 | GLAS_L1A Structure Chart | 9-4 |
| Figure 9-2 | L1A_Mgr Structure Chart | 9-5 |
| Figure 9-3 | L1A Manager Flow Chart | 9-6 |
| Figure 9-4 | Level 1A Computations. | 9-8 |
| Figure 10-1 | WFMgr Structure Chart. | 10-8 |
| Figure 10-2 | ElevMgr Structure Chart | 10-11 |
| Figure 11-1 | GLAS_Atm Structure Chart | 11-5 |
| Figure 11-2 | Atm_Mgr Structure Chart | 11-6 |
| Figure 11-3 | ATM Manager - Part 1. | 11-7 |
| Figure 11-4 | ATM Manager - Part 2. | 11-8 |
| Figure 11-5 | Atmosphere Subsystem Processes. | 11-10 |
| Figure 11-6 | ATM L1B Calculate Calibration Coefficients, Profile Locations, and DEM Subprocesses | 11-11 |
| Figure 11-7 | ATM L1B Backscatter Subprocesses | 11-13 |
| Figure 11-9 | ATM L1B QA Statistics and WriteATM Subprocesses | 11-14 |
| Figure 11-8 | ATM L1B QA Statistics and WriteATM Subprocesses | 11-14 |
| Figure 11-10 | ATM L2: Cloud / Aerosol Layer Heights Subprocesses. | 11-15 |
| Figure 11-11 | Atmosphere Subsystem: Optical Properties Subprocesses | 11-16 |
| Figure 11-12 | ATM L2 QA Statistics and WriteATM Subprocesses. | 11-17 |
| Figure 11-13 | ATM Calibration Coefficient / Profile Location / DEM Modules . . | 11-17 |
| Figure 11-14 | ATM Backscatter Modules | 11-18 |

| | | |
|--------------|---|-------|
| Figure 11-15 | ATM L1B QA Statistics / Write ATM Modules | 11-18 |
| Figure 11-16 | ATM 20 sec Buffering Module | 11-19 |
| Figure 11-17 | ATM Cloud / Aerosol Layer Heights Modules | 11-19 |
| Figure 11-18 | ATM Optical Properties Module | 11-20 |
| Figure 11-19 | L2 QA Statistics / Write ATM Modules | 11-20 |
| Figure 13-1 | Process Flow Diagram: Overall Process | 13-3 |
| Figure 13-2 | Process Flow Diagram: Shell Script | 13-4 |
| Figure 14-1 | Process Flow Diagram | 14-3 |
| Figure 15-1 | Process Flow Diagram | 15-6 |
| Figure 16-1 | Process Flow Diagram | 16-3 |

List of Tables

| | | |
|------------|--|------|
| Table 4-1 | Subsystem, Libraries and Products | 4-3 |
| Table 5-1 | Library Inter-dependencies | 5-1 |
| Table 5-2 | platform_lib Modules | 5-2 |
| Table 5-3 | cntrl_lib Modules..... | 5-2 |
| Table 5-4 | err_lib Modules | 5-3 |
| Table 5-5 | math_lib Modules | 5-4 |
| Table 5-6 | anc_lib Modules..... | 5-5 |
| Table 5-7 | file_lib Modules..... | 5-7 |
| Table 5-8 | time_lib Modules..... | 5-8 |
| Table 5-9 | prod_lib Modules..... | 5-8 |
| Table 5-10 | fexec_lib Modules | 5-9 |
| Table 7-1 | Required Single-Instance Keywords | 7-2 |
| Table 7-2 | Optional Multiple-Instance Keywords..... | 7-2 |
| Table 7-3 | PASSID Control Line Elements | 7-2 |
| Table 7-4 | passid Field Description..... | 7-3 |
| Table 7-5 | File Segment and Version Fields..... | 7-4 |
| Table 7-6 | Invalid Values | 7-6 |
| Table 7-7 | PGE Exit Status Codes | 7-7 |
| Table 7-8 | Error String Format | 7-8 |
| Table 7-9 | Error Sections | 7-8 |
| Table 7-10 | Error Severity Codes | 7-9 |
| Table 7-11 | Product Module Functionality..... | 7-10 |
| Table 8-1 | GLAS_L0proc Inputs | 8-3 |
| Table 8-2 | GLAS_L0proc Outputs | 8-3 |
| Table 8-3 | Supported APIDs..... | 8-4 |
| Table 8-4 | ANC33 Field Descriptions..... | 8-5 |
| Table 8-5 | ANC29 Format/Description..... | 8-7 |
| Table 8-6 | ANC32 Format/Description..... | 8-7 |
| Table 9-1 | GLAS_L1A Inputs..... | 9-2 |
| Table 9-2 | GLAS_L1A Outputs | 9-3 |

| | | |
|------------|-----------------------------------|------|
| Table 10-1 | GLAS_Alt Inputs | 10-2 |
| Table 10-2 | GLAS_Alt Outputs | 10-5 |
| Table 11-1 | GLAS_Atm Inputs | 11-2 |
| Table 11-2 | GLAS_Atm Outputs | 11-3 |
| Table 12-1 | GLAS_Reader Inputs | 12-1 |
| Table 13-1 | met_util Inputs | 13-1 |
| Table 13-2 | met_util Outputs | 13-2 |
| Table 14-1 | createGran_util Inputs | 14-1 |
| Table 14-2 | createGran_util Outputs | 14-2 |
| Table 15-1 | createGran_util Inputs | 15-4 |
| Table 15-2 | createGran_util Outputs | 15-4 |
| Table 16-1 | atm_anc Inputs | 16-1 |
| Table 16-2 | atm_anc Outputs | 16-2 |
| Table 17-1 | GLAS_Meta Inputs | 17-1 |
| Table 17-2 | GLAS_Meta Outputs | 17-2 |
| Table 18-1 | GLAS_Tick Inputs | 18-1 |
| Table 18-2 | GLAS_Tick Outputs | 18-2 |
| Table 19-1 | GLAS_APID Inputs | 19-1 |
| Table 19-2 | GLAS_APID Outputs | 19-2 |
| Table 20-1 | Maker Input Files | 20-2 |
| Table 20-2 | Maker Output Files | 20-2 |
| Table A-1 | Reprocessing Scenarios | A-1 |

Section 1 Introduction

1.1 Identification of Document

This document is identified as the GLAS Science Algorithm Software (GSAS) Detailed Design Document. This is the final release of this document.

1.2 Scope of Document

The GLAS I-SIPS Data Processing System, show in Figure 1-1, provides data processing and mission support for the Geoscience Laser Altimeter System (GLAS). I-SIPS is composed of two major software components - the GLAS Science Algorithm Software (GSAS) and the Scheduling and Data Management System (SDMS). GSAS processes Level-0 satellite data and creates EOS Level 1A/B and 2 data products. SDMS provides for scheduling of processing and the ingest, staging, archiving and cataloging of associated data files. This document describes the detailed design of the GSAS component.

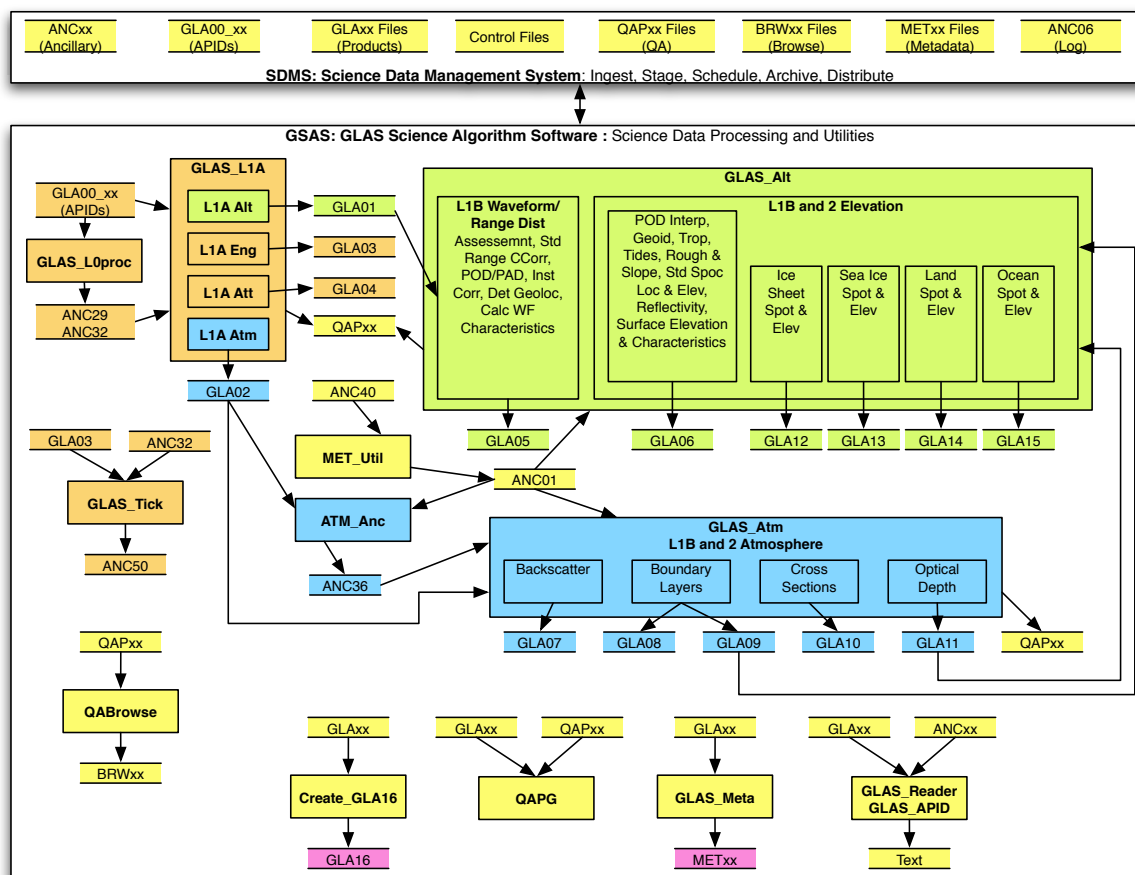


Figure 1-1 I-SIPS Software Top-Level Decomposition

1.3 Purpose and Objectives of Document

This document describes the detailed design of GSAS. It contains descriptions, flow charts, data flow diagrams, and structure charts for each major component of the GSAS.

The purpose of this document is to present the detailed design of the GSAS. It is intended as a reference source which would assist the maintenance programmer in making changes which fix or enhance the documented software.

1.4 Document Organization

This document's outline is assembled in a form similar to those presented in the NASA Software Engineering Program [Information Document 2.3a].

1.5 Document Change History

| Document Name: GLAS Science Algorithm Software Detailed Design Document | | |
|---|---------------|--|
| Version Number | Date | Nature of Change |
| Version 0 | August 1999 | Original Version |
| Version 1 | November 2000 | Revised for V1 software. |
| Version 2 | November 2001 | Revised for V2 software. |
| Version 2.2 | July 2002 | Revised for V2.2 software. |
| Version 3.0 | October 2002 | Revised for V3.0 software. |
| Version 4.0 | August 2004 | Revised for V4.0 software. |
| Version 5.0 | October 2005 | Revised for V5.0 software. |
| Version 6.0 | August 2012 | Revised for V6.0.1 software. Final edition. |

Related Documentation

2.1 Parent Documents

Parent documents are those external, higher-level documents that contribute information to the scope and content of this document. The following GLAS documents are parent to this document.

- a) *GLAS Science Software Management Plan* (GLAS SSMP), NASA/TM-1999-208641/Version 3/Volume 1, August 1998, NASA/GSFC Wallops Flight Facility.
- b) *GLAS Science Data Management Plan* (GLAS SDMP), NASA/TM-1999-208641/Version 4/Volume 2, July 1999, NASA/GSFC Wallops Flight Facility.
- c) *GLAS Science Software Requirements Document* (GLAS SSRD), NASA/TM-2001-208641/Version 2.1/Volume 3, November 2000, NASA/GSFC Wallops Flight Facility.
- d) *GLAS I-SIPS Software Architectural Design Document*, Version 2.0, October 1998, NASA/GSFC Wallops Flight Facility.

2.2 Applicable Documents

Applicable documents include reference documents that are not parent documents. This category includes reference documents that have direct applicability to, or contain policies binding upon, or information directing or dictating the content of this document. The following GLAS, EOS Project, NASA, or other Agency documents are cited as applicable to this document.

- a) *Data Production Software and Science Computing Facility (SCF) Standards and Guidelines*, 423-16-01, January 14, 1994, Goddard Space Flight Center.
- b) *EOS Output Data Products, Processes, and Input Requirements*, Version 3.2, November 1995, Science Processing Support Office.
- c) *NASA Earth Observing System Geoscience Laser Altimeter System GLAS Science Requirements Document*, Version 2.01, October 1997, Center for Space Research, University of Texas at Austin.
- d) *The Algorithm Theoretical Basis Document for Level 1A Processing*, NASA/TM-2012-208641 / Volume 5, June 2012, NASA Goddard Space Flight Center, et al.
- e) *The Algorithm Theoretical Basis Document for the GLAS Atmospheric Data Products*, NASA/TM-2012-208641 / Volume 6, July 2012, NASA Goddard Space Flight Center, et al.
- f) *The Algorithm Theoretical Basis Document for the Derivation of Range and Range Distributions from Laser Pulse Waveform Analysis for Surface Elevations, Roughness, Slope, and Vegetation Heights*, NASA/TM-2012-208641/Volume 7, August 2012, NASA Goddard Space Flight Center, et al.

- g) *The Algorithm Theoretical Basis Document for the Atmospheric Delay Correction to GLAS Laser Altimeter Ranges*, NASA/TM-2012-208641/Volume 8, NASA Goddard Space Flight Center, et al.
- h) *The Algorithm Theoretical Basis Document for Tidal Corrections*, NASA/TM-2012-208641/Volume 9, Scripps Institution for Oceanography, et al.
- i) *The Algorithm Theoretical Basis Document for Precision Orbit Determination*, 2012, University of Texas Center for Space Research, et al.
- j) *The Algorithm Theoretical Basis Document for Precision Attitude Determination*, 2012, University of Texas Center for Space Research, et al.
- k) *The Algorithm Theoretical Basis Document for Laser Footprint Location (Geolocation) and Surface Profiles*, 2012, University of Texas Center for Space Research, et al.
- l) *GLAS Standard Data Products Specification - Level 1*, NASA/TM-2013-208641/Volume 13, NASA Goddard Space Flight Center, et al.
- m) *GLAS Standard Data Products Specification - Level 2*, NASA/TM-2013-208641/Volume 14, NASA Goddard Space Flight Center, et al.
- n) *GLAS Standard Data Products Specification - Data Dictionary*, NASA/TM-2013-208641/Volume 15, NASA Goddard Space Flight Center, et al.
- o) *GSAS User's Guide*, NASA/TM-2013-208641/Volume 17, NASA Goddard Space Flight Center, et al.

2.3 Information Documents

The following documents are provided as sources of information that provide background or supplemental information that may clarify or amplify material presented in this document.

- a) *NASA Software Documentation Standard Software Engineering Program*, NASA-STD-21000-91, July 29, 1991, NASA.
- b) *Science User's Guide and Operations Procedure Handbook for the ECS Project, Volume 4: Software Developer's Guide to Preparation, Delivery, Integration and Test with ECS*, Final 205-CD-002-002, August 1995, Hughes Information Technology Corporation.
- c) *GLAS Science Algorithm Software (GSAS) User's Guide*, NASA/TM-2013-208641/Volume 17, NASA Goddard Space Flight Center.
- d) *GLAS Standard Data Products Specification - Level 1*, NASA/TM-2013-208641/Volume 13, NASA Goddard Space Flight Center.
- e) *GLAS Standard Data Products Specification - Level 2*, NASA/TM-2013-208641/Volume 14, NASA Goddard Space Flight Center.
- f) *GLAS Standard Data Products Specification - Data Dictionary*, NASA/TM-2013-208641/Volume 15, NASA Goddard Space Flight Center.

- g) *Data Production Software, Data Management, and Flight Operations Working Agreement for AIRS, AMSU-A and MHS/AMSU-B*, January 1994, NASA Goddard Space Flight Center,.

Section 3

Design Issues

3.1 Requirements

GSAS was designed with specific and generic requirements in mind. These requirements may be found in the GLAS Software Requirements Document. Several of the more critical requirements are listed here:

- The software will be designed for maximum portability and code-reuse.
- When possible, science algorithm subroutines should be coded in a manner to allow for re-use outside of GSAS. Subroutines, for example, should pass data via arguments and not rely on the presence of global product data structures.
- All Level 1 and Level 2 standard data products will be produced in an integer-binary format
- Input and output products will be delimited by UTC start and stop times.
- Full processing history will be available via metadata.
- Standardized messaging and error-handling using local ancillary files will be available to all subprocesses.
- Changeable parameters will be defined in local ancillary files.
- Implement the capability to fully and partially process and reprocess data with several different scenarios, including:
 - One processing string that starts with GLAS telemetry data (GLA00) as input to create all output L1A products (GLA01-03).
 - One processing string that starts with GPS-specific GLAS telemetry data (GLA00_xx) as input to create all output L1A GPS product (GLA04_GPS).
 - One processing string that starts with L1A altimetry data (GLA01) as input to create an output waveform product (GLA05).
 - One processing string that starts with a waveform product (GLA05) and two atmosphere products (GLA09 and GLA11) as input to create output elevation products (GLA06, 12,13,14,15).
 - One processing string that starts with L1A atmosphere (GLA02) input and produces output atmosphere products (GLA07,08,09,10,11).
 - One processing string that starts with a waveform product (GLA05) as input to produce an output elevation product (GLA06).

3.2 Single vs. Multiple Executables

In the early designs of GSAS, the team incorporated a single-executable strategy. This approach changed in V2 to focus on multiple PGEs (Product Generation Executables). A PGE

is an executable program which performs a specific function. The ‘core’ PGEs perform specific portions of the GLAS data processing and generate deliverable GLAS Data Products (Products). The core PGEs are accompanied by a set of utility PGEs which perform such functions as creating ancillary data files, performing quality assurance and generating browse products.

3.3 Software Reuse

The team recognized that there would be several task-specific PGEs which interface with data created by the I-SIPS data processing system. In order to effect the reuse of this software, the GLAS Team implemented major components and subsystems as shared libraries. These libraries are generic such that they may be used by several different GSAS components without modification. It is intended that associated utility software will be written to use these libraries in order to maximize code-reuse and ease coding and maintenance tasks.

3.4 I/O and Unit Conversion

The software reuse approach was especially important in the design of the GLAS Product input/output routines. The I/O routines were designed in a modular fashion to make them available for use in software outside of the core PGEs. All input/output statements are implemented in product-specific subroutines. All data transformations (scaling from integer to floating point and vice versa) are implemented in product-specific routines. This insures consistency in the conversion process methodology and forces a great deal of granularity in the design. Additionally, care was taken to minimize the number of support routines required by the I/O conversion processes in order to maximize the potential for software reuse.

3.5 Reprocessing and Pass-Thrus

Reprocessing and partial-processing requirements dictated great care in the design of GSAS. In addition to executing all science algorithms consecutively, it is required that GSAS be able to run selected science algorithms with varying input data types. Processing with a selected set of science algorithms and products is defined as a specific processing “scenario”. The software not only must be able to execute selected science algorithms, it is required to rewrite selected products, partially replacing selected data. An example of this is replacing the orbit on the primary elevation product (GLA06).

In order to accommodate the reprocessing requirement, the GSAS processing software is designed to use “pass-thru” data management. The “pass-thru” concept dictates that common data are passed from lower-numbered products to higher-numbered products on input. In the design, the products can be input, output or both. Science algorithms are required to use input data from the highest-numbered product possible and pass computed data to requisite higher-numbered products.

3.6 Data Buffering

Data buffering is a fairly complex process. GSAS is required to process data one second at a time without buffering, except in two cases: the Atmosphere subsystem and the L1A L_Att processing.

The Atmosphere subsystem ATBD has required that data be buffered to twenty seconds. This buffering has been designed into the Atmosphere subsystem, such that other portions of the software are not impacted by the added complexity. However, during the implementation it was decided to minimize the buffering complexity by adopting a constraint such that GLA08-11 will not be processed independently of one another. This constraint somewhat limits the granularity of re-processing, but was approved by the GLAS Change Control Board as an acceptable trade-off. The buffering concept is fully documented in the Atmosphere section.

L_Att processing is complicated by the issue of time delays aboard the spacecraft. All data for one second of APID 1984 (PRAP) are not contained within a single one second packet. In order to precisely time-align the relevant data, the L1A subsystem uses a 6-record double-buffered algorithm to match the relevant LRS and IST data to the APID19 shot times. Given the potential for missing data, some valid PRAP data may be lost if its corresponding APID19 data are missing.

Section 4

Design Overview

4.1 GSAS Design Overview

The GSAS processing system is designed to be both efficient and flexible. The system is designed for operational flexibility, considering data availability constraints and reprocessing requirements. In order to meet these requirements, the design of the software consists of up to four functional layers which work together to perform the data processing function. See Figure 4-1. From the bottom up, the first layer is a set of generic library routines which form the foundation of the software. The second layer is comprised of the science algorithm subsystem libraries, which perform the actual transformation from raw data into GLAS products. The third layer is the subsystem managers, which control the execution of the science algorithms. The fourth and final layer is made of four core PGEs, executable “shells” which surround the subsystem managers and provide standardized I/O, error handling, and initialization.

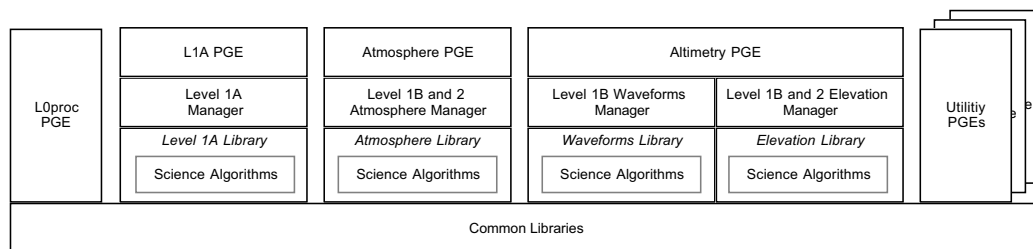


Figure 4-1 GSAS Layers

Success of this design, coding standards, and implementation was proven when this code was ported from a big-endian HP/UX to little-endian Linux environment without significant rework.

4.2 PGEs

The GSAS PGEs are:

- GLAS_L0proc, which processes GLAS L0 data;
- GLAS_L1A, which executes the Level 1A (L1A) subsystem;
- GLAS_Alt, which executes the Waveforms (WF) and Elevation (Elev) subsystems;
- GLAS_Atm, which executes the Atmosphere (Atm) subsystems;
- GLAS_Meta, which produces inventory metadata files;
- and Other PGEs which perform utility functions.

The first four PGEs are “core” PGEs. Figure 4-2 is a very simplified data flow diagram which shows the relationship between GSAS PGEs and GLAS data products. Many ancillary files

and utilities are required for GSAS processing. These have been omitted in order to show an overview of GSAS. Create_GLA16 was a HDF product creator which was designed and

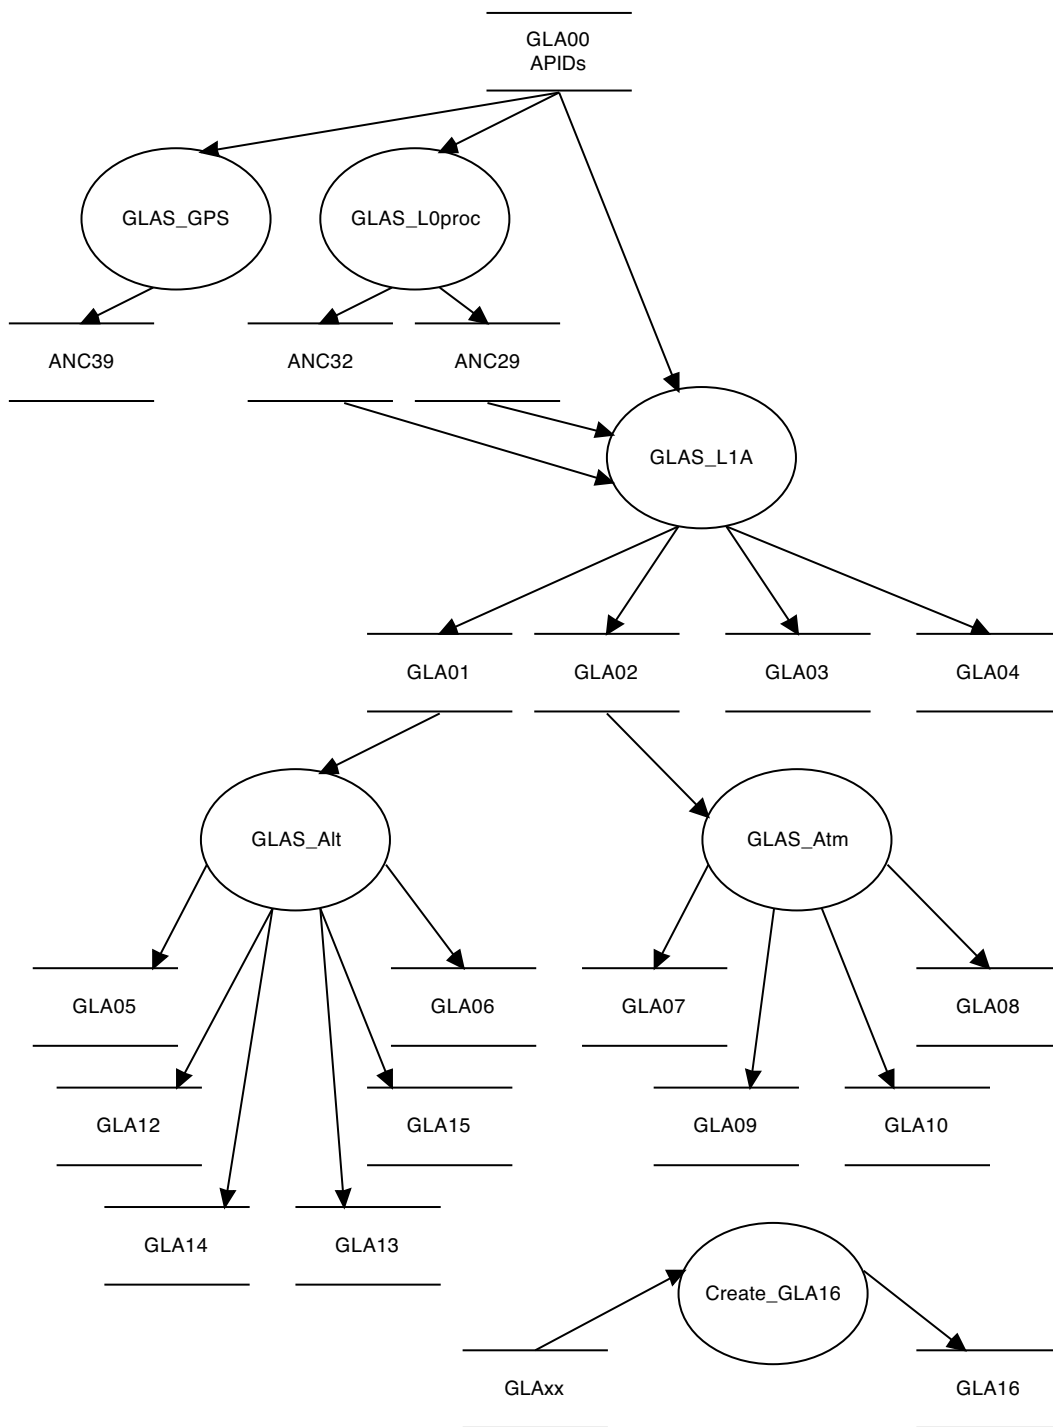


Figure 4-2 Simplified GSAS Data Flow Diagram

tested, but no never approved for production.

4.3 Files

Throughout this document, files are referenced as one of two types: GLA or ANC. GLA files are, for the most part, fixed-length, integer-binary format Product files containing Level 0-2 GLAS science data. GLA files are both input for and output to GSAS PGEs. ANC files are requisite multi-format ancillary files. Some are supplied by the science team; others are received from external data providers. The prime difference between GLA and ANC files are that GLA files are deliverable data products, whereas ANC files are not. These files are detailed in the GLAS Data Management Plan and GLAS Data Product Users Guide.

4.4 Science Algorithms

GSAS science algorithms are published in the Algorithm Theoretical Basis Documents (ATBD) provided by the GLAS Science Team. The resulting code is grouped into four ATBD subsystems separated by scientific discipline. These subsystems, science data products, and the science algorithm libraries are listed in Table 4-1.

Table 4-1 Subsystem, Libraries and Products

| Subsystem | Library | Output Products |
|-----------------------|----------|-----------------|
| L1A Processing | l1a_lib | GLA01-04 |
| Waveform Processing | wf_lib | GLA05 |
| Atmosphere Processing | atm_lib | GLA07-11 |
| Elevation Processing | elev_lib | GLA06,12-15 |

The subsystems are designed such that data required by each subsystem is available from a product (data file) written by a preceding subsystem. As a result there is very little data dependence between the subsystems.

Associated with each ATBD subsystem is a corresponding Subsystem Manager. These Managers use control input to determine what processes to execute within the subsystem and what data to write.

4.5 Utilities

In addition to the core PGEs, there are several utility PGEs which perform various data transformations and computations. These utilities use the same core library routines as the core PGEs. There are two main types of utilities:

- Utilities executed infrequently – based on static or near-static input. Examples are:
 - Reference orbit groundtrack file creation
 - Create DEM file
 - Ingest and reformat geoid file

- Create regional masks data set
- Create global and regional load tide grids
- Assist in verifying product content
- Assist in processing spacecraft test data
- Utilities executed routinely as part of daily production processing. Examples are:
 - Calculate granule start times and ascending node times
 - Create level 0 index files
 - Subset Meteorological data files
 - Create Browse products
 - Validate ANC32 GPS files
 - Verify QA products

Section 5

Foundation Libraries

The base level of GSAS software is packaged as a collection of core library routines. These libraries are coded in a generic manner such that all GSAS software can make use of the functionality. This design maximizes code reuse and all inherent advantages.

Library code is implemented in separate directories and grouped by functional area. A single makefile in each library directory will compile the code into a dynamically-linked shared library. A “master” makefile will compile all the libraries and create the final binaries in one step. See the GSAS User Guide for details on file layout and compilation specifics.

A hierarchy of dependencies exist between the libraries. The order in which libraries are compiled is important since libraries may depend upon other libraries for support routines. This is not relevant if the developer uses the supplied cascading makefile, but the developer should be aware that these dependencies exist. The dependency structure is illustrated in Table 5-1.

Table 5-1 Library Inter-dependencies

| To build... | The following libraries are required... |
|--------------|---|
| platform_lib | <none> |
| time_lib | platform_lib |
| cntrl_lib | platform_lib |
| err_lib | platform_lib, |
| math_lib | platform_lib |
| anc_lib | platform_lib, cntrl_lib, err_lib, math_lib |
| prod_lib | platform_lib, cntrl_lib, err_lib |
| file_lib | platform_lib, cntrl_lib |
| geo_lib | platform_lib, cntrl_lib, err_lib, math_lib, anc_lib |
| exec_lib | platform_lib, cntrl_lib, err_lib, math_lib, anc_lib |

5.1 The Platform Library (platform_lib)

platform_lib is the most basic library in the foundation libraries. Nearly all GSAS code uses routines from the platform library. The purpose is to provide consistent datatypes across all

GSAS software, to provide a place for storing constants, and to provide compiler-dependent F90 routines. Modules included in the `platform_lib` are described in Table 5-2.

Table 5-2 platform_lib Modules

| Module | Description |
|--------------------------------|---|
| <code>c_compare_mod</code> | Generic functions write differences (if any) between arguments. |
| <code>const_atm_mod</code> | Defines atmosphere-related constants. These constants are initialized as parameters or have values read from an ancillary file. |
| <code>const_elev_mod</code> | Defines elevation-related constants. These constants are initialized as parameters or have values read from an ancillary file. |
| <code>const_glob_mod</code> | Defines common global constants. These constants are initialized as parameters or have values read from an ancillary file. |
| <code>const_l1a_mod</code> | Defines L1A-related constants. These constants are initialized as parameters or have values read from an ancillary file. |
| <code>const_util_mod</code> | Arguments for utility programs |
| <code>const_wf_mod</code> | Defines waveform-related constants. These constants are initialized as parameters or have values read from an ancillary file. |
| <code>kinds_mod</code> | Defines the basic GLAS datatypes, for example 2 byte integers, 4 byte integers, 4 byte reals, and 8 byte reals. |
| <code>lnbInk</code> | Returns position of the last non-blank character in a string. Provided for those F90 implementation which do not support this function. |
| <code>types_mod</code> | Defines common complex GLAS datatypes, including structures. (deprecated) |
| <code>vers_platform_mod</code> | Version information for the library. |

5.2 The Control Library (`cntrl_lib`)

`cntrl_lib` provides control-related functions to GSAS software. Components include routines for parsing “keyword=value” formatted files, string functions, user-interface functions, and a common file control datatype. Modules included in the `cntrl_lib` are described in Table 5-3.

Table 5-3 cntrl_lib Modules

| Module | Description |
|-------------------------------|--|
| <code>centertext_mod</code> | Centers a text string within an 80 character padded string. |
| <code>compare_kval_mod</code> | Compares keyvalues against label. Strings are converted to uppercase before a comparison is performed. This ensures that keyvalues are not case-sensitive. |
| <code>doubleline_mod</code> | Prints an 80 character double line to the supplied IO unit. |
| <code>fStruct_mod</code> | Defines a generic GLAS file info structure. Also contains routines to initialize and print a file info structure. |

Table 5-3 cntrl_lib Modules (Continued)

| Module | Description |
|------------------|--|
| find_keyword_mod | Searches for the provided keyword within a set of provided values. |
| getans | Reads a character of input, and validates that input from a list of acceptable values. |
| gsas_toupper | Replacement subroutine for “toupper” which conflicted with an HDF-EOS routine of the same name. Converts alpha characters to upper case. |
| keyval_mod | Defines a keyword=value datatype. |
| multimenu_mod | Returns a set of logicals based on user menu selection |
| parse_keyval_mod | Parses keyword and value components from argument string. |
| read_line_mod | Reads a line of input, skipping comments (#). |
| singleline_mod | Prints an 80 character single line |
| strcompress | Compresses multiple spaces to a single space within a string |
| strtrim | Trims white space from around a text string |
| tolower | Converts alpha characters to lower case |
| writebanner_mod | Prints banner at start of processing |
| vers_cntrl_mod | Version information for the library. |
| writebanner_mod | Prints banner at start of processing |

5.3 The Error Library (err_lib)

err_lib provides status and error-related functions to GSAS software. err_lib is designed to read messages from an ancillary file. Errors and status messages (henceforth referred as errors) are reported to an output ancillary file (if available) and to standard output (stdout). Errors have negative numeric designations; status messages have positive designations. Errors are designed to be configurable as to the severity of the error and frequency of printout.

Modules included in the err_lib are described in Table 5-4.

Table 5-4 err_lib Modules

| Module | Description |
|---------------|---|
| ANC06_mod | Writes an error message to the ANC06 unit in a standard format. In order to avoid cyclic dependencies, ANC06_mod will not use GLAS Error_mod upon encountering an error (since GLAS Error WILL use ANC06_mod). A result code will be returned, but the caller must act upon it, if necessary. |
| ErrDefs_mod | Defines the GSAS error data structure. |
| ErrorBoot_mod | Initializes the error to generic values before the ancillary error file is read. |

Table 5-4 err_lib Modules (Continued)

| Module | Description |
|----------------|---|
| ErrorInit_mod | Perform initializations for the Error and Status function by extracting the error variables from argument error strings. This routine does dynamic array allocation so that the number of errors is not fixed. A routine is also provided to print the parsed errors. |
| GLAS_Error_mod | Receives an error number as an argument, looks up the error, writes the error to ANC06 and stdout, and returns a severity code to the calling process. |
| WriteError_mod | Formats an error and writes to ANC06 and stdout. |
| compare_err | Error comparison routine for qsort. |
| vers_err_mod | Version information for the library. |

5.4 The Math Library (math_lib)

math_lib provides standard math routines to GSAS software. Components include bilinear interpolation and matrix multiplication. Modules included in the cntrl_lib are described in Table 5-5.

Table 5-5 math_lib Modules

| Module | Description |
|-------------------------|---|
| c_bilin_interp_mod | Calculates the value of properties at a point by doing a bilinear interpolation of the 4 points straddling it. |
| c_linear_smooth_mod | Implements a smoothing function over a linear array |
| c_matmul_mod | Returns the product of two matrices. |
| c_matrix_smooth_mod | Implements a smoothing function over an n x m matrix array |
| c_minmaxmean_mod | Provides routines to compute statistics for the given parameter. |
| c_quadratic_mod | Solves a quadratic equation up to rank of 4. |
| conversions_mod | Provides routines to convert between and swap different datatypes. |
| onepass_avg_mod | One-pass algorithm for accumulating data needed to compute the standard deviation without the problems that can be caused by roundoff errors when using the simpler though numerically equivalent equation. |
| polar_stereographic_mod | Polar-stereographic coordinate transform module. |
| w_add2hst_mod | Computes histogram bin index. |
| vers_math_mod | Version information for the library. |
| w_add2hst_mod | Computes histogram bin index. |

5.5 The Ancillary Library (anc_lib)

anc_lib provides routines to read and parse GLAS ancillary files. GSAS ancillary files are of various formats. Some ancillary files contain relatively static data while others contain dynamic data.

Modules included in the anc_lib are described in Table 5-6.

Table 5-6 anc_lib Modules

| Module | Description |
|-------------------|--|
| anc01_met_mod | Reads meteorological (met) header data into a global data structure. Structures exist for two met header files. Also verifies the existence of associated met data files and provides a routine to write the met header information to stdout. |
| anc04_quat_mod | Definitions for ANC04 Quarternions Matrix. |
| anc07_mod | Parses an ANC07 file and calls specific routines to read each parsed section. |
| anc07_atm_mod | Reads and parses atmosphere-related constants from a constants ancillary file. |
| anc07_glob_mod | Reads and parses global constants from a constants ancillary file. |
| anc07_elev_mod | Reads and parses elevation-related constants from a constants ancillary file. |
| anc07_err_mod | Reads and parses error constants from a constants ancillary file. |
| anc07_glob_mod | Reads and parses global constants from a constants ancillary file. |
| anc07_l1a_mod | Reads and parses L1A-related constants from a constants ancillary file. |
| anc07_stat_mod | Reads and parses status constants from a constants ancillary file. |
| anc07_wf_mod | Reads and parses waveform-related constants from a constants ancillary file. |
| anc08_pod_mod | Contains Precision/Predict Orbit Determination (POD) record length and a flag to determine if POD is of predicted or precision quality. |
| anc09_pad_mod | Contains Precision Attitude Determination (PAD) record length, public data structure, availability flag, and routines to initialize and read PAD records. |
| anc12_dem_mod | Contains Digital Elevation Model (DEM) record lengths, unit number, public LandMask, and routines to read, calculate and print the DEM values. |
| anc13_geoid_mod | Contains the Geoid record length, public grid and routines to initialize and read the geoid. |
| anc16_ltide_mod | Contains the record length and unit of the load tide ancillary file. |
| anc17_otide_mod | Contains the record length and unit of the ocean tide ancillary file. |
| anc18_stdattm_mod | Reads and stores the standard atmosphere ancillary file. |

Table 5-6 anc_lib Modules (Continued)

| Module | Description |
|----------------------|--|
| anc22_track_mod | Read and store anc22 type NOSE information |
| anc23_nose_mod | Read and store anc23 type NOSE information |
| anc25_gpsutc_mod | Reads and parses the GPS/UTC time conversion file. |
| anc27_surftype_mod | Reads and stores the surface type file. |
| anc29_index_mod | Reads, writes, and stores the GLAS_L0proc index file. |
| anc30_aer_mod | Reads and stores the global aerosol map ancillary file. |
| anc31_trop_mod | Reads and store the global aerosol trop map ancillary file. |
| anc32_gps_mod | Reads, writes and stores the GLAS_L0proc GPS correlation file. |
| anc33_utc_mod | Reads the UTC time conversion file. |
| anc35_ozone_mod | Reads and stores the ozone file. |
| anc36_atm_mod | Reads the atmosphere calibration file. |
| anc38_msf_mod | Reads the atmosphere multiple scattering factor file. |
| anc41_ephim_mod | Contains definitions for JPL ephemeris file. |
| anc45_meta_mod | Contains definitions and routines for ANC45 product metadata templates. |
| anc46_meta_mod | Contains definitions and routines for ANC46 anc metadata templates. |
| anc47_pds_mod | Contains definitions and routines for PDS/EDS construction record. |
| anc51_srtm_mod | Equivalent to SRTM tracker_reader module, which provides access software for SRTM track files. |
| anc52_corr_mod | Reads and stores load range correction tables. |
| anc53_aerosol_mod | Reads and stores the aerosol data. |
| anc54_dem_mod | Reads and stores hi-rest ICESat DEM file. |
| anc55_mss_mod | Reads and stores mean sea surface file. |
| anc56_pt_mod | Reads and stores the Pole Tide file. |
| anc57_bathymetry_mod | Reads and stores the bathymetry file. |
| anc58_gtrk_mod | Reads and stores the reference groundtrack files. |
| anc59_ptg_mod | Reads and stores the pointing table. |
| anc_hdr_mod | Reads and writes the limited header portion of selected ancillary files. |
| c_calcsatCorr_mod | Calculates saturation corrections and sets the correction flag. |
| inst_state_mod | Contains routines for instrument state change detection. |

Table 5-6 anc_lib Modules (Continued)

| Module | Description |
|--------------|--|
| anc_hdr_mod | Reads and writes the limited header portion of selected ancillary files. |
| vers_anc_mod | Version information for the library. |

5.6 The File Library (file_lib)

file_lib provides standard routines to open and close GSAS files using the passed file info structures. Modules included in the file_lib are described in Table 5-7.

Table 5-7 file_lib Modules

| Module | Description |
|------------------|--|
| cksum.c | Calculates POSIX checksum (C) |
| CloseFile_mod | Closes a file. |
| OpenFInFile_mod | Opens an input file. |
| OpenFOutFile_mod | Opens an output file. |
| parse_fname_mod | Parses the standard GSAS file naming convention. |
| vers_file_mod | Version information for the library. |

5.7 The Time Library (time_lib)

time_lib is the only significant portion of GSAS source code implemented in C. It is an implementation of a GSFC time library and used by GSAS with little to no modification. time_lib provides routines for converting to/from various time formats. Modules included in the time_lib are described in Table 5-8.

Table 5-8 time_lib Modules

| Module | Description |
|-------------------|---|
| dateinterface | Has routines for the following functions: -add two arrays holding times into a third array -add a yymmdd and a day -add a yyyyymmdd and a day -find the difference between two yymmdd's in days and seconds -find the difference between two yyyyymmdd's in days and seconds -convert between yyyyymmdd, hms, mjd, fday, and mjdsec -convert yymdd fday to J2000 days and fday -convert J2000 days and fday to yymdd fday -convert yymmdd or yyyyymmdd to yyyyymmdd -convert yyyyymmdd to yymmdd -convert mjd to yymmdd -convert mjd to yyyyymmdd -convert yymmdd to mjd -convert yyyyymmdd to mjd -convert hhmmss to fday -convert fday to hhmmss -convert fday to hm with decimal seconds -convert yyyyymmdd to ddd -convert yyyyymmdd to yyyyddd -convert yyyyddd to yymmdd -convert mjd to mjdsec -convert mjdsec to mjd -convert mjdsec to sec -check if yyyy is a leap year |
| j2000to19char_mod | Converts between J2000 seconds and 19 character ASCII representations. |
| vers_time_mod | Version information for the library. |

5.8 The Product Library (prod_lib)

prod_lib provides routines to read, write, and convert GLAS products. The routines (and concepts) are fully described in the Common Functionality section. Modules included in the prod_lib are described in Table 5-9 (where xx = a GLAS product number [01-15]).

Table 5-9 prod_lib Modules

| Module | Description |
|---------------|--|
| GLA00_mod | Contains routines for reading GLA00 APIDs. |
| GLAxx_mod | Contains routines for reading and writing GLAxx product data structures. |
| GLAxx_alg_mod | Contains public data structures for GLAxx algorithmdata and routines to initialize and print the data structure. |

Table 5-9 prod_lib Modules (Continued)

| Module | Description |
|------------------|--|
| GLAxx_prod_mod | Contains public data structures for GLAxx product data and routines to initialize print the data structure. |
| GLAxx_scal_mod | Contains public data structures for GLAxx scale data and routines to initialize and print the data structure. Also contains routines to convert from product units to algorithm units and the reverse. |
| GLAxx_Pass_mod | Passes common data from a lower-numbered product/algorithm data structure to higher-numbered product/algorithm data structures. |
| GLAxx_print_mod | Prints product data structures in integer/floating point format (as opposed to hexadecimal). |
| GLAxx_flags_mod | Contains routines for packing and unpacking GLAxx flags. |
| common_flags_mod | Contains routines for packing and unpacking common flags. |
| common_hdr_mod | Contains routines to read and write common elements of the product headers. |
| get_numhdrs_mod | Searches through product headers to find number of headers. |
| prod_def_mod | Contains record sizes for all GLAxx products. |
| qap_version_mod | Write qap version to qap file |
| vers_prod_mod | Version information for the library. |

5.9 The Exec Library (exec_lib)

exec_lib contains high-level routines which are common to each of the GSAS PGEs. Much of the code which was in the original single executable has been modified and moved into this library. Modules included in the exec_lib are described in Table 5-10.

Table 5-10 fexec_lib Modules

| Module | Description |
|-----------------|--|
| C_CalcNrg_mod | Calculate the energy of the received and transmitted pulses. Here because it is shared between two subsystems. |
| CheckOutput_mod | Loops through the file type structures to determine if any more output is requested. |
| CloseFiles_mod | Closed any opened files, based on file control structure. |
| CntlDefs_mod | Initializes common control definitions. |
| MainInit_mod | Performs common initialization functions. |
| MainWrap_mod | Performs common wrap-up functions. |
| OpenFiles_mod | Opens requested files, based on file control structure. |
| ReadAnc_mod | Reads ancillary files, based on file control structure. |

Table 5-10 fexec_lib Modules (Continued)

| Module | Description |
|--------------------------|---|
| ReadData_mod | Reads data from opened files in a time-synchronous fashion. |
| StdCntl_mod | Parses common control instructions from a Control files. |
| Write_AncVer_mod. | Writes ancillary file version info to ANC06. |
| Write_LibVer_mod | Writes library version info to ANC06. |
| C_Retreive_HiRes_DEM_mod | Retrieves surface elevation from high resolution DEM data source |
| c_nose_mod | Contains routines to assigning data to NOSE rectangles. |
| check_out_time_mod | Utility function for verifying continuity of time on output data products. |
| check_recndx_mod | Utility function for comparing start/stop times of granules. |
| com_hdr_update | Updates the header data structures for product files. |
| fCntl_mod | Defines file control structures. |
| get_fileindex_mod | Utility function for determining file type from filename. |
| get_secstart_mod | Finds start of control file section. |
| parse_filecntl_mod | Parses file information from control file. |
| passid_mod | Holds passid information parsed from the control file. |
| pastendofperiod_mod | Utility routine to determine if current time is past the end of the period. |
| set_inst_state_mod | Sets the Instrument State flag. |
| vers_exec_mod | Version information for the library. |

Section 6

GSAS Core PGEs

6.1 Function

GSAS core PGEs reside at the uppermost level of the GSAS data processing software. These executables are responsible for controlling the data processing. They perform initializations, set constants, read ancillary data, handle data input and output, and provide a global error facility. All GSAS core PGEs are structured the same, since they are basically instantiations of a reference PGE model. As such, this section will document that reference design rather than each individual PGE. Changes from this reference design will be documented in the section for each specific PGE.

6.2 Requirements

Most requirements are PGE-specific and defined in the appropriate PGE section. There are several high-level requirements which the core PGE approach satisfies.

- A control file will be used to control processing and specify input and output files.
- Files will be opened and closed within the PGE and its associated managers. Processing routines will not open or close files.
- Common values will be used to designate missing or invalid data on GLAS products.
- A common error/status facility will be used.
- All error/status messages will be logged and written to a log file (ANC06).
- Version information will be logged.
- Summary statistics such as number of records read/written and the number occurrences of each type of status/error will be computed and logged.
- Reference data subject to change will be stored and retrieved from change-controlled ancillary files (ANC07).

6.3 Approach

- The system start and stop will be controlled by each respective executable at the uppermost level.
- Processing will be performed one record at a time, though individual subsystems may buffer multiple records before processing. Multiple input products will be time-synchronized. (GLAS_L0proc is an exception to this.)
- Control flags will determine which subsystem or subsystem process will be executed.
- Input and output data will be delimited by start and stop times.
- The system will provide for partial processing and reprocessing scenarios.

- In order to maximize code reuse and ease-of-use, PGEs will be designed to use standard facilities provided by the GSAS libraries.

6.4 Design

Figure 6-1 shows the top-level structure chart of a generic GSAS core PGE. The basic algorithm for a GSAS PGE is:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read static ancillary files (ReadAnc)
- Write version info (Write_LibVer, Write_AncVer)
- Until all specified data are processed...
 - Read Data (ReadData)
 - Process Data (Manager)
 - Write Data (Manager)
- Close all files and generate summaries (MainWrap)

The main routine for a GSAS PGE is local to the PGE - in other words, the source code is located within the PGE subdirectory, not within a library. The main PGE routine will perform other functions besides calling the appropriate subroutines. Code within the main routine will

- Initialize flags indicating start and end of processing
- Write its version number
- Write any associated subsystem version info
- Set a status code indicating success or failure on program termination

Additionally, in the case of a PGE with no Manager, subroutine calls to processing code and actual data transformations may be located within the main routine.

Although not shown on the structure charts, nearly every GSAS routine calls `glas_error`, the standard error facility, to report error and status messages.

Subsequent sections will identify and explain the functionality of each of the structure chart elements.

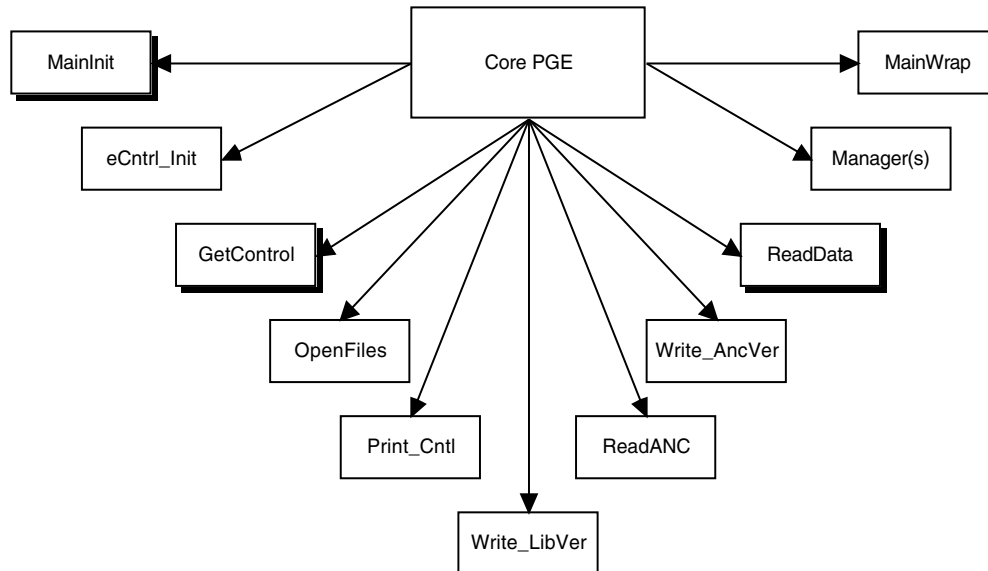
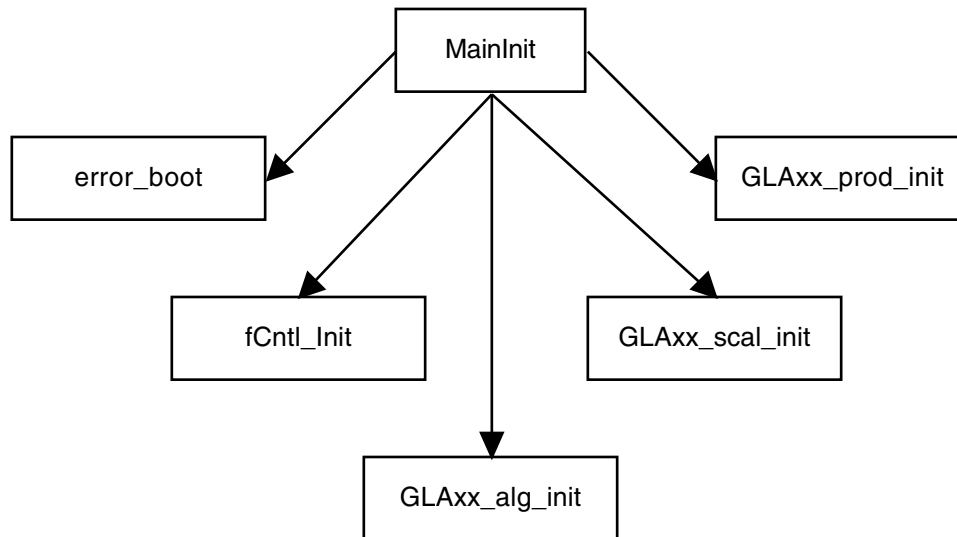


Figure 6-1 Top-Level Structure Chart

6.4.1 MainInit

MainInit is an element of the `exec_lib`. The MainInit structure chart is show in Figure 6-2. MainInit performs the following functions:

- Initializes the ANC06 output channel to stdout in order to display initialization error messages to the console.
- Initializes the default error subsystem. (`error_boot`)
- Initializes the standard file control structures. (`fCntl_Init`)
- Initializes Product scaling values. (`GLAxx_scal_init`)
- Initializes Algorithm data structures to default values. (`GLAxx_alg_init`)
- Initializes Product data structures to default values. (`GLAxx_prod_init`).

**Figure 6-2 MainInit**

6.4.1.1 Error_Boot

The `error_boot` routine is part of the `error_lib`. It initializes the `glas_error` facility with a “bootstrap” set of error codes in order to facilitate error handling during the initialization and file-opening phases of execution. These “bootstrap” errors will be overwritten once the ANC07 error file is read later in execution.

6.4.1.2 fCntl_Init

`fCntl_Init` is within the `fCntl_mod` entry of the `exec_lib`. `fCntl_mod` contains both file-related parameters and subroutines. These parameters include:

- Maximum number of file types
- Maximum number of files per type
- Numeric indices for each filetype
- ASCII representation for each filetype
- Control file name
- An structure of arrays containing information regarding each file used in processing.

`fCntl_Init` initializes the file information structures with information regarding direct/formatted access, record lengths, multi-granule flags, granule index, and current record number.

This module is very important to a maintenance programmer if he should need to add a new file type to the GSAS software. Be aware, that the order of the definitions within `fCntl` is crit-

ical. Changes in one internal data structure should be mirrored by like changes within the other associated data structures. Also be aware that grouping of the file types is important. New products should be added within the product subsection (GLA01-GLA16). Likewise, new APIDs should be added within the APID subsection (APID12-APID1984).

6.4.1.3 GLAxx_scal_init, GLAxx_prod_init, GLAxx_alg_init

These routines are elements of the prod_lib. There exist a set of these routines for each GLAS product. The scal_init routines initializes a product-specific data structure to scale values which are used when converting between product and algorithm units. The prod_init and alg_init routines initializes the respective product and algorithm data structures to initial and/or invalid values.

6.4.2 eCntl_Init

eCntl_Init is a routine within eCntl_mod, which is local to each PGE. eCntl_mod contains the local execution flags which the Manager uses to control process flow. eCntl_Init initializes these flags. These flags are later set by GetControl based on values within the control file.

6.4.3 GetControl

GetControl is a routine local to each specific PGE. This routine reads and parses the control file. It's structure chart is in Figure 6-3. GetControl performs the following functions:

- Initializes standard control structures (init_StdCntl)
- Opens the control file. (OpenCF)
- Reads the control file until it finds the specified section header.
- Reads the section contents, parsing local and standard (parse_StdCntl) control file entries.
- Sets control flags based on control file entries.
- Closes the control file at the end of the section.
- Performs sanity-checking.

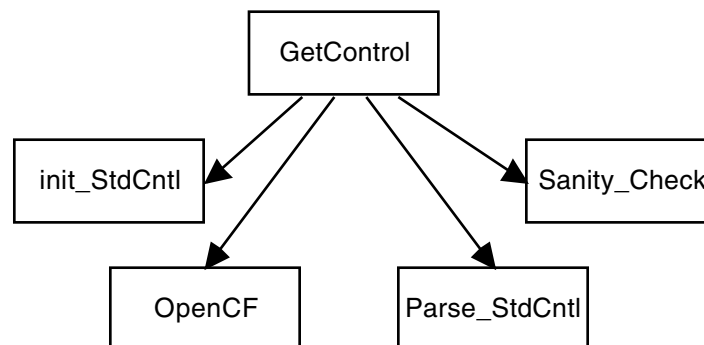


Figure 6-3 GetControl

Of particular importance in the routine is the fact that it parses control entries which are specific to each individual PGE. Execution and option flags are defined in a local eCntl module. GetControl sets these flags based on parsed control values. If a maintenance programmer needs to add another control flag to a PGE, he must make changes in both eCntl_mod and GetControl.

6.4.3.1 Init_StdCntl

Init_StdCntl is a subroutine within the StdCntl_mod of the exec_lib. It initializes the text representation of standard (i.e.: common to all PGEs) control file elements.

6.4.3.2 OpenCF

OpenCF is a subroutine within the StdCntl_mod of the exec_lib. It uses a system call to get the value of the control file argument. Platform-specific defines are used here to set the correct position of the argument within the argument list. After getting the name of the control file, OpenCF opens the specified file and scans the file for the start of the specified section. If the control file cannot be opened, a fatal error is returned to the calling process.

6.4.3.3 Parse_StdCntl

Parse_StdCntl is a subroutine within the StdCntl_mod of the exec_lib. It takes control file entries common to all PGEs and parses them, filling the appropriate data structure. In the case of INPUT_FILE and OUTPUT_FILE controls, the routine will attempt to decode the filetype from the filename and fill the appropriate file control structure.

6.4.3.4 Sanity_Check

Sanity_Check is a subroutine within the local GetControl module. It will examine the parsed execution flags and file control structures in order to determine if the control file specifications are valid for the specific PGE. Each PGE has a set of pre-determined rules which dictate what combination of flags and files are appropriate for the defined execution scenarios. Errors will be generated if Sanity_Check finds a problem with the control file configuration.

6.4.4 OpenFiles

OpenFiles is an element of the exec_lib. It opens the first granule of each filetype specified in the control file. The files are opened as direct or formatted based on information in the file control structure. Normally, OpenFiles assigns a unit to each file it opens and reassigns that same unit to each subsequent granule of that particular filetype. However, in the case of multi-file granules (indicated by a flag in the file control structure), OpenFiles will assign unique units to each file of the first granule and open all files of the first granule. Those files which are not opened are checked for existence and readability.

6.4.5 PrintCntl

PrintCntl is a subroutine of the StdCntl module within the exec_lib. It writes the control file contents to the ANC06 log file.

6.4.6 Write_LibVer

Write_LibVer is an element of the exec_lib. It writes foundation library version information to the ANC06 log file.

6.4.7 ReadAnc

ReadAnc is an element of the `exec_lib`. It calls subroutines within the `anc_lib` to read all requested static ancillary files. The contents of these files are kept in core memory, and, by definition, only read once per execution.

Some special cases exist within ReadAnc:

- If available, the first two ANC01 header files are read via ReadAnc, but subsequent ANC01 header files are read in a time-synchronized fashion within ReadData. Subsystem-specific MET routines read the actual MET science data.
- Precision Orbit Determination files (ANC08) are not read, but the number of POD files available are counted and this count is stored in a global variable within `anc08_pod_mod` for later use. A POD data structure is initialized based on the number of files available.
- Precision Attitude files (ANC09) are via a special routine which converts the provided GPS time to UTC time. A flag is set which can be used to determine if valid PAD data exist.
- ANC29 and ANC32 files are read into memory and sorted to account for potential PDS boundary problems. The ANC29.32 design is documented in more detail in the GLAS_L0proc and GLAS_L1A sections.


6.4.8 Write_AncVer

Write_AncVer is an element of the `exec_lib`. It writes any version information regarding ancillary files which were read to the ANC06 log file.

6.4.9 ReadData

ReadData is an element of the `exec_lib`. It calls subroutines to read one second of requested dynamic ancillary and product data in a time-synchronized fashion. It also seamlessly handles end-of-granule conditions and sets file-specific data availability flags in the appropriate file control structure. Figure 6-4 shows the structure chart for ReadData.

Data are read in a logical order which allows lower-numbered products to pass values forward to data structures of higher-level products. See Section 6.5 for more information regarding the “pass-thru” concept and product/algorithm data conversion.

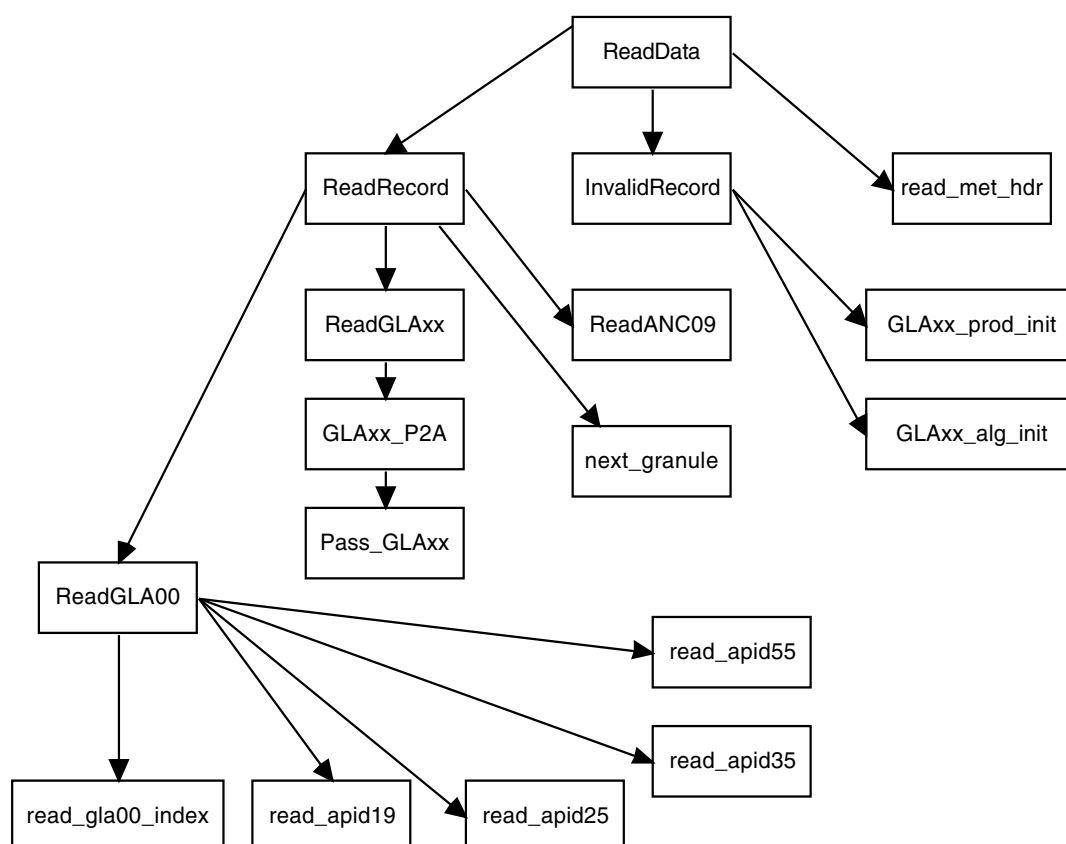**Figure 6-4 ReadData**

The time-synchronization methodology used by ReadData is rather complex. The following algorithm will attempt to describe the procedure:

- Save time and index of last data read.
- Initialize global time and index to invalid
- Loop through each input file type we are to synchronize
 - Set data time and index to invalid
 - Get the current granule index of the current filetype
 - Set the readnew flag to false.
 - Loop within the current granule of the current filetype unless the file is not available or we reach EOF

- Read a data record (ReadRecord)
- Cycle if EOF
- Cycle if data time < specified start time
- Set sync time to data time of record we just read
- Exit Interior Loop
- We exit exterior loop when we have a sync time and data time \geq sync time + limit. If we exceeded the limit, decrement the counter and fill the record with invalids. Write error message regarding data gap.
- Check all input files from which we sync for EOF. If all EOF, then set end-of-processing flag and return to calling routine.
- If requested, synchronize ANC09 with data time.
- If requested, synchronize ANC01 with data time. Since we keep 2 ANC01 header files in memory, move the 2nd to the 1st and read a new one into the 1st until data are synchronized.

In addition, since some GSAS records contain data whose duration exceeds one second, there is a algorithm used to determine when a record of a particular data type has exceeded its “validity”. This allows for the integration of one second data with multi-second data records. Once the defined period of validity has passed, ReadData replaces the current data with new data, or, if no data can be synchronized, invalid data to account for gaps.

Note that custom read subroutines are required for APIDs 19, 25, 35 and 55. These are required since these APIDs have data misalignments while prevent them from being read in the standard way.

6.4.9.1 ReadRecord

ReadRecord is an internal subroutine to ReadData. It calls file-specific routines to read one second of the requested data type. ReadRecord will seamlessly move across multiple granules, if necessary. If unsuccessful in reading the requested record, it will set the specific data structure to invalid values and return a flag indicating failure.

6.4.9.2 next_granule

next_granule is an internal subroutine to ReadData. It closes the current granule and open the next, if available. File control structures are set to indicate success or failure.

6.4.9.3 InvalidRec

InvalidRec is an internal subroutine to ReadData. It calls file-specific routines to set the data structures of the target file to invalid values.

6.4.10 Managers

Managers are routines local to each specific PGE. Managers control and execute process-specific tasks. The use of a Manager routine in a PGE is entirely optional. The purpose of a manager is to provide a software layer between the fairly generic main routine and the task-specific subroutines or subsystem libraries. A good rule of thumb is to use a Manager for com-

plex processing jobs, but to simply insert code into the main routine for relatively simple tasks.

6.4.11 MainWrap

MainWrap is an element of the `exec_lib`. This routine is called just before the end of execution to close any open files and write summary data to ANC06. This summary data includes:

- The number of each type of status message encountered.
- The number of each type of error message encountered.
- The number of records read for each input file used.
- The number of records written for each output file created.

Section 7

Common Functionality

GSAS code was designed to maximize software reuse. The foundation libraries provide a code base which the developer can use to ensure consistency and maximize code reuse among GSAS PGEs. The libraries provide standardized routines for such things as parsing control files, reading constants files, and reporting error/status messages. By following GSAS conventions, PGEs can basically take advantages of these services “for free.” The previous section introduced the components of the foundation libraries. This section describes the functionality provided by these libraries.

7.1 Control File Parsing

GSAS PGEs are designed to use Control files as the interface with the user (or controlling process). Control files provide dynamic control information to PGEs.

PGEs are designed to take the name of the control file as a command-line argument during each invocation of the PGE. Most PGEs should terminate with a fatal error if the command-line argument is missing, the specified file does not exist, or the file is unreadable. The exception to this rule is when the PGE provides a rudimentary user-interface when invoked without a control filename. GLAS_Reader and GLAS_APID, utilities, are currently the only instances of this exception.

GSAS control files are designed to be part of a larger control file used by one or more PGEs (or even PGEs outside of GSAS!). The larger control file includes sections which identify the PGE that will perform the task requiring the inputs contained in the section. Each section is bounded by an “=” sign in column 1, followed by the PGE name that requires the control inputs. Exact section names will be shown in the PGE-specific control file section of this document.

All GSAS control files are created in standard GSAS “keyword=value” format. This format is text-based and consists of a line containing a keyword/value pair delimited by an equal sign (=). The ordering of the keywords is not relevant but should follow a convention for consistency. Multiple instances of certain keywords are allowed. The keyword is not case sensitive. Spaces are allowed, but not required. Comment lines must be prepended by a “#” character. The keyword is limited to 255 characters; the value is limited to 255 characters.

PGE sections within a control file contain both common and process-specific information. The process-specific portions of control files will be provided within the documentation for each specific PGE. This section will document the common elements of the control files.

Within a control file section, some information is required, other is optional. Required single-instance keywords (Table 7-1) include:

Table 7-1 Required Single-Instance Keywords

| Keyword | Value |
|-----------------|--|
| TEMPLATE_NAME= | Name of the control file template. |
| EXEC_KEY= | Unique (per day) execution key |
| DATE_GENERATED= | Date the control file was generated. |
| OPERATOR= | Operator who generated the control file. |
| PGE_VERSION= | Version number of the target PGE. |

Optional multiple-instance keywords (Table 7-2) include:

Table 7-2 Optional Multiple-Instance Keywords

| Keyword | Value |
|--------------|--|
| PASSID= | Pass-related information |
| TRACK= | Track [number start_time stop_time] |
| INPUT_FILE= | Input file [filename start_time stop_time] |
| OUTPUT_FILE= | Output file [filename start_time stop_time] |
| WRITE_CONST= | Signals that the specified constants should be written to ANC06. |

7.1.1 PASSID Specification

A PASSID section is required in the control file when creating GLA products. There should be one instance of the following keyword/values for all tracks which fall within the minimum/maximum time of the data being processed. This information is required for GLAS_L1A, GLAS_Alt, and GLAS_Atm. This information is NOT required for GLAS_L0proc or other utilities.

```
PASSID=revolution_num<sp>pas-
sid<sp>start_time<sp>stop_time<sp>equator_crossing_lon<sp>no
se_path_number.
```

Descriptions of the PASSID elements are provided in Table 7-3.

Table 7-3 PASSID Control Line Elements

| Element | Description |
|----------------|---|
| revolution_num | integer, containing the auto-incrementing rev number. |
| passid | 11-byte character, further described below. |
| start_time | double-precision float, containing J2000 UTC time in seconds. |

Table 7-3 PASSID Control Line Elements (Continued)

| Element | Description |
|----------------------|---|
| stop_time | double-precision float, containing J2000 UTC time in seconds. |
| equator_crossing_lon | float, containing the equator crossing longitude. |
| nose_path_number | integer, containing the NOSE path number. |

The eleven-byte passid field will be treated as follows: prkkccctttt. Descriptions of each element are provided in Table 7-4.

Table 7-4 passid Field Description

| Field | Description |
|-------|---|
| p | repeat ground track phase (integer, length=1) |
| r | reference orbit number (integer, length=1) |
| kk | instance (integer, length=2) |
| ccc | cycle (integer, length=3) |
| tttt | track (integer, length=4) |

7.1.2 Input/Output File Specification

Input and Output files are required to be designated using the GSAS-standard naming convention defined in Appendix A. The type of each file specified is determined by parsing specific components of the filename which are required by all of the naming methods defined in the specification. These common components of all filenames are:

HHHxx_mmm...ff.eee

(where: HHH is the type identification, xx is the type id number, mmm is the release number, ff is the file sub-type, and eee is the file extension.)

GSAS software uses the type identification, the type id number and the file sub-type to determine what type of file is specified in the control file. The filetype-parsing routines are not case-sensitive when determining the type of file specified. However, the filenames are case-sensitive during file opening and creation.

All files are required to be delimited by start and stop times. These times are floating point values specified on the control line as J2000 time in seconds. On both input and output, records are skipped until the time in the current record is greater than or equal to the specified start-time and less than or equal to the specified stop-time. Static ancillary files are required to have start-times and stop-times present for consistency, but these are currently ignored.

The general formats for an input and output file specifications are:

```
INPUT_FILE=file_name<sp>start_time<sp>stop_time
OUTPUT_FILE=file_name<sp>start_time<sp>stop_time
```

Additionally, GLA product file entries should contain segment and version information. This information is specified in the format:

```
INPUT_FILE=file_name<sp>start_time<sp>stop_time<sp>gran_rel_
num<sp>gran_ver_num<sp>gran_segment
```

```
OUTPUT_FILE=file_name<sp>start_time<sp>stop_time<sp>gran_rel
_num<sp>gran_ver_num<sp>gran_segment
```

Segment and version information fields are described in Table 7-5.

Table 7-5 File Segment and Version Fields

| Field | Description |
|--------------|---|
| gran_rel_num | granule release number (CCB controlled, mmm in file naming convention.) Character max length of 20. |
| gran_ver_num | granule version number (Auto-incrementing, nn in file naming convention.) Character max length of 20. |
| gran_segment | orbit segment of the granule (if more than 1 segment, use 0). Character max length of 1. |

Files with INPUT_FILE and OUTPUT_FILE keywords must be listed in chronological order based on start and stop times. The start time of one file may overlap the stop time of another. In this case, data within the overlapping range will be written to the first file and not the second.

7.1.3 Input Data Time Selection

As referenced in the Control File section, all files are required to be delimited by start and stop times. PGEs which support time selection will skip that data which are outside the limits defined by start and stop times. This data will be read, but not processed. Additionally, given the case of multiple input files of the same type, the PGE will seamlessly skip from one file to the next when all data from the current file has been read (or skipped via time selection).

Certain input ancillary files do not support input time selection but require, none the less, start and stop times in their control file entry. This was a design decision intended to promote consistency within the control file content. The start and stop times for these ancillary files should encompass the entire time range of the input data.

7.1.4 Output Data Time Selection

As with input files, all output files are required to be delimited by start and stop times on their control file entry. PGEs which support time selection will not write that data which are outside the limits defined by start and stop times. Additionally, given the case of multiple output files of the same type, the PGE will seamlessly skip from one file to the next when the current data time falls outside the range of the current output file. It is important to note that input data time selection and output data time selection are completely independent of one another.

There is, however, a practical relationship between the two, since output data for a particular time cannot be written if no input data for that time are read (or specified).

7.1.5 Execution scenarios

Most core PGEs permit multiple execution scenarios. Certain sets of computations have been grouped together by the software designers. Execution of these sets can be specified via specific execution flags with the PGE control file. The detailed documentation for each PGE specifies what execution flags are available and the processes they control. Additionally, there are dependencies between input file type, output file type, and the execution flags. These dependencies define execution scenarios, which will be described in the respective PGE detailed documentation.

7.2 ANC07 Constants Files

ANC07 files are used to provide GSAS with static, change-controlled parameters provided by the Science Team and used during processing of GLAS data. These parameters were carefully selected such that these parameters could be modified without forcing a recompilation of the processing software. It is critical that these files are tightly change-controlled since unapproved modification could result in erroneous or inconsistent data being generated during the creation of the GLAS Products.

There are several types of ANC07 files. These types include a global constants file, an error file, and constants files specific to each of the science algorithm categories.

Constants files are specified as input files within a particular PGE's control file. The global constants file and the error constants file are required for all executables.

GSAS ANC07 files are delimited by section identifiers which differ (by design) from control files section identifiers. Each section is bounded by the section name and an "=". The section delimiters are defined as follows:

```
BEG_OF_STATUS=
...Status section contents...
END_OF_STATUS=

BEG_OF_ERROR=
...Error section contents...
END_OF_ERROR

BEG_OF_GLOBALS=
...Global constants section contents...
END_OF_GLOBALS

BEG_OF_ATM=
...Atmosphere constants section contents...
END_OF_ATM

BEG_OF_ELEV=
...Elevation constants section contents...
END_OF_ELEV
```

```
BEG_OF_L1A=
...L1A constants section contents...
END_OF_L1A

BEG_OF_UTIL=
...Utilities constants section contents...
END_OF_UTIL
```

All GSAS ANC07 files are created in standard GSAS “keyword=value” format. This format is text-based and consists of a line containing a keyword/value pair delimited by an equal sign (=). The ordering of the keywords is not relevant but should follow a convention for consistency. Multiple instances of keywords are not allowed. The keyword is not case sensitive. Spaces are allowed, but not required. Comment lines must be prepended by a “#” character. The keyword is limited to 255 characters; the value is limited to 255 characters.

7.3 Invalid Values and Error/Status Reporting

This section documents the use of standardized methods of dealing with invalid data and error/status conditions.

7.3.1 Invalid Values

Not all data received from GLAS will be suitable for science processing. In addition, given the nature of the raw telemetry packets, some data may be missing. The concept of an “invalid value” is used to signify that data is invalid or missing and should not be used for processing. Invalid values are datatype-specific values which are defined in the GLAS global constants module. These variables are assigned to Product variables in order to indicate invalid or missing data. These values are defined in Table 7-6. Great care should be taken to avoid using an invalid value during a calculation. Additionally, great care must be taken by both the programmer and data user to determine if the variable in question is defined as potentially invalid. One can only consider data to be invalid if the product documentation defines that variable as potentially invalid and the variable has the appropriate invalid value respective to its datatype.

Table 7-6 Invalid Values

| Datatype | Invalid Value |
|----------------|---|
| 1 byte integer | 127 |
| 2 byte integer | 32767 |
| 4 byte integer | 2147483647 |
| 4 byte real | 3.40282E+38 x7F7FFFFFFF |
| 8 byte real | 1.797693094862316E+308 x7FEFFFFFFFFFFFFFFF |

7.3.2 Exit Status

All GSAS PGEs are required to return an exit status indicating success or failure of the process. See Table 7-7. This status is returned through an operating system call and can be queried by other operating system processes. The supported exit status codes are gFATAL=3 and gNO_ERROR=0.

Table 7-7 PGE Exit Status Codes

| Value | Description |
|-------|-----------------------------------|
| 0 | Process completed with no errors. |
| 3 | Process failed. |

Note that the Exit status was designed to return numbers consistent with the GSAS error/status reporting facility's error severity values. However, the exit status codes are but a subset of the GSAS error severity codes.

7.3.3 Error and Status Reporting

GSAS uses a common error/status reporting facility. This ensures that error/status reporting is handled in a consistent manner throughout the software. This facility is based on the ANC07 error file and is configurable by the user.

An important related point is that GSAS is designed such that only the main PGE routine can terminate processing. Subroutines are not allowed to terminate processing, but should indicate a fatal error by passing the appropriate error severity code back to their calling processes. The calling process can then exit with the correct exit status result code.

The ANC07 error file is in standard GSAS “keyword=value” format. This format is text-based and consists of a line containing a keyword/value pair delimited by an equal sign (=). The keyword is not case sensitive. Spaces are allowed, but not required. Comment lines must be prepended by a “#” character. As with other ANC07 files, the sections for error and status must be delimited by section identifiers. Identifiers for each section are listed below.

```
BEG_OF_STATUS=  
...Status section contents...  
END_OF_STATUS=  
  
BEG_OF_ERROR=  
...Error section contents...  
END_OF_ERROR
```

The format of the error/status content is defined in Figure 7-1. The keyword can have the

KEYWORD=nnnnnnttsxsfrrrrr

Figure 7-1 Error Ancillary File Format

value of “ERROR” or “STATUS” and identifies if the line contains an error or status entry. The value is a text string with the specific format defined in Table 7-8.

Table 7-8 Error String Format

| Character | Positions | Description |
|-----------|-----------|---|
| n | 1-6 | Error code (must be sequential within a section) |
| x | 7,58,60 | Space character (delimiter) |
| t | 8-57 | Message |
| s | 59 | Error severity (see Table 7-10) |
| f | 61-66 | Frequency of reporting (message is reported on 1st occurrence, then every f th time) |

There is a specific error number for each error/status value. Within the ANC07 file, these error numbers are numerically split into multiple sub-sections. Errors have negative numeric designations; status messages have positive designations.

Each major portion of the GSAS software supported by the specific error file begins at a different subsection number. Within a subsection, error numbers must be consecutive. The use of sub-sectioning is optional for a simple error file. The GSAS ANC07 error file has 5 subsections. Table 7-9 lists each of the subsections and their starting error/status number.

Table 7-9 Error Sections

| Starting Numbers | Description |
|------------------|-------------------------|
| -10001/10001 | General error/status. |
| -20001/20001 | L1A error/status. |
| -30001/30001 | Waveform error/status |
| -40001/40001 | Atmosphere error/status |
| -50001/50001 | Elevation error/status. |

GLAS error messages are designed to inform a user when the software has encountered a problem. GLAS status messages are designed to assist the user in observing the flow of the processing. Status messages usually alert the user when the software begins execution of a subroutine. A great deal of flexibility was designed into this software in order to allow the user to customize the error/status display.

The user may modify error and status entries in order to configure the severity of the error and frequency of printout. The user is cautioned to seek GLAS change-control board approval before modifying the severity of an error. GSAS software will terminate processing upon receipt of a fatal severity code. Thus, modifying the severity may enable the software to execute in a non-tested mode.

The severity number controls how the GLAS software reacts when an error occurs. The 4 levels of severity are described in Table 7-10. GLAS software will terminate on a Fatal error. The frequency number controls how often an error message is printed out. The first instance of a specific error is always printed. Subsequent instances are printed out at the frequency specified. All instances are counted and the number of occurrences printed in an output summary.

Table 7-10 Error Severity Codes

| Severity | Description |
|----------|--------------------|
| 0 | No error |
| 1 | Information/status |
| 2 | Warning |
| 3 | Fatal |

7.4 ANC06 Metadata/Log File

GSAS PGEs create ANC06 output files which contain processing information, error messages, and status messages. These files are in a modified version of the GSAS keyword=value format. The format of an ANC06 entry is:

```
[time] [keyword]=[value]
```

The first field [time] is the time in UTC seconds. The time is that of the data being processed when the entry was written (if no data have been processed, the time may be 0 or an invalid value). The time is a GSAS-standard time representation (UTC seconds). The second field [keyword] is a keyword describing the type of information presented. The third field [value] is a formatted text message describing the event. Comments are allowed in order to group messages logically. Comment lines are pre-pended by the pound (#) sign.

The value field contains the actual message and its format varies dependent on the type of message displayed. Error/Status values, for example, have several subfields. The first field is the numeric error/status code. The second field is the error severity (see Section 7 for details). The third field is the name of the routine which reported the error. The fourth field is the standard error text with optional detailed text. The format of the subfields within the value field is shown below:

```
error_num, severity, calling_routine, std_message opt_text
```

7.5 Product Internal Data Storage, Conversion and I/O

The GSAS I/O and unit conversion process is sufficiently complex and important to describe in detail. The design of this process is what allows GSAS to meet the reprocessing requirements.

First, some definitions: (1) algorithm data (in units for algorithm use) are that data which are in a form most favorable for display and calculation; (2) product data (in units for I/O) are data which are in a form most favorable for machine independence and storage efficiency. It is important to understand the process by which algorithm data gets transformed into product data (and product data gets transformed back into algorithm data).

7.5.1 Product Modules

There are several different types of modules involved in the product conversion process. These modules were briefly described in the **prod_lib** section but will be detailed here. Table 7-11 (where xx = a GLA product number [01-15]) defines each component. All modules are designed with software reuse as a primary goal.

Table 7-11 Product Module Functionality

| Module | Functionality |
|-----------------|--|
| kinds_mod | defines basic data types (4-byte integer, 8-byte real, etc.) |
| types_mod | defines any global data structures |
| GLAxx_prod_mod | defines product-specific (where xx=product number) record format and associated global product data structure. Each module also includes one subroutine to initialize the product data and another to print the data in a human-readable form. |
| GLAxx_mod | contains routines to read (ReadGLAxx) and write (WriteGLAxx) the product data structure in binary format. |
| GLAxx_alg_mod | defines product-specific global algorithm data structure. Each module also includes one subroutine to initialize the algorithm data and another to print the data in a human-readable form |
| GLAxx_scal_mod | defines product-specific global scaling data structure. Also includes subroutines to initialize the scaling data, convert from product to algorithm format (GLAxx_P2A), convert from algorithm to product format (GLAxx_A2P), and print the scaling data in a human-readable form. |
| common_flag_mod | contains routines for packing/unpacking common flags. |
| GLAxx_flag_mod | contains routines for packing/unpacking product-specific flags. |

7.5.2 Internal Product Data Storage

Data for each product are stored internally in two different formats. For each product, there is one global data structure containing product data. These data are in the exact same format as the integer-binary data written to and read from GLAS product files. There is also a global data structure for each product containing algorithm-format (mostly double precision) data for use in scientific calculations. The product modules and the GSAS Managers use these public data structures. However, data are passed from the Managers to the science algorithms via the argument list.

7.5.3 Product Input/Output

GLAxx product files are defined as integer-binary fixed-length files. These product files will contain text header records (as described later) followed by binary data records.

The GLAxx_prod_mod defines a specific data structure which exactly matches the format of each data record of the appropriate product file. This data structure is used in an unformatted direct-IO statement to read/write a data record from/to disk.

When multiple products are read simultaneously, a data record from a lower-numbered product is read before the data from a higher-numbered product. This is important to the concept of “Pass-thru” (explained in Section 7.5.5).

7.5.4 Product-to-Algorithm Conversion (P2A)

When a data record is read from disk into memory, the data are stored in the product data structure. In order to be useful in scientific calculations, the data must be converted from product format into algorithm format. The process is called “Product-to-Algorithm Conversion”.

When a record of data is read, the values are stored in a product data structure. The appropriate algorithm data structure is initialized to either zeros or invalid values, as specified by the product documentation.

Each product variable is checked for an invalid value. If the data is determined to be invalid, no conversion is performed. As a result of initializing the algorithm structure appropriately, if the product variable is invalid, the algorithm value, by default, contains an invalid value.

If the values are determined valid, the data will be converted from product to algorithm format by one or more of the following processes.

- converting to unsigned (if necessary)
- scaling by a scale factor:
$$\text{Algorithm_Value} = \text{Product_Value} * \text{Scale_Factor}$$
- unpacking bits into individual flags.

For the most part, scaling is performed by multiplying the integer product value by a floating point scale factor and storing the result in a double-precision algorithm variable within the global algorithm data structure. The exceptions to this rule are flags, which are unpacked with specific subroutines and a few variables which are used as integers by the science algorithms.

7.5.5 Pass-Thru

After a product is read and converted to algorithm format, common data must be passed from lower-numbered product/algorithm data structures to higher-numbered product/algorithm data structures. This pass-thru process enables re-processing to be treated the same as normal processing. It is important that both product and algorithm data is passed. The subsystem managers (discussed below) are designed to take full advantage of the pass-thru process.

7.5.6 Managers

The subsystem managers ‘use’ the global algorithm data structures. If an intermediate conversion is necessary, the managers create local variables. The managers pass the appropriate variables to the science algorithms via the argument list. (L1A is an exception to this since the L1A routines basically use the entire data structures.) Specific algorithms are executed based on the state of control flags received from the PGE in order to allow for re-processing.

A key concept is that the manager uses the variable in the highest-numbered product for which it is responsible. For example, if the same variable is on GLA05 and GLA06, the elevations manager always uses the variable from the GLA06 algorithm structure, no matter if GLA06 is read for input or not. The pass-thru process ensures that the value is always there.

After a science algorithm returns execution to the manager, the manager performs its own pass-thru function. It copies any local variables back to the algorithm data structure and then passes any modified algorithm variables to the higher-numbered product/algorithm data structures. This is essentially a repeat of the pass-thru process described in 7.5.5, except the candidate variables are limited to those modified by each respective science algorithm.

7.5.7 Algorithm to Product Conversion (A2P)

After the manager has finished executing science algorithms, each algorithm structure must be converted back to product data. This is essentially a reverse of the P2A process.

First, the product structure is initialized. Then, each algorithm variable is checked for an invalid value. If the variable is determined valid, the data will be converted from algorithm to product format by one or more of the following processes.

- unscaling by a scale factor:
 $Product_Value = nint(Algorithm_Value/Scale_Factor)$
- unpacking bits into individual flags.

For the most part, scaling is performed by taking the nearest integer of the double precision algorithm value divided by a floating point scale factor. The result is stored back into an integer product variable within the global product data structure. The exceptions to this rule are flags, which are packed with specific subroutines and a few variables which are used as integers by the science algorithms.

7.6 Product Headers

GSAS Products begin with ASCII header records containing information regarding the processing which created the Product and the data contained within. These header records are exactly the same size as a Product data record and contain ASCII information in a slightly

modified KEYWORD=VALUE format. In order to conserve space on the product, the header entries are not delimited by the record length, but by a semi-colon (;) and linefeed (ASCII 10).

By design, the first two header entries are the record length and number of header records. This allows product readers to verify the record length and jump directly to the first data record, if necessary. Most of the remaining information within the headers is directly applicable to the generation of metadata files for EOS ingest.

Although the majority of entries in the Product headers are common to all products, GSAS Products may contain special and specific header entries. This is handled by product-specific header modules (GLAxx_hdr_mod). The common elements of the Product Headers and associated subroutines are contained within a common header module (common_hdr_mod). Most of the header software is contained within the GSAS product library. The exception is the com_hdr_update routine, which is contained within the exec_lib since it needs to interface more directly with the PGEs.

When a product file is opened for output, GSAS initializes the product's header information and determines how many records will be needed to contain the header data. Many of the header entry values are already known at this time and can be filled in immediately. A fixed number of bytes is reserved for those entries whose values must be filled at a later time. GSAS writes the initial header records to the product and sets the file pointer to the first data record. At the end of a granule, any of those unfilled header records are set to a value and the header records are re-written at the top of the Product. Care is taken to make sure that the header records have not grown large enough to overwrite any Product data.

7.7 Summary

Again, it is important for developers to realize the capability built into the GSAS libraries. Use of the PGE model presented in the next section can lead to significant reductions in development time and much greater consistency throughout the GLAS software.

GLAS_Reader was written partially as an example for the capability gained through using the libraries. With only about 1300 lines of heavily commented code (and most other lines subroutine calls), GLAS_Reader uses the product library routines to read and print nearly any GLAS file currently in use. The services it uses include:

- Full control file parsing.
- Time-selective processing.
- Multi-granule processing.
- Full error reporting.
- Full I/O support.
- Full ANC06 logging.

Additionally, a fairly significant portion of the 1300 lines includes a rudimentary user interface which allows a user to interact with GLAS_Reader without requiring a control file. This shows that the use of the libraries does not necessarily restrict the developer to follow the con-

ventional GSAS model. The model provides developer with the flexibility to handle special requirements within the basic development GSAS model.

Section 8

GLAS_L0proc

8.1 Overview

GLAS Level 0 APID files will normally be distributed as a PDS (Production Data Set) in approximately 6 hour segments or as an EDS (Expedited Data Set) which will be distributed as a Pass Data Dump. There will be several files, each containing a specific APID record for the segment. These segments will be sets of real-time and playback data received from the polar ground stations. The software that will pre-process GLAS L0 data is the GLAS Level-0 Processor (GLAS_L0proc).

8.2 Function

GLAS_L0proc is a utility PGE that will time synchronize GLA00 APIDs in a manner such that records within different GLAS products may be easily correlated. To do this GLAS_L0proc creates a unique number (rec_ndx) for each packet of data collected by the GLAS instrument. This index will be assigned to the matching records within each Level 0 APID and will account for the 0.25 second waveform Altimeter Digitizer packets

GLAS_L0proc will read each input APID and ancillary file listed in the control file and produce a single index file (ANC29) and a single GPS time correction file (ANC32). The ANC29 file will contain an index to each record in the set of files in the PDS/EDS. The program will group the data in one-second intervals. The ANC32 file will be used during L1A processing to assist in precise laser shot time-tagging.

GLAS_L0proc will also perform limited error checking on the APIDs it reads. It will signal an error if more than the maximum allowed APID records fall within a second and write a warning message to ANC06. Several fields within the APID primary header will be checked against reference values. These errors will be flagged and recorded. Duplicate APID records are checked, flagged and recorded, as well.

The core GLAS PGEs are used as a model for GLAS_L0proc. A major difference in the GLAS_L0proc implementation is that it reads the APIDs one file at a time, rather than synchronously reading all the APIDs record by record. Despite this difference, a great deal of the PGE model was used to create GLAS_L0proc, which will ease software maintenance chores.

Developer experience is that working with L0 spacecraft data can entail a great deal of debugging with regards to both software and the actual data. With this in mind, a significant amount of debug code is embedded within GLAS_L0proc. This code can be turned on with compiler flags but will generate an extensive amount of output. This output is very useful for debugging purposes but can drastically slow execution time. The recommended method of running with debugging turned on is to redirect stdout to a file which can be examined after the run.

GLAS_L0proc records statistics such as the number of missing records, number of received records, number of bad records, etc. The software checks for too many occurrences of an APID per second. Duplicate data is flagged as an error (warning not fatal) and the message

written to ANC06. Quality issues are tracked and reports made of any problems/potential problems.

8.3 Approach

- GLAS_L0proc uses many of the standard routines from the model GSAS PGE with only minor changes.
- GLAS_L0proc does not perform partial/selective processing or reprocessing. There are no execution flags defined within GLAS_L0proc. Start and stop time are required on control file INPUT_FILE and OUTPUT_FILE specifications for consistency, but are not used.
- GLAS_L0proc uses the operating system-based qsort for sorting tasks. Glue code written in C is used in conjunction with qsort.
- Several constants are needed by GLAS_L0proc processing. Constants include such things at mission elapsed time (MET) offsets, APID identification code, APID record lengths, and sort order keys. These constants are included within the GLA00 product module in order to facilitate code reuse and ease configuration management.
- The manager functionality is within the main GLAS_L0proc routine.
- ReadData is not used since data is read file-by-file, rather than record-by-record.

8.4 Input and Output Files

Table 8-1 lists the required inputs to GLAS_L0proc. Table 8-2 lists the outputs created by GLAS_L0proc. Files which are specific to GLAS_L0proc are documented in this section. See the appropriate section of this document or the GLAS Science Data Management Plan for details regarding the those files not specific to GLAS_L0proc

Table 8-1 GLAS_L0proc Inputs

| File Spec | Type | Source | Short Description |
|------------------|-------------------|------------------|---|
| gla00*_?.dat | Level-0 APID | EDOS | GLAS Level-0 APID files (one file per each APID type). |
| anc47*_?.dat | Level-0 | EDOS | GLAS Level-0 APID PDS files (one file per each APID type) |
| anc07*_00.dat | Static Ancillary | Science Team | GLAS error file. |
| anc07*_01.dat | Static Ancillary | Science Team | GLAS global constants file. |
| anc33*.dat | Dynamic Ancillary | ISIPS Operations | Counter-to-UTC conversion file. |
| Control File | Control | ISIPS Operations | Control file. |

Table 8-2 GLAS_L0proc Outputs

| File Spec | Type | Destination | Short Description |
|------------------|-------------------|--------------------|--|
| anc29*.dat | Dynamic Ancillary | GLAS_L1A | Index file correlating APID times. |
| anc32*.dat | Dynamic Ancillary | GLAS_L1A | GPS time correction file used for precision timing of GLAS data. |
| anc06*.dat | Dynamic Ancillary | ISIPS Operations | Standard meta-data/processing log file. |

8.4.1 GLA00 APID Files

The GLA00 APIDs are Level-0 multi-rate spacecraft data files provided to the GLAS data processing facility by EDOS. There is a separate file for each specific APID type received from the spacecraft. These files are fully documented by the GLAS Instrument Team and within the GLAS L1A ATBD. These APIDs are listed in Table 8-3.

Table 8-3 Supported APIDs

| APID | Description |
|------|------------------------------------|
| 12 | Altimeter Digitizer Large Sci Pkt |
| 13 | Altimeter Digitizer Small Sci Pkt |
| 14 | Altimeter Digitizer Eng Pkt |
| 15 | Photon Counter Sci Pkt |
| 16 | Photon Counter Eng Pkt |
| 17 | Cloud Digitizer Sci Pkt |
| 18 | Cloud Digitizer Eng Pkt |
| 19 | Ancillary Science Pkt |
| 20 | CT HW telemetry #1 Data Pkt |
| 21 | CT HW Telemetry #2 Data Pkt |
| 22 | CT HW Telemetry #3 Data Pkt |
| 23 | CT HW telemetry #4 Data Pkt |
| 24 | Small Software #1 Tlm |
| 25 | Large Software Telemetry #1 Packet |
| 26 | LPA Data Pkt |
| 27 | Memory Dwell Packets 1 |
| 28 | Memory Dwell Packets 2 |
| 31 | DSP Code Memory Dump |
| 32 | DSP Data Memory Dump |
| 33 | C & T Dwell Packet |
| 34 | Event Message Packet |
| 35 | Memory Dump Packet |
| 36 | Table Dump Packet |
| 38 | Boresite Calibration Packet |
| 48 | GLAS Data Types Packet |
| 49 | Command History Packet |

Table 8-3 Supported APIDs (Continued)

| APID | Description |
|------|------------------------------------|
| 50 | CT HW telemetry #5 Data Pkt |
| 55 | Large Software Telemetry #2 Packet |
| 126 | LPA Test Packet |
| 1984 | GLAS PRAP Packet |

8.4.2 ANC47 PDS Files

The ANC47 PDS files are Level-0 construction record data files provided to the GLAS data processing facility by EDOS. There is a separate file for each specific APID type received from the spacecraft. These files indicate the quality of the corresponding GLA00 data.

8.4.3 ANC33 MET Counter to UTC Conversion File

The ANC33 file is used to convert mission-elapsed time (MET), which is provided in the APIDs, to GLAS-standard UTC time. Since the MET can be re-set by a roll-over or a spacecraft upset it is important that this file be maintained and provided to the GLAS processing facility in a timely manner. The file is delivered to ISIPS from the ISF as described in the ISF/ISIPS Interface Control Document.

ANC33 file is a ANSI text file. Each line contains data for a single entry in the file (data should not be hard wrapped). Comment lines are allowed and prepended by a # character. Each line contains the following information:

```
d_shdr_count <sp> d_shdr_count_prap <sp> d_utc <sp>
d_glas_osc_rate <sp> d_sc_osc_rate <sp> d_tdelay_digtzr <sp>
d_rdelay_digtzr <sp> d_plTbias <sp> d_plRbias <sp> d_siru_e
<sp> d_siru_e2 <sp> i_trkr_subject1 <sp> i_trkr_subject2
<sp> i_trkr_subject2 <sp> instrument_state
<sp> implement_time
```

Each field is defined in Table 8-4.

Table 8-4 ANC33 Field Descriptions

| Field | Description |
|-------------------|---|
| d_shdr_count | double precision: the counter value in the secondary header on MOST APIDS |
| d_shdr_count_prap | double precision: the counter value in the secondary header of PRAP |
| d_utc | double precision: the J2000 UTC time in seconds to which the counter values are converted |
| d_glas_osc_rate | double precision: the GLAS oscillator rate |
| d_sc_osc_rate | double precision: the Spacecraft oscillator rate |
| d_tdelay_digtzr | double precision: time delay for digitizer in seconds |

Table 8-4 ANC33 Field Descriptions (Continued)

| Field | Description |
|-------------------|--|
| d_rdelay_digtzr | double precision: internal range delay for digitizer in m |
| d_plTbias | double precision: post launch time bias in seconds |
| d_plRbias | double precision: post launch range bias in m |
| d_siru_e | double precision: initial slope for SIRU VTCW correction |
| d_siru_e2 | double precision: secondary slope for SIRU VTCW correction |
| i_trkr_subject(1) | integer: the subject indicator for LRS tracker 0 |
| i_trkr_subject(2) | integer: the subject indicator for LRS tracker 1 |
| i_trkr_subject(3) | integer: the subject indicator for LRS tracker 2 |
| instrument_state | integer bitfield: Initial valid instrument state for the period (see L1A Standard Data Product for bit interpretation) |
| d_implement_time | double precision: the J2000 UTC time in seconds where the data are first valid |

Note that the Implement_time is the UTC time at which this conversion was valid. GLAS_L0proc uses the designated start time of the first APID specified in the control file to find the correct position within the ANC33 file based on the Implement_time field.

8.4.4 Control File

The control file format and common elements are documented in Section 5 of this document. Elements specific to GLAS_L0proc are described here.

The control file section delimiter for GLAS_L0proc is:

```
=GLAS_L0P
```

Since GLAS_L0proc has no requirement for execution scenarios, there are no unique keywords for the GLAS_L0proc control file. GLAS_L0proc will perform all functions based on the presence of input and output files within the control file.

8.4.5 ANC29 Index File

The ANC29 index file provides GLAS_L1A with a method of time-correlating the GLAS APID files. It contains an index record for every record in the input APID files. ANC29 is a binary, fixed-length record file. Its format and fields are described in Table 8-5.

8.4.6 ANC32 GPS File

The ANC32 GPS file provides GLAS_L1A with a method of computing precise timing calculations based on the last update of the onboard GPS. It contains records which identify each time the GPS clock is updated within the APID packets. ANC33 is a binary, fixed-length record file. Its format is described in Table 8-6.

Table 8-5 ANC29 Format/Description

| Variable | Type | Bytes | Description |
|------------|------------------|-------|---|
| utctime | double precision | 8 | J2000 UTC time in seconds. Computed from the MET counter in each APID's secondary header. |
| rec_ndx | long integer | 4 | Mission-unique index number assigned to the set of APIDs defined by a one second duration and grouping rules. This number will be assigned to corresponding data records in every GLAS data product. The value is nominally (utctime - launchtime) * 5, in seconds. |
| shot_ctr | long integer | 4 | The appropriate shot counter from each APID. |
| rec_num | long integer | 4 | The physical record number of the corresponding data within the APID file. |
| apid | long integer | 4 | The APID number (assigned by the spacecraft team) of the APID. |
| DQFlag | long integer | 4 | Data quality flag. |
| sort_order | short integer | 2 | Sort order (for internal use). |
| spare | short integer | 24 | Spare bytes to align data structure to 8-byte boundary. |

Table 8-6 ANC32 Format/Description

| Variable | Type | Bytes | Description |
|----------------|------------------|-------|---|
| rec_ndx | long integer | 4 | Mission-unique index number assigned to the set of APIDs defined by a one second duration and grouping rules. This number will be assigned to corresponding data records in every GLAS data product. The value is nominally (utctime - launchtime) * 5, in seconds. |
| i_ScPosPktShot | short integer | 2 | Shot counter within APID 19 position packet, starting at byte location 1182. |
| i_useflag | short integer | 2 | Flag indicating if the data are valid (0=valid, other=not valid). |
| utctime | double precision | 8 | UTC time in J2000 seconds where GPS update occurred. This value corresponds exactly to a UTC time in the ANC29 file. |
| FTLatch | double precision | 8 | Frequency board latch counter within APID19, starting at byte location 1195. |
| ScPosPktGMET | double precision | 8 | MET counts within APID 19 position packet, starting at byte location 1184. |

Table 8-6 ANC32 Format/Description (Continued)

| Variable | Type | Bytes | Description |
|------------|------------------|-------|---|
| d_VTCW | double precision | 8 | BCTCW latch value within APID19 starting at byte location 1142. |
| d_VTCWp | double precision | 8 | VTCW value at time of 0.1Hz pulse within APID19 starting at byte location 1182. |
| GPSTime | double precision | 8 | GPS receiver time in counts within APID19 starting at byte location 1172. |
| GPSppsGMET | double precision | 8 | MET for GPS 0.1hz counter within APID19 starting at byte location 1201. |

8.5 Design

Figure 8-1 shows the top-level structure chart of GLAS_L0proc. The basic processing algorithm is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read static ancillary files (ReadAnc)
- Write version info (Write_LibVer, Write_AncVer)
- Until all APID files are read...
 - Read APIDs and fill index and gps arrays (readglop)
- Sort the index array (sort_gla00_index)
- Sort the GPS array (sort_gps)
- Convert the MET time into UTC time (utc_time_conversion)
- Group the APID records and assign rec_ndx (IndexGrouping)
- Check the index array for duplicates
- Write the index arrays to file
- Assign rec_ndx to GPS array entries
- Validate data within GPS array and set useflag appropriately
- Write GPS array to file
- Close all files and generate summaries (MainWrap)

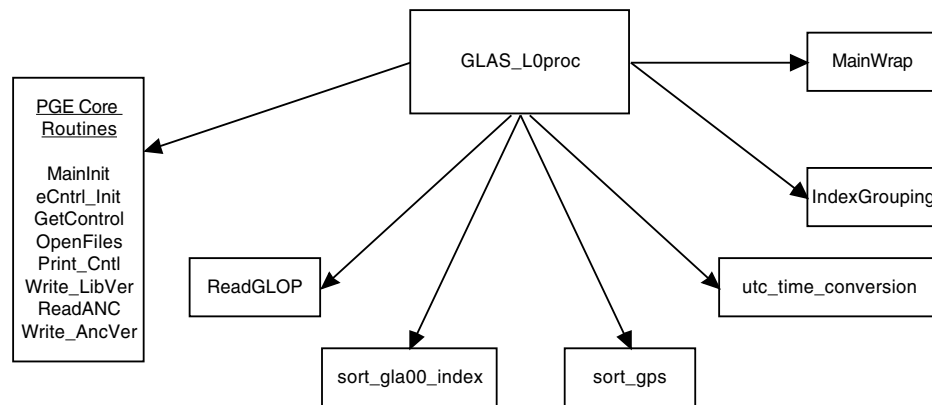


Figure 8-1 GLAS_L0proc Structure Chart

8.5.1 PGE Core Routines

Except where noted, the following PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer
- ReadANC
- Write_AncVer
- MainWrap

Exceptions to normal core routine conventions include:

- eCntrl_Init does not define or set execution flags.
- GetControl does not parse any execution flags.
- Start and stop times are required on the INPUT/OUTPUT_FILE assignments, but are not used by GLAS_L0proc to delimit processing. However, the start time of the first APID specified is used as a reference time when finding the correct coefficient for MET-to-UTC conversion. It is critical that this time is specified correctly.

8.5.2 ReadGLOP

ReadGLOP is a subroutine within the local `glop_mod` module. The `glop_mod` itself contains several important constants. Since GLAS_L0proc creates its index and GPS arrays in memory, a maximum length for each array is defined in this module. The arrays themselves are defined and allocated in this module, as well.

ReadGLOP is called by the main GLAS_L0proc routine once for each APID which is to be processed. ReadGLOP uses the APID number to read each record of the APID into the appropriate data structure.

ReadGLOP uses standard Fortran direct-to-structure reads to read most APIDs. However, several APIDs are not aligned on 4-byte boundaries. For these, ReadGLOP calls specialized read subroutines which exist within the `GLA00_mod` module of the product library.

If the APID read is an Ancillary Science Packet (APID19), GPS time is compared with the previous GPS time. If a change has occurred, a GPS array element is filled with the appropriate data.

The primary header of each APID record is converted and checked for error conditions. Error checking includes the following:

- Primary header version = 0
- Primary header APID number = expected APID
- Primary header APID size = expected_APID_size – (header_size – 1)
(actual value of the offset is 7)
- Primary header secondary header flag $\neq 0$
- Primary header sequence count delta = 1

Duplicate records are checked by comparing the sequence counter and utctime against previous values.

Fields within the index structure are filled and a “sort rank” is assigned based on the APID type. This “sort rank” is temporarily assigned to the spare 4 bytes at the end of the data structure. The shot counter is converted from a signed to unsigned value before assignment.

Since the MET-to-UTC conversion has not yet been performed, the MET counter is assigned to the utctime. However, an APID-specific offset is added to the MET counter for alignment purposes in order to account for processing delays aboard the spacecraft. These values were provided by the instrument developers and are defined in the `GLA00_mod` module within the product library.

8.5.3 sort_gla00_index

Sort_gla00_index is a C routine local to GLAS_L0proc. It provides a comparison function for the system `qsort` routine and calls `qsort` with the index array. `qsort` returns an index array sorted by utctime (primary) and sort rank (secondary). Sorting the index provides a list of interspersed APID records in time/rank order. Sorting is necessary so that the `index_grouping` module can correctly assign a `rec_ndx` to the correct group of corresponding APID records.

An important programmer note is that a C header file (gla00_index.h) is required for sort_gla00_index. If a programmer changes the Index file data structure, they must change the gla00_index.h file in a corresponding manner.

8.5.4 sort_gps

Sort_gps is a C routine local to GLAS_L0proc which is nearly identical to sort_gla00_index. It sorts the GPS array by uttime using a comparison routine with the system qsort call. (This is actually done more for safety than necessity.)

The same caveat applies here as does with sort_gla00_index. A C header file (gps_index.h) is required for sort_gps. If a programmer changes the GPS file data structure, they must change the gps_index.h file in a corresponding manner.

8.5.5 utc_time_conversion

UTC_time_conversion is a routine local to GLAS_L0proc. It reads reference values from ANC33 and uses those values to convert MET counter values within the index array to UTC time.

The routine is passed the start time (taken from the control file entry) of the lowest-numbered APID which has been read. It uses this as its initial time and searches through the ANC33 file for the first implement time greater than or equal to the initial time.

Once it has found the correct implement time, it loops through the index array and uses the associated refMET_Counts, refUTC_seconds, and Interval to convert the MET counter to UTC time within the index. While looping, it checks to see if the previously computed UTC time is greater than the next implement time. If so, it reads the associated ANC33 values and uses those for the next UTC conversions.

Additionally, while looping through the index file, the routine checks the GPS array for matches between the APID19 index MET counter and GPS MET counter. If a match is found, the GPS MET counter is converted to UTC time.

The UTC time conversion calculation is performed as follows:

UTC time = refUTC_seconds + (MET counter - refMET_Counts) * Interval

8.5.6 Index_Grouping

Index_grouping is a routine local to GLAS_L0proc. It scans through the index array and assigns rec_ndx values based on a data alignment algorithm.

Sort_gla00_index has already sorted the index array based on MET counts and sort rank. Based on information from the instrument team, certain APIDs are guaranteed to have the same MET counter value for a particular second of data. The sort rank takes this into account and sorts these APIDs at a higher level than others. Additionally, the sort order also accounts for importance, guaranteeing that if an APID record exists for a certain second, it will be in a fixed position relative to other APIDs within the one second interval.

The routine loops through the index array. When it detects one of the higher-ranked APIDs, it computes a rec_ndx from the UTC time. This rec_ndx is assigned to the current APID record

and subsequent APID records until another higher-ranked APID is detected. During the period of assigning the `rec_ndx`, several error checks are performed. These are:

- The number of specific APID types assigned the same `rec_ndx` is checked against a reference maximum-APID-per-second reference (which is defined in `GLA00_mod.`) If the maximum of a specific APID is exceeded, the `rec_ndx` value is recomputed and assigned to the current and subsequent APIDs.
- The shot counter values of specific APIDs (`AD_LgSci`, `AD_SmSci`, `AD_Eng`, `PC_Sci`, `PC_Eng`, `CD_Sci`, `CD_Eng`, `AN_Sci`, `LPA`) are checked for consistency. If the shot counters within the same `rec_ndx` are inconsistent, the `rec_ndx` value is recomputed and assigned to the current and subsequent APIDs

Section 9

GLAS_L1A

9.1 Overview

GLAS_L1A is a core GSAS PGE. It uses the L1A subsystem to create GLAS Level 1A data from the Level 0 GLAS instrument data products. GLAS_L1A will use the ANC29 and ANC32 files created by GLAS_L0proc to time-synchronously read the appropriate GLA00 APID files.

9.2 Function

The L1A process includes applying calibration equations determined during GLAS system testing to convert the measured counts into engineering units. The conversions of the counts to engineering units will be one or more of several types: straight polynomial conversion based on the measurement counts; multi-variable conversions with dependence on additional measurements such as temperature; special conversions based on a complex dependence of several measurements, interpretation of data, table look-up, and geophysical based conversions. Some data will not require conversion and will be retained in counts. The Stellar Reference System (SRS) attitude and position data and the GPS data will be from standard existing systems similar to those used on other spacecraft. The conversions and calibration equations for the L1A subsystem are defined the L1A ATBD.

The altimeter data, including the waveforms, are packaged into the GLA01 data product. The atmospheric data from the photon counters and the cloud digitizer, as well as supporting data, are packaged into the GLA02 data product. Both GLA01 and GLA02 include location data obtained from the predicted orbit file. The GLAS instrument engineering and housekeeping data are stored in the GLA03 data product. The SRS and GPS data along with the laser pointing monitor data will be packaged into the GLA04 data product.

9.3 Design Approach

The following design criteria are specific to GLAS_L1A.

- GLAS_L1A fully uses the standard routines from the model GSAS PGE.
- GLAS_L1A can perform partial processing, but not reprocessing. GLAS_L1A does perform time-based selective processing. There are, however, dependencies between L1A_Atm and L1A_Alt. Partial-processing will not yield the same results for certain parameters as full-processing.
- The ANC29 file (created by GLAS_L0proc) is used to read GLA00 data from the appropriate APID file in the correct order.
- Due to issues due to aligning multi-rate data across PDS boundaries, the ANC29 and ANC32 files are read into core and re-sorted. This is a break from the concept of normal record-by-record processing.

- L1AMgr is specific to the L1A subsystem. The L1A manager is used to control all L1A-specific science algorithm processes and interfaces directly with the L1A subsystem.

9.4 Input and Output Files

Table 9-1 lists the required inputs to GLAS_L1A. Table 9-2 lists the outputs created by GLAS_L1A. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding these files.

Table 9-1 GLAS_L1A Inputs

| File Spec | Type | Source | Short Description |
|---------------|-------------------|------------------|---|
| gla00*_?.dat | Level-0 APID | EDOS | Level-0 APID files (one file per each APID type). |
| anc07*_00.dat | Static Ancillary | Science Team | Error file. |
| anc07*_01.dat | Static Ancillary | Science Team | Global constants file. |
| anc07*_05.dat | Static Ancillary | Science Team | L1A constants file. |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion file. |
| anc29*.dat | Dynamic Ancillary | GLAS_L0proc | APID index file. |
| anc32*.dat | Dynamic Ancillary | GLAS_L0proc | GPS time correlation file. |
| anc33*.dat | Dynamic Ancillary | Science Team | UTC time conversion file. |
| anc20*.dat | Dynamic Ancillary | UTexas | Predicted orbit file. |
| anc45*_01.dat | Static Ancillary | Science Team | GLA01 metadata input file. |
| anc45*_02.dat | Static Ancillary | Science Team | GLA02 metadata input file. |
| anc45*_03.dat | Static Ancillary | Science Team | GLA03 metadata input file. |
| anc45*_04.dat | Static Ancillary | Science Team | GLA04 metadata input file. |
| Control File | Control | ISIPS Operations | Control file. |

Table 9-2 GLAS_L1A Outputs

| File Spec | Type | Destination | Short Description |
|------------------|-------------------|--------------------|--|
| gla01*.dat | L1A Product | GLAS_L1A | GLAS L1A Altimetry product file. Contains the waveforms and the altimeter and timing data required to produce higher level range and elevation products. |
| gla02*.dat | L1A Product | GLAS_Atm | GLAS L1A Atmosphere product file. Contains the normalized backscatter, photon counter, cloud digitizer, timing, and location data required to produce the higher level atmosphere data products. |
| gla03*.dat | L1A Product | Archive | L1A Engineering product file. Contains the GLAS instrument's engineering and housekeeping data. |
| gla04*_01.dat | L1A Products | UTEXAS | L1A LPA product file. |
| gla04*_02.dat | L1A Products | UTEXAS | L1A LRS product file. |
| gla04*_03.dat | L1A Products | UTEXAS | L1A GYRO product file. |
| gla04*_04.dat | L1A Products | UTEXAS | L1A IST product file. |
| gla04*_05.dat | L1A Products | UTEXAS | L1A BST product file. |
| gla04*_06.dat | L1A Products | UTEXAS | L1A SCPA product file. |
| qap01*.dat | L1A Quality | QA | L1A Altimetry quality file. |
| qap02*.dat | L1A Quality | QA | L1A Atmosphere quality file. |
| qap03*.dat | L1A Quality | QA | L1A Engineering quality file. |
| qap04*.dat | L1A Quality | QA | L1A SRS/GPS/laser pointing quality files. |
| anc06*.dat | Dynamic Ancillary | ISIPS Operations | Standard metadata/processing log file. |

9.5 GLAS_L1A PGE

Figure 9-1 shows the top-level structure chart of GLAS_L1A. The basic processing algorithm is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)

- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read ancillary files (ReadAnc)
- Write version info (Write_LibVer, Write_AncVer)
- Until all data are processed...
 - Execute the L1A_Manager
- Close all files and generate summaries (MainWrap)

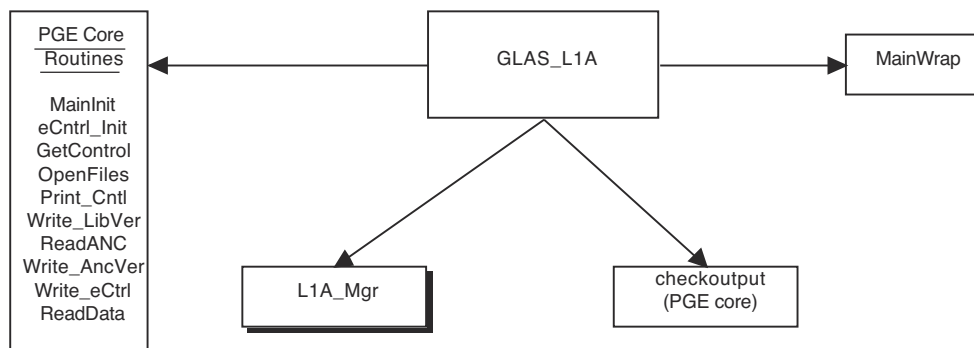


Figure 9-1 GLAS_L1A Structure Chart

9.5.1 PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer
- ReadANC
- Write_AncVer
- ReadData
- MainWrap

9.6 L1A Manager (L1A_Mgr)

The L1A Manager controls execution of the L1A subsystem, passes variables from the GLA00 APIDs to the L1A products, and handles granule start/stop. The manager controls execution of the science algorithms based on flags received from the control file via GLAS_L1A. Figure 9-2 shows the L1A Manager Structure Chart. Figure 9-3 shows a flow

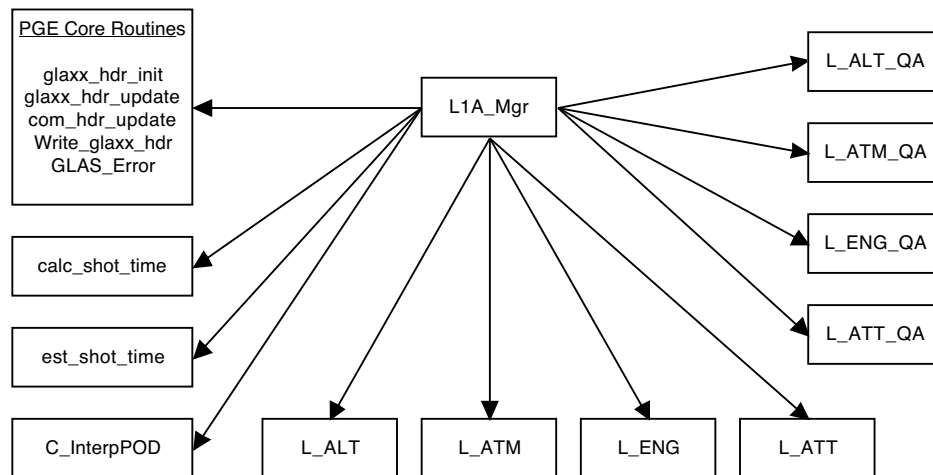


Figure 9-2 L1A_Mgr Structure Chart

chart of the L1A Manager.

L1A_Mgr is passed arrays of output file control structures and execution flags. It accesses product and algorithm data directly from the requisite public data structures. Execution flags are defined in eCntl_mod; file control structures defined in the fCntl_mod component of the exec_lib, and product/algorithm data within the GLA00, GLA01, GLA02, GLA03, and GLA04 components of the product_lib.

The first thing the manager does is check for an end-of-granule condition within each defined output file by comparing the nominal time of data (set by ReadData_mod) with the appropriate stop time within the specific file data structure. If an end-of-granule condition is detected, final QA routines are called and the product and QA files are closed. If another granule of the same type has been specified in the control file, the manager opens the appropriate product and QA files and loops to verify the stop time of the new granule is greater than the nominal time of data.

After checking the granule times, processing begins. The manager calls calc_shot_time, which computes precise 40 per second timing information. It then calls C_CalcSpLoc which computes 40 spot locations based on the 40 per second timing information and the location of satellite position interpolated from the predicted orbit file (ANC20).

Next, the manager executes several science algorithms based on its execution flags and data availability. L_Eng, L_Alt, L_Atm, and L_Att are called. Each returns a flag indicating if the

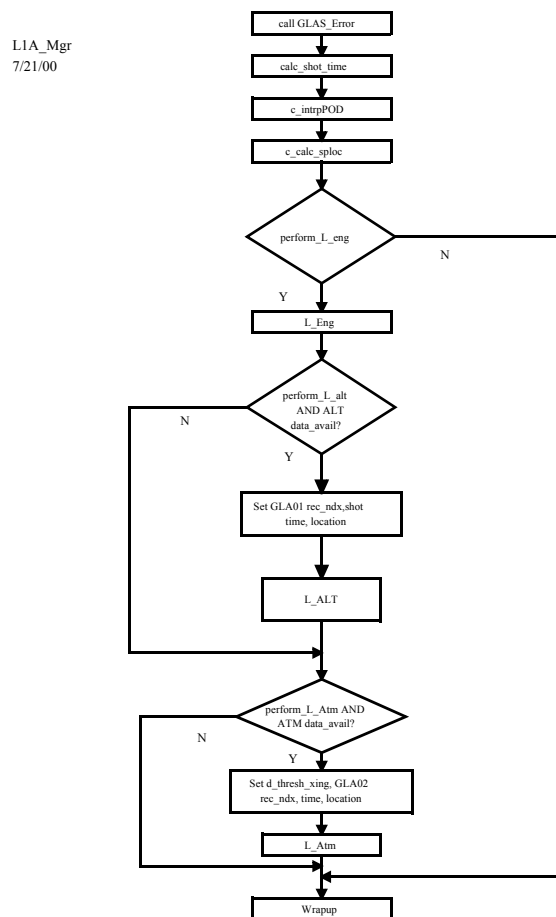


Figure 9-3 L1A Manager Flow Chart

appropriate data product should be written. Values which are passed directly from one product to another are set appropriately.

QA routines are called to process QA information and the WriteL1A routine is called with the appropriate flags to write data to the product files. Before writing a record, WriteL1A verifies that the appropriate output file exists and that the nominal time of data is greater than the start time specified in file control structure. If the nominal time is less than the start time, the data record is not written. An appropriate error message is written to ANC06 if a record is skipped.

9.7 PGE/Manager Implementation Details

This section discusses specific aspects of the PGE/Manager implementation which should be addressed in more detail.

9.7.1 ANC29/ANC32/GLA00 Input

ANC29 data are handled differently than most core PGE I/O. Due to potential PDS boundary problems (for example, the waveform data for a particular second may be on a different PDS than the corresponding ancillary science data), all input ANC29 granules are read into mem-

ory by the ReadAnc core PGE routine. This array is dynamically allocated based on the number of records indicated in each ANC29 file header. The internal file number from which the ANC29 data are read is stored into a spare byte in the array so that when GLA00 data are read, the corresponding GLA00 file is used. After the ANC29 granules are read into memory, the data are sorted to guarantee the correct time order. ANC32 data are loaded into memory similarly.

ReadData actually “reads” the ANC29 and ANC32 data on a second-by-second basis from memory. As the specialized ANC29/32 I/O was a fairly late design decision, this implementation minimized changes to the ReadData logic. ReadData uses the ANC29 data to read the correct records from the various GLA00 APID files. It reads 1-second groups of APID records using the physical record number, APID type, and internal file number to determine the correct position within the GLA00 files.

ReadData determines the content of a 1-second group by examining ANC29 `rec_ndx` values. “`rec_ndx`” is described fully in the GLAS_L0proc section, but suffice to say, it is an integer corresponding to 0.1 second utctimes. For the most part, `rec_ndx` values for APIDs of a particular second are the same exact value. However, in the case of APIDs which straddle PGEs, the values may not be exactly the same. To handle this case, ReadData will consider that `rec_ndx` values which correspond within 0.9 seconds are part of the same second. This value is a constant defined in GLA00_mod.f90 as “`rec_ndx_slop`”.

9.7.2 Missing APIDs

Different GLAS APID packets originate from different subsystems of the GLAS instrument. Depending upon the instrument state, APIDs may or may not be present in the data stream. In addition, data drop-outs present the possibility of missing data.

The L1A Manager sets an array of flags (`APID_Av_Flg`) to indicate present or missing data. A signal flag is set for each 1-second APID record. The complication arises when checking the 1/4 second APID waveform records (`AD_LgSci`, `AD_SmSci`). In order to figure out which of the four records are missing, the manager examines shot counters. By definition, the shot counter in the Ancillary Science (`AN_Sci`) APID will match the first shot counter in the first corresponding waveform record. The manager uses this knowledge to set positional flags that indicate which of the 1/4 waveform APIDs are missing.

If at least one of the waveform records or the `AN_Sci` record is available, `L1A_Mgr` calls `L_Alt` and a GLA01 record is written. If the Photon Counter Science (`PC_Sci`), Cloud Digitizer Science (`CD_Sci`), or `AN_Sci` records are available, `L1A_Mgr` calls `L_Atm` and a GLA02 record is written.

The GLA01 product file is a little different than the other GLAS products in that it contains different record types. It has the following record types: main, large waveform, and small waveform. The main record type occurs once per second. The large waveform type occurs five per second. The small waveform type occurs twice per second. A record identifier (`i_gla01_rectype`) within each record identifies what type that record is. If at least one of the waveform records or the `AN_Sci` record is available, the Main record type exists in GLA01 for a particular second. If at least one of the waveform records is available, the waveform type (small or large) records exist in GLA01 for that second.

9.8 L1A_Subsystem

Figure 9-4 illustrates the processes that comprise the L1A subsystem.

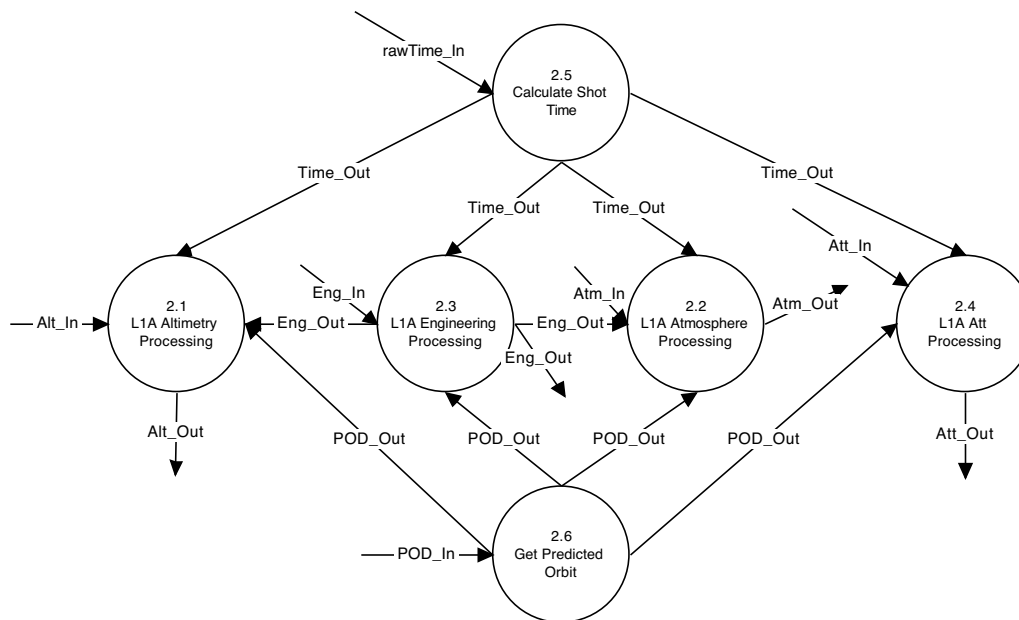


Figure 9-4 Level 1A Computations

9.8.1 Subsystem Design Decisions and Assumptions

The following design decisions were made:

- We will perform the precision shot time calculation in its own module since this information is required for geolocation.
- Any Altimetry data required for L_Atmosphere will be computed in L1A_Mgr.

The following assumptions were made:

- L1A will not be executed if L_Engineering is not executed.

9.8.2 DFDs and their Descriptions

9.8.2.1 Level 1A Altimeter Processing

The purpose of the Level 1A Altimeter Processing (process 2.1) is to generate the data to be stored on the Level 1A Altimeter Data product (GLA01). This process performs engineering unit conversion on the raw Level 0 altimetry data (Alt_In) to obtain the Level 1A altimetry data in engineering units. Any engineering/ housekeeping data that are required to be on the GLA01 data product are collected here and placed in the output structure. Quality assessment computations are performed, collected and placed in an output QA structure.

9.8.2.2 L1A Atmosphere Processing

The purpose of the L1A Atmosphere Processing (process 2.2) is to generate the data to be stored on the Level 1A Atmosphere Data product (GLA02). This process performs engineering unit conversion on the raw Level 0 atmosphere data (Atm_In) to obtain the Level 1A atmosphere data in engineering units. Any engineering/ housekeeping data that are required to be on the GLA02 data product are collected here and placed in the output structure. Quality assessment computations are performed, collected and placed in an output QA structure.

9.8.2.3 Engineering Data Processing

The purpose of the Engineering Data Processing (process 2.3) is to generate the data for the Level 1A Engineering Data product (GLA03). This process performs engineering unit conversion on the raw Level 0 engineering/housekeeping data (Eng_In) to obtain the Level 1A engineering data in engineering units. Any Level 0 data that are not stored on either GLA01, GLA02, or GLA04 are collected here and placed in the output structure. Quality assessment computations are performed, collected and placed in an output QA structure.

Additionally, specific parameters of the Eng_Out structure are passed to the Altimetry and Atmosphere processors.

9.8.2.4 Collect Instrument and S/C Position and Attitude

The purpose of process 2.4 is to collect the GPS data, instrument and S/C position and attitude data and to generate the L1A Position and Attitude data product (GLA04). The APIDs used to generate GLA04 include APID19, APID26, and APID1984. The GLA04 product is required for input to the precision orbit and attitude determination algorithms. This process checks the Level 0 packets for errors, configures the data for output and collects QA data.

Due to internal spacecraft/instrument timing issues all data corresponding to one second of GLA04 data may not be within one second of APID1984. To align the LRS and IST data to corresponding APID19 shot times, a 6 second double-buffering algorithm is used to match the LRS and IST data with corresponding APID19 shots. To complicate matters, the LRS and IST data occur at a rate of 10/second, whereas the APID19 shots occur at a rate of 40/second. The algorithm finds the APID19 shots closest to the LRS/IST data and merges the APID19 and APID1984 data into a single one second GLA04 record.

9.8.2.5 Calculate Shot Time

The Calculate Shot Time process (process 2.5) will generate the precise time of each laser shot. The actual methodology of the time calculation depends upon the presence of the Ancillary Science (AN_Sci) APID. If AN_Sci is not present, 40-per-second time is generated linearly using a 0.025 increment. If AN_Sci is available, the time will be calculated from the laser fire time, GPS time, and the GPS latch time. Offsets and calibration factors will be applied as necessary. The process is fully described in the L1A ATBD.

9.8.2.6 Get Predicted Location

The Get Predicted Location process (process 2.6) obtains the latitude and longitude for each shot from the predicted orbit file using common routines. The shot times are input, the predicted orbit file is interpolated to get the spacecraft position vector for each shot time, and

then the latitude and longitude are computed from the position vector. The common routines `c_intrpPOD` and `c_calc_sploc` will be used for the calculations. The common routines will be called directly by the L1A Manager; it is not necessary to generate code for the Level 1A Computations subsystem.

Section 10

GLAS_Alt

GLAS_Alt is a core GSAS PGE. It uses the Waveform and Elevation subsystems to create GLAS Level 1B and 2 data from the Level 1 GLAS altimetry data products (and optional L2 atmosphere products). GLAS_Alt will read the GLA01 file created by GLAS_L1A to create the GLA05, GLA06, and GLA12-15 products. GLAS_Alt can also read the GLA05 file which it created in a separate processing scenario to create GLA06 and GLA12-15. Additionally, GLAS_Alt can read the GLA05 and GLA06 files created in a separate processing scenario to generate GLA12-15.

10.1 Function

GLAS_Alt encompasses both the Waveform and Elevation subsystems.

The Level 1B Waveforms subsystem computes the geolocation and produces waveform-based information required to create the elevation products (GLA05).

The Levels 1B and 2 Elevation Computation subsystem generates all elevation Standard Data Products, associated Processing Quality Assessment data, and related computations. The Level 1B subsystem creates parameters for a Level 1B time-ordered global product (GLA06) with a geodetically corrected surface elevation using the same standard algorithm used for ice sheet regions. The Level 2 subsystem determines region specific (ice sheet, sea ice, land, and ocean regions) elevation parameters for Level 2 time-ordered regional products (GLA12, GLA13, GLA14, and GLA15). The presence of optional L2 Atmosphere products GLA09 and GLA11 cause atmosphere-specific parameters on GLA06 and 12-15 to be filled with data. Flags indicate the presence/absence of atmosphere data.

10.2 Design Approach

The following design criteria are specific to GLAS_Alt

- GLAS_Alt fully uses the standard routines from the model GSAS PGE.
- GLAS_Alt can perform partial processing. However, since the Elevations subsystem needs data from GLA05, it is not possible to create GLA12-15 with only GLA06 as an input.
- The GLAS_Alt Elevations process needs atmosphere values from GLA09 and GLA11. This requires that the GLAS_Atm jobs for the corresponding time period be run before GLAS_Alt elevation jobs. (The GLAS_Alt Waveforms process can be run before GLAS_Atm.)
- All products are output at one record per 1 sec. However, GLA12-15 are only written when the footprint location falls within the respective regional mask.
- Two ANC01 meteorological data sets corresponding to the 6-hour time periods surrounding the time of the output product data are required.

10.3 Input and Output Files

Table 10-1 lists the required inputs to GLAS_Alt. Table 10-2 lists the outputs created by GLAS_Alt. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding these files. Those files which are only required by specific subsystems are noted within the table.

Table 10-1 GLAS_Alt Inputs

| File Spec | Type | Source | Short Description |
|-----------------|-------------------|--------------|---|
| anc01*.dat | Dynamic Ancillary | met_util | Meteorological subset files. Data sets at times before and after the time of the profile are interpolated to the time of the profile. |
| # anc04*.dat | Dynamic Ancillary | UTexas | IERS Polar Motion and Earth Rotation Data File. |
| anc07*_0000.dat | Static Ancillary | Science Team | Error file. |
| anc07*_0001.dat | Static Ancillary | Science Team | Global constants file. |
| anc07*_0003.dat | Static Ancillary | Science Team | Waveform constants file. *Waveform only |
| anc07*_0004.dat | Static Ancillary | Science Team | Elevations constant file. *Elevation only |
| # anc08*.dat | Dynamic Ancillary | UTexas | Precision Orbit file. |
| # anc09*.dat | Dynamic Ancillary | UTexas | Precision Attitude file. |
| anc12*_0000.dat | Static Ancillary | Science Team | Coarse DEM file *Elevation only. |
| anc12*_0001.dat | Static Ancillary | Science Team | Fine DEM file *Elevation only. |
| anc13*.dat | Static Ancillary | Science Team | Geoid file *Elevation only. |
| anc16*.dat | Static Ancillary | Science Team | Load tide coefficients file *Elevation only. |
| anc17*.dat | Static Ancillary | Science Team | Ocean tide coefficients file *Elevation only. |
| # anc20*.dat | Static Ancillary | Science Team | Predicted Orbit |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion file. |
| anc27*_0000.dat | Static Ancillary | Science Team | Coarse regional mask file. |

Table 10-1 GLAS_Alt Inputs (Continued)

| File Spec | Type | Source | Short Description |
|------------------|-------------------|---------------|---|
| anc27*_0001.dat | Static Ancillary | Science Team | Fine regional mask file. |
| anc33*.dat | Dynamic Ancillary | Science Team | UTC time conversion file. |
| anc41*.dat | Static Ancillary | Science Team | JPL Planetary Ephemeris |
| anc45*_0001.dat | Static Ancillary | Science Team | GLA01 metadata input file. *Waveform only |
| anc45*_0005.dat | Static Ancillary | Science Team | GLA05 metadata input file. |
| anc45*_0006.dat | Static Ancillary | Science Team | GLA06 metadata input file. |
| anc45*_0012.dat | Static Ancillary | Science Team | GLA12 metadata input file. |
| anc45*_0013.dat | Static Ancillary | Science Team | GLA13 metadata input file. |
| anc45*_0014.dat | Static Ancillary | Science Team | GLA14 metadata input file. |
| anc45*_0015.dat | Static Ancillary | Science Team | GLA15 metadata input file. |
| anc51*.dat | Dynamic Ancillary | SRTM_DEM | SRTM DEM data files. *Elevation only. |
| anc52*_0001.dat | Static Ancillary | Science Team | Range Saturation Correction table. |
| anc52*_0002.dat | Static Ancillary | Science Team | Energy Saturation Correction table. |
| anc54*_0001.dat | Static Ancillary | Science Team | GLAS-Derived 1km DEM over Greenland index file. *Elevation only. |
| anc54*_0002.dat | Static Ancillary | Science Team | GLAS-Derived 1km DEM over Greenland data file. *Elevation only. |
| anc54*_0003.dat | Static Ancillary | Science Team | GLAS-Derived 500m DEM over Antarctica index file. *Elevation only. |
| anc54*_0004.dat | Static Ancillary | Science Team | GLAS-Derived 500m DEM over Antarctica data file. *Elevation only. |
| anc54*_0005.dat | Static Ancillary | Science Team | Canadian DEM index file. *Elevation only. |

Table 10-1 GLAS_Alt Inputs (Continued)

| File Spec | Type | Source | Short Description |
|------------------|------------------|------------------|---|
| anc54*_0006.dat | Static Ancillary | Science Team | Canadian DEM data file. *Elevation only. |
| anc55*.dat | Static Ancillary | Science Team | Mean Sea Surface file. *Elevation only. |
| anc56*.dat | Static Ancillary | Science Team | Pole tide file. *Elevation only. |
| anc57*.dat | Static Ancillary | Science Team | Global bathymetry file. *Elevation only. |
| anc58*.dat | Static Ancillary | Science Team | Ground Track file. *Elevation only. |
| anc59*.dat | Static Ancillary | Science Team | Pointing Mode Table. |
| Control File | Control | ISIPS Operations | Control file. |
| gla01*__.dat | Level-1A Product | GLAS_L1A | L1A Altimetry product file. *Waveform only. |
| gla05*__.dat | Level-1B Product | GLAS_Alt | L1B Waveform product file. *Elevation only. |
| gla06*__.dat | Level-1B Product | GLAS_Alt | L1A Elevation product file. *Elevation only. |
| gla09*__.dat | Level-2 Product | GLAS_Atm | L2 Atmosphere product file. *Elevation only. |
| gla11*__.dat | Level-2 Product | GLAS_Atm | L2 Atmosphere product file. *Elevation only. |

GLAS_Alt may be run with either anc04, anc08, and anc09, or with anc20. anc20 is a predicted-orbit product whereas anc04/08/09 are precision POD/PAD products. The anc04/08/09 combination will produce better geolocations.

Table 10-2 GLAS_Alt Outputs

| File Spec | Type | Destination | Short Description |
|------------------|-------------------|--------------------|--|
| gla05*.dat | L1B Alt Product | Archive/GLAS_Alt | The level 1B waveform parameterization product file. Contains the output from the waveform characterization procedure and other parameters required to calculate surface slope and relief characteristics. |
| gla06*.dat | L2 Alt Product | Archive/GLAS_Alt | L1B elevation data product file. Contains the surface elevation, surface roughness assuming no slope, surface slope assuming no roughness and geodetic and atmospheric corrections for the range. |
| gla12*.dat | L2 Alt Product | Archive | L2 ice sheet altimetry product file. Contains the ice sheet elevation and elevation distribution calculated from algorithms fine-tuned for ice sheet returns. |
| gla13*.dat | L2 Alt Product | Archive | L2 sea ice altimetry product file. Contains the sea ice freeboard and sea ice roughness calculated from algorithms fine-tuned for sea ice returns. |
| gla14*.dat | L2 Alt Product | Archive | L2 land altimetry product file. Contains the land elevation and land elevation distribution calculated from algorithms fine-tuned for land returns. |
| gla15*.dat | L2 Alt Product | Archive | L2 ocean altimetry product file. Contains ocean elevation and small-scale roughness calculated from algorithms fine-tuned for ocean returns. |
| qap05*.dat | L1B Alt Quality | QA | L1B waveform parameterization quality file. |
| qap06*.dat | L2 Alt Quality | QA | L2 elevation data quality file. |
| qap12*.dat | L2 Alt Quality | QA | L2 ice sheet altimetry quality file. |
| qap13*.dat | L2 Alt Quality | QA | L2 sea ice altimetry quality file. |
| qap14*.dat | L2 Alt Quality | QA | L2 land altimetry quality file. |
| qap15*.dat | L2 Alt Quality | QA | L2 ocean altimetry quality file. |
| anc06*.dat | Dynamic Ancillary | ISIPS Operations | Standard metadata/processing log file. |

10.4 GLAS_Alt

The basic GLAS_Alt processing algorithm is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Write version info (Write_LibVer, Write_AncVer)
- Read ancillary files (ReadAnc)
- Write execution flags information (Write_eCntrl)
- Until all data are processed...
 - Input data to process (ReadData)
 - Execute the WF_Manager, based on Control
 - Execute the Elev_Manager, based on Control
- Close all files and generate summaries (MainWrap)

10.4.1 PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer
- ReadANC
- Write_AncVer
- ReadData
- MainWrap

10.5 Waveform Manager (WFMgr)

The Waveform Manager controls execution of the waveform subsystem, passes variables from the input GLA01 product to the output GLA05 product, and handles granule start/stop. The manager controls execution of the waveform science algorithms based on flags received from GLAS_Alt. The manager is only executed if at least one of its execution flags is set.


WFMgr is passed arrays of output file control structures and execution flags. It accesses product and algorithm data directly from the requisite public data structures. Execution flags are defined in eCntl_mod; file control structures defined in the fCntl_mod component of the exec_lib, and product/algorithm data within the GLA01 and GLA05 components of the product_lib.

The first thing the manager does is check for an end-of-granule condition within each defined output file by comparing the nominal time of data (set by ReadData_mod) with the appropriate stop time within the specific file data structure. If an end-of-granule condition is detected, wrap-up and final QA routines are called and the product and QA files are closed. If another granule of the same type has been specified in the control file, the manager opens the appropriate product and QA files and loops to verify the stop time of the new granule is greater than the nominal time of data.

Next, the manager executes several science algorithms based on its execution flags and data availability. These algorithms are discussed in the WF_Subsystem section. Each returns a flag indicating if the GLA05 data product should be written. Values which are passed directly from one product to another are set appropriately.

QA routines are called to process QA information and the WriteWF routine is called with the appropriate flags to write data to the product file. Before writing a record, WriteWF verifies that the appropriate output file exists and that the nominal time of data is greater than the start time specified in file control structure. If the nominal time is less than the start time, the data record is not written. An appropriate error message is written to ANC06 if a record is skipped.

Figure 10-1 "WFMgr Structure Chart" provides an overview of the WFMgr and the subroutines it calls.

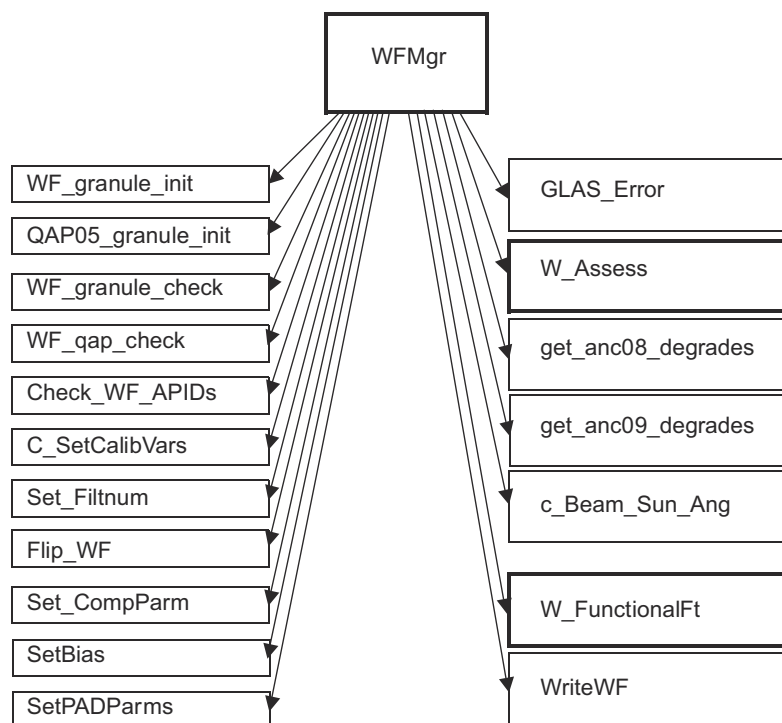**Figure 10-1 WFMgr Structure Chart**

10.5.1 WFMgr Subprocesses

| | |
|--------------------|---|
| WF_Granule_Init | Initialize all WF granules |
| QAP05_granule_init | Initializes QA arrays for GLA05 |
| WF_granule-check | Checks ALT and ATM waveform granules for EOF |
| WF_qap_check | Checks WF QAP for wrapup |
| Check_WF_APIDs | Checks WF APIDs and sets availability flags appropriately |
| C_SetCalibVars | Initialize laser energy calibration coefficients |
| Set_FiltNum | Sets filter number based on waveform type |
| Flip_WF | Flips the waveforms |
| Set_CompParm | Sets digitizer from instrument state |
| SetBias | Stets bias and times due to delays and ANC09 correction |
| SetPADParms | Sets parameters derived from PAD |
| GLAS_Error | GSAS standard error reporting utility |
| W_Assess | Major WF subroutine that performs a general assessment of the various aspects of the waveforms |
| get_anc08_degrades | Retrieves POD degradation data from anc08 file header |
| get_anc09_degrades | Retrieves PAD degradation data from anc09 file header |
| c_Beam_Set_Ang | Calculate laser coelevation, azimuth, and sun angle |
| W_FunctionalFt | Major WF subroutine that calculates two (land plus “other”) functional least squares fits to a Gaussian for each waveform |
| Write_WF | Writes a GLA05 WF record |

10.6 Elevation Manager (Elev_Mgr)

The Elevation Manager controls execution of the Elevation subsystems, passes variables from the input GLA05/06 product to the output GLA06 and GLA12-15 products, and handles granule start/stop. The manager controls execution of the elevation science algorithms based on flags received from GLAS_Alt. The manager is only executed if at least one of its execution flags is set. Elev_Mgr is passed arrays of output file control structures and execution flags. It accesses product and algorithm data directly from the requisite public data structures. Execution flags are defined in eCntl_mod; file control structures defined in the fCntl_mod component of the exec_lib, and product/algorithm data within the GLA05/06 and GLA12-15 components of the product_lib.

The first thing the manager does is check for an end-of-granule condition within each defined output file by comparing the nominal time of data (set by ReadData_mod) with the appropriate stop time within the specific file data structure. If an end-of-granule condition is detected, wrap-up and final QA routines are called and the product and QA files are closed. If another granule of the same type has been specified in the control file, the manager opens the appropriate product and QA files and loops to verify the stop time of the new granule is greater than the nominal time of data.

After checking the granule times, processing begins. The manager calls common library geo-location and DEM routines to compute position and elevation and tide routines to get tide data.

Next, the manager calls routines to check the surface type of the data and executes several science algorithms based on its execution flags and data availability. These algorithms are discussed in the DFD section. Each returns a flag indicating if the appropriate data product should be written. Values which are passed directly from one product to another are set appropriately.

QA routines are called to process QA information and the WriteElev routine is called with the appropriate flags to write data to the product files. Before writing a record, WriteElev verifies that the appropriate output file exists and that the nominal time of data is greater than the start time specified in file control structure. If the nominal time is less than the start time, the data record is not written. An appropriate error message is written to ANC06 if a record is skipped.

Figure 10-2 "ElevMgr Structure Chart" provides an overview of the ElevMgr and the subroutines it calls.

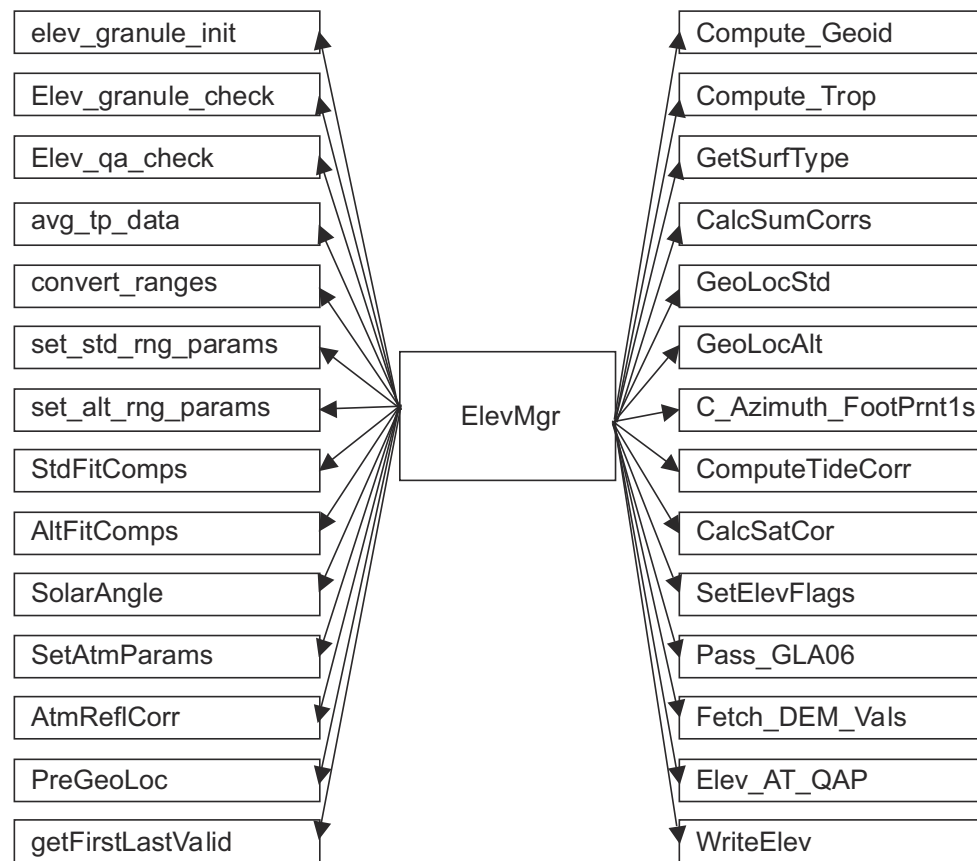


Figure 10-2 ElevMgr Structure Chart

10.6.1 ElevMgr Subprocesses

| | |
|----------------------|---|
| Elev_Granule_Init | Initialize all elevations (6,12-15) granules |
| Elev_granule_check | Checks ALT and ATM waveform granules for EOF |
| Elev_qa_check | Checks Elevation QAP for wrapup |
| avg_tp_data | Checks WF APIDs and sets availability flags appropriately |
| convert_ranges | Convert GLA05 range from time units to distance |
| Set_std_rng_params | Set standard-fit range parameters on GLA06,12,13,15 from converted GLA05 ranges |
| Set_alt_rng_params | Set alternate-fit range parameters on GLA14 from converted GLA05 ranges |
| StdFitComps | Convert GLA05 standard fit parameters from time units to distance units and set corresponding GLA06,12,13,15 parameters |
| AltFitComps | Convert GLA05 standard fit parameters from time units to distance units and set corresponding GLA14 parameters |
| SolarAngle | Set GLA06 sun angle value from attitude and ephemeris |
| SetAtmParams | Propagate selected atmospheric parameters from GLA09 and GLA11 |
| AtmReflCorr | Compute reflectivity correction |
| PreGeoLoc | Perform re-geolocation if called for or if POD has been re-interpolated |
| getFirstLastValid | Get first and last valid waveform indices |
| ComputeGeoid | Compute geoid elevations |
| ComputeTrop | Compute range corrections due to tropospheric conditions |
| GetSurfType | Compute surface-type flags based on location |
| CalcSumCorrs | Calculate the sum of all range corrections |
| GeoLocStd | Perform geolocation for standard waveform fit |
| GeoLocAlt | Perform geolocation for alternate waveform fit |
| c_Azimuth_FootPrnt1s | Compute the azimuth of a 1-second trace of the satellite footprint along the orbit track |
| ComputeTideCorr | Compute elevation corrections due to tidal forces |
| CalcSatCorr | Compute saturation corrections and set saturation correction flag |
| SetElevFlags | Sets an assortment of elevation-related flags based on data values |
| Pass_GLA06 | Sets pass-through variables in GLA12-15 from GLA06 values |
| Fetch_DEM_Vals | Retrieve high resolution DEM elevation values |

| | |
|-------------|---|
| Elev_AT_QAP | Update QAP along-track parameters for GLA06,12-15 |
| WriteElev | Writes elevation record for GLA06,12-15 |

10.7 PGE/Manager Implementation Details

This section discusses specific aspects of the PGE/Manager implementation which should be addressed in more detail.

10.7.1 GLA05 Requirement

The original concept of GLAS_Alt was to enable the Elev_Mgr to create GLA12-15 directly from GLA06. However, due to data dependencies, GLA05 input is required (as well as GLA06) when creating GLA12-15.

10.8 WF_Subsystem

The Level 1B Waveforms subsystem computes the geolocation, and produces waveform-based information required to produce the elevation products (GLA05)

The Level 1B Waveforms subsystem is divided into two main processes (W_Assess, and W_FunctionalFt) which generate waveform-based information required to produce the elevation products (GLA05). A control flag (w_ctrl) is passed to processes W_Assess and W_FunctionalFt indicating whether processing will be land algorithm only, other-than-land algorithm only, or both, and whether the subprocess W_DetGeo will be called. In addition to producing waveform-based information, processes W_Assess and W_FunctionalFt generate QA data for inclusion in the summary information product.

10.8.1 Assess Waveforms (W_Assess)

W_Assess performs a general assessment of the waveforms including: a check for saturation; calculating various shape characteristics; preliminary uncorrected latitude, longitude, and elevation; reflectance; and calculating the reference range, minimum range offset (signal begin), preliminary uncorrected range offset (signal end), and the threshold retracker range offset.

Input arguments:

| | |
|----------------|---|
| w_ctrl | Control flags |
| I_PADflag | Indicates if the PAD file is being used (same as g_havePAD) |
| i_numWFinFrame | Number of WF in a frame (normally 40) |
| i_numGinWF | Number of gates in WF (either 200, or 544) |
| r_wf_trans | Transmitted pulse in volts |
| r_wf_rec | Received WF in volts |
| i_wf_rec | Received WF in raw counts |
| i_cr | Compression values |
| i_ndxCr | Gate index where second compression starts |
| d_bgNoiseOb | Mean background noise level as measured by instrument |
| d_sDevNsOb | Standard deviation of background noise level calculated by the on-board algorithm |

| | |
|-------------------|--|
| d_FilterOb | Filter width where instrument found signal (ns) |
| d_TimeGate1Tr | Digitizer time of gate 1 of transmitted pulse (ns) |
| d_TimeGateLRec | Digitizer time of last gate of received WF (ns) |
| d.UTC1stPTime | UTC of 1st transmitted pulse (sec) |
| d_dShotTime | Time increment from d.UTC1stPTime for shots 2-40 (microsec) |
| d_PADpntgVect | Precision attitude pointing vector |
| d_areaTele | Telescope Area (~0.709 m ²) |
| d_optTrans | Optics Transmission |
| d_nrgRec | Energy of received WFs |
| d_gain_rcv | Received gain |
| d_gainTr | Transmitted gain |
| d_nrgTr | Energy of transmitted pulses |
| anc_param_d | Dependent Ancillary parameters (land or other-than-land processing) |
| anc_param_indep | Independent Ancillary parameters |
| d_dTHiRes | Time in ns of one digitizer gate |
| i_implement33_Ndx | Shot where d_rDelay_digtzr, d_plRbias, and d_dTHiRes change |
| i_gval_rcv | Received gain in raw counts |
| d_RecNrgAll_EU | Echo pulse energy |
| d_rDelay_digtzr | Prelaunch internal range delay in ns |
| d_plRbias | Post launch range bias in ns |
| d_latPreUncor | Preliminary uncorrected latitude |
| d_longPreUncor | Preliminary uncorrected longitude |
| d_elevPreUncor | Preliminary uncorrected elevation |
| i_elvFlg | Source of elevation indicator flag |
| I_RcorrFlgInt | FALSE=d_rDelay_digtzr not applied |
| I_RcorrFlgPL | FALSE=d_plRbias not applied |
| I_Wfqual | An array of 31 flags for each waveform. These flags include: no signal, no leading edge, no trailing edge, no transmitted pulse, land, ocean, icesheet, seaice, no fit, noise and standard deviation of noise are calculated, maximum iterations during fit, region selected for waveform fit, and invalid waveform. |

Output arguments:

| | |
|----------------|--|
| d_latPreUncor | Preliminary uncorrected latitude |
| d_longPreUncor | Preliminary uncorrected longitude |
| d_elevPreUncor | Preliminary uncorrected elevation |
| i_elvFlg | Source of elevation indicator flag |
| I_RcorrFlgInt | FALSE=d_rDelay_digtzr not applied |
| I_RcorrFlgPL | FALSE=d_plRbias not applied |
| I_Wfqual | An array of 31 flags for each waveform. These flags include: no signal, no leading edge, no trailing edge, no transmitted pulse, land, ocean, icesheet, seaice, no fit, noise and standard deviation of noise are calculated, maximum iterations during fit, region selected for waveform fit, and invalid waveform. |
| d_dDigComp | Offset of last gate of received WF from last digitized gate last received gate time is not same as last digitized gate time if there is compression |
| d_relTime | Relative time of each gate in ns from gate 1 (earliest time) of received WF taking account of the compression information. For example, if the original gates were one nanosecond apart, and there was a compression ratio of 2, then the time of gate 1 (r_wf_rec[1]) would be the average of the times of the first two digitizer gates ((0+1)/2 or 0.5), and the time of gate 2 would be the average of the times of the third and fourth digitizer gates ((2+3)/2 or 2.5). |
| d_wf_sm | Smoothed WF |
| d_maxSmAmp | Maximum amplitude of smooth WF |
| d_pcmtSat | Percent saturation of WF - set to invalid |
| d_bg_Noise | Either the observed noise (d_bgNoiseOb), or the calculated background noise. The calculation is performed if anc07%i_nsCal is set, or if the observed noise is zero or invalid and the waveform is not invalid. |
| d_sDevNoise | Either the observed noise standard deviation (d_sDevNsOb), or the standard deviation of the calculated noise. The calculation is performed if anc07%i_nsCal is set, or if the observed noise is zero or invalid and the waveform is not invalid. |
| d_refRng | Reference range in ns - time from Tr pk to last gate |
| d_maxRngO | Offset to be added to d_refRng to give the time of the last threshold crossing (closest to the ground, signal end) |
| d_minRngOff | Offset to be added to d_refRng to give the time of the first threshold crossing (closest to the spacecraft, signal begin) |
| d_preRngOff | Same as d_maxRngOff |
| d_thRtkRngOff | Offset to be added to d_refRng to give the retracker threshold range |
| i_ndxBegin | Index of beginning of signal |
| i_ndxEnd | Index of end of signal |
| d_areaRecWF | Area of signal return of r_wf_rec from sig begin to sig end |

| | |
|-----------------|--|
| d_maxRecAmp | Maximum amplitude of recieved WF |
| d_skew | Skewness of r_wf_rec from sig begin to sig end |
| d_kurt | Kurtosis of r_wf_rec from sig begin to sig end |
| d_centroid | Centroid of r_wf_rec from sig begin to sig end |
| d_maxTrAmp | Maximum amplitude of transmitted pulse |
| d_areaTr | Area of gaussian fitted to transmitted pulse |
| d_locTr | Centroid of transmitted pulse (ns) |
| d_tx_sm | Smoothed transmitted pulse |
| d_minTxAmp | Min amp for transmitted pulse |
| d_trTime | Relative time of each gate in ns of transmitted pulse |
| i_ndxTrB | Index of beginning of transmitted pulse |
| i_ndxTrE | Index of end of transmitted pulse |
| d_sDevNsTx | Std dev of noise for transmitted pulse |
| d_nsTx | Noise for transmitted pulse |
| d_skewTr | Skewness of transmitted pulse gaussian |
| d_PODposVect | Precision orbit position vector |
| d_reflectUncorr | Reflectivity, not corrected for atmosphere, calculated using the received energy from the maximum peak |
| d_reflectAllUnc | Reflectivity, not corrected for atmosphere, calculated using the received energy from all peaks |
| d_centroidInstr | Instrument centroid of last peak |
| I_PODflag | Returned by C_IntrpPOD, indicates the status of the orbit information |
| I_offNadirFlag | Returned by C_CalcSpLoc, indicates if the spacecraft is pointed off nadir. |
| i_usePAD | From C_CalcSpLoc, array indicating if PAD used for each shot |
| I_land | True indicates the possible presence of land |
| I_ocean | True indicates the possible presence of ocean |
| I_icesheet | True indicates the possible presence of icesheet |
| I_seaice | True indicates the possible presence of seaice |
| I_badFrame(1) | True if all WFs in this record have no signal |
| I_badFrame(2) | False if all WFs in this record are valid |
| i_errSeverity | Error flag from C_IntrpPOD, C_GetRegions, C_CalcTNrg, or C_CalcSpLoc |

10.8.1.1 W_Assess Subprocesses

W_Assess calls the following subprocesses:

| | |
|----------------|--|
| W_CalcRelTime | Calculates the d_relTime array |
| W_CharTrPulse | Characterize the transmitted pulse |
| W_CalcNoise | Calculates the noise |
| W_CalcRefRng | Calculates the reference range |
| W_SmoothPreRC | Smooth the WF's with a gaussian filter |
| W_DetGeo | Determine the geolocation of each shot |
| C_GetRegions | Determines the region types of each shot |
| W_CalcCtMxArAs | Calculates centroid, maximum amplitude, area, skew & kurtosis for the WF between signal_begin (i_ndxBegin) & signal_end (i_ndxEnd) |
| W_CalcInstrCt | Calculates the instrument centroid of the maximum amplitude peak |
| W_Ck4Sat | Check for waveform saturation |
| W_CalcThRetrkr | Calculates offset of retracker threshold |
| C_CalcTNrg | Calculates the transmitted energy |
| W_CalcReflect | Calculates reflectance |

10.8.1.2 Calculate the WF Functional Fit (W_FunctionalFt)

W_FunctionalFt calculates two functional fits for each waveform, one for land and one for all other surface types. Various fit related parameters are returned including the initial number of potential peaks found, the number of gaussian peaks (as many as six for the alternate or land fit, and up to two for the standard fit), the standard deviation of fit, and flags indicating saturation, whether the maximum number of iterations was exceeded, or if there was a fit.

Input arguments:

| | |
|----------------|--|
| w_ctrl | Control flags |
| i_numWFinFrame | Number of WF in a frame (normally 40) |
| i_numGinWF | Number of gates in WF (either 200, or 544) |
| r_wf_rec | Received WF in volts |
| d_wf_sm | Smoothed WF |
| r_wf_trans | Transmitted pulse in volts |
| d_tx_sm | Smoothed transmitted pulse |
| d_minTxAmp | Min amp for transmitted pulse |
| d_sDevNsTx | Std dev of noise for transmitted pulse |

| | |
|-----------------|---|
| d_nsTx | Noise for transmitted pulse |
| d_relTime | WF taking account of the compression information. For example, if the original gates were one nanosecond apart, and there was a compression ratio of 2, then the time of gate 1 (r_wf_rec[1]) would be the average of the times of the first two digitizer gates $((0+1)/2$ or 0.5), and the time of gate 2 would be the average of the times of the third and fourth digitizer gates $((2+3)/2$ or 2.5). |
| i_ndxBegin | Index of beginning of signal |
| i_ndxEnd | Index of end of signal |
| d_bg_Noise | Either the observed noise (d_bgNoiseOb), or the calculated background noise. The calculation is performed if anc07%i_nsCal is set, or if the observed noise is zero or invalid and the waveform is not invalid. |
| d_sDevNoise | Either the observed noise standard deviation (d_sDevNsOb), or the standard deviation of the calculated noise. The calculation is performed if anc07%i_nsCal is set, or if the observed noise is zero or invalid and the waveform is not invalid. |
| I_land | True indicates the possible presence of land |
| I_ocean | True indicates the possible presence of ocean |
| I_icesheet | True indicates the possible presence of icesheet |
| I_seaice | True indicates the possible presence of seaice |
| d_UTCtime | UTC time – used only for debug not for calculations |
| d_latPreUncor | Preliminary uncorrected latitude |
| d_longPreUncor | Preliminary uncorrected longitude |
| d_elevPreUncor | Preliminary uncorrected elevation |
| d_centroid | Centroid of r_wf_rec from sig begin to sig end |
| d_dDigComp | Offset of last gate of received WF from last digitized gate last received gate time is not same as last digitized gate time if there is compression |
| anc_param_dep | Dependent Ancillary parameters |
| anc_param_indep | Independent Ancillary parameters |
| I_Wfqual | An array of 31 flags for each waveform. These flags include: no signal, no leading edge, no trailing edge, no transmitted pulse, land, ocean, icesheet, seaice, no fit, noise and standard deviation of noise are calculated, maximum iterations during fit, region selected for waveform fit, and invalid waveform. |

Output arguments:

| | |
|----------------------------|--|
| <code>l_Wfqual</code> | An array of 31 flags for each waveform. These flags include: no signal, no leading edge, no trailing edge, no transmitted pulse, land, ocean, icesheet, seaice, no fit, noise and standard deviation of noise are calculated, maximum iterations during fit, region selected for waveform fit, and invalid waveform. |
| <code>d_estTxParms</code> | Estimated parameters for fit of transmitted pulse |
| <code>d_parmTr</code> | Noise, amplitude, centroid, and sigma of transmitted pulse gaussian |
| <code>d_sDevFitTr</code> | Standard deviation of fit of <code>d_parmTr</code> to transmitted pulse |
| <code>d_solnTrSgms</code> | Sigmas of fit of <code>d_parmTr</code> to transmitted pulse |
| <code>d_parm</code> | noise, 6x(amplitude,loc,sigma). Within this subsystem, locs are relative to gate 1, just before returning to WFMgr, they are converted to offsets that are to be added to the reference range. |
| <code>i_nPeaks</code> | Actual number of peaks in <code>d_parm</code> |
| <code>d_estParms</code> | Estimated parameters before the fit |
| <code>i_nPeakInit</code> | Number of peaks initially found before the fitting process |
| <code>i_rank</code> | Rank of peaks |
| <code>d_solnSigmas</code> | Solution sigmas for each parameter in <code>d_parm</code> |
| <code>d_wfFitSDev</code> | std deviation of fit |
| <code>l_fit_nogo</code> | True if fit process was not completed |
| <code>l_fit_maxiter</code> | True if fit process was stopped after maxiter iterations |
| <code>i_errSeverity</code> | Error flag from <code>W_InvertM</code> in <code>W_LsqFit</code> |

10.8.1.3 W_FunctionalFit Subprocesses

W_FunctionalFit calls the following subprocesses:

| | |
|----------------|--|
| W_ParamWithFit | Calculates the maximum amplitude for each WF, and oversees the fitting process for first the alternate set of parameters, and then the standard set of parameters. |
| W_Ck4HiSat | Determines the saturation type, if any, for each WF |

W_ParamWithFit calls the following subroutines:

| | |
|----------------|--|
| W_EstParams | Estimates the WF model parameters for W_ParamWithFit |
| W_PerformFit | Fit the gaussian functions to the recieved waveforms |
| W_RankAllPeaks | |

W_EstParams calls the following subroutines:

| | |
|--------------|--|
| W_Calc2ndDer | Calculates the second derivatives of the WF's |
| W_Estimates | Determines the initial number of peaks in the WF. Combine peaks until there are no more than i_maxfit and make parameter estimates |
| W_EstNew | Determine the number of peaks in the WF. Combine close peaks, then choose the largest I_maxfit peaks and make parameter estimates. |

W_Estimates calls the following subroutines:

| | |
|----------------|---|
| W_combinePeak | Combines one peak with the following peak |
| W_combinePeaks | Combines multiple peaks |
| W_RankPeaks | Assign a rank to each peak |

W_PerformFit calls the following subroutines:

| | |
|----------------|--|
| W_LsqFit | Perform least squares fit for one WF |
| W_RmPeaks | Remove peaks |
| W_combinePeaks | Combines multiple peaks |
| W_modPnW | Modify estimated amplitude for maxAmp, and modify the weights so that a better fit to the leading edge will be preferred |
| W_NormWF | Normalize waveform |

| | |
|------------|---------------------------|
| W_UnNormWF | Un-normalize waveform |
| W_CalcSDev | Calculate goodness of fit |

W_LsqFit calls the following subroutines:

| | |
|------------|---|
| W_CkParms | Check the waveform parameters for unreasonable values |
| W_CalcFnP | Calculate the value of the function and the partial derivatives with respect to the function parameters |
| W_CalcArP | Calculate the area and the partial derivatives of the area with respect to the function parameters |
| W_InvertM | Invert iDim x iDim matrix A |
| W_CkConv | Check the waveform parameters for convergence |
| W_CalcSDev | Calculate goodness of fit |

10.9 Elev_Subsystem

The Levels 1B and 2 Elevation Computation subsystem generates all elevation Standard Data Products, associated Processing Quality Assessment data, and related computations. The Level 1B subsystem creates parameters for a Level 1B time-ordered global product (GLA06) with a geodetically corrected standard elevation. The Level 2 subsystem determines region specific (ice sheet, sea ice, land, and ocean regions) elevation parameters for Level 2 time-ordered regional products (GLA12, GLA13, GLA14, and GLA15).

10.9.1 L1B DFDs and their Descriptions

Below is a breakdown of each of the elevation processes into subprocesses. Each subprocess corresponds to a Fortran 90 subroutine that is called by the elevation manager.

10.9.1.1 Calculate Coelev, Azimuth & Sun Angle (C_Beam_Sun_Ang)

Calculate the laser beam coelevation and azimuth and sun angle given the geodetic lat, lon, height above ellipsoid and time.

10.9.1.2 Interpolate POD (C_IntrpPOD)

Utilizes the POD file (ANC08), and time to interpolate the precision vectors for use in geolocation.

10.9.1.3 Tide Correction Routines (E_CalcLoadTD, E_CalcOceanTD, E_CalcEarthTD)

The tide correction routines consists of three processes which calculate the elevation corrections due to the effects of the load tide, ocean tide, and earth tide. Each process is triggered by a control flag. Following is a brief description of each of the process:

10.9.1.3.1 Compute Load Tide Correction (E_calcLoadTd)

Utilizes the load tide coefficients file to compute the coefficients for the given spot location. Then calculates the load tide correction using the given time.

10.9.1.3.2 Compute Ocean Tide Correction (E_calcOceanTd)

Utilizes the ocean tide coefficients file to compute the coefficients for the given spot location. Then calculates the ocean tide correction using the given time (time).

10.9.1.3.3 Compute Earth Tide Correction (E_calcEarthTd)

Utilizes the earth tide coefficients file to compute the coefficients for the given spot location. Then calculates the earth tide correction using the given time.

10.9.1.4 Calculate Std surface Elevation and spot loc (C_CalcSploc)

Utilizes the results from the previous three processes along with the spacecraft position in ITRF (Inertial Terrestrial Reference Frame), the laser attitude in ITRF, reference range, and ice sheet range offset to calculate surface independent elevation and spot location.

10.9.1.5 Interpolate Geoids (C_GetGeoid)

Utilizes the spot location to interpolate for the geoid height at that location. This is a common routine used by several processes.

10.9.1.6 Calculate Troposphere Corrections (E_CalcTrop)

Utilizes the met data files, spot location, and elevation (with respect to the geoid), to interpolate spatially for parameters used in the calculation of the tropospheric corrections. These corrections are then temporally interpolated to get the tropospheric corrections for the given time.

10.9.1.7 Calculate Angle (C_CalcAngle)

Calculates the angle between the POD and range vectors.

10.9.1.8 10.9.1.8 Identify Regions (C_GetRegions)

Utilizes the region masks file and spot location to determine the valid regions for the spot location

10.9.1.9 10.9.1.9 Interpolate DEM (E_CalcDEM)

Utilizes the spot location, the Global DEM file, and the DEM mask file to determine the DEM elevation for the specified spot.

10.9.1.10 10.9.1.10 Calculate Slope & Roughness (E_CalcSlope)

Utilizes the sigma of the gaussian waveform, transmitted pulse width, and receiver impulse width to calculate the slope and roughness.

10.9.1.11 Create L1B Quality Statistics (update_GLA06QA)

Combines QA data from the previous six processes to create QA statistics for the Level 1B Elevation Computation subsystem

10.9.1.12 10.9.1.12 Create L1B Quality Statistics

Combines QA data from the previous six processes to create QA statistics for the Level 1B Elevation Computation subsystem

10.9.2 L2 DFDs and their Descriptions

Below is a breakdown of each of the elevation processes into subprocesses. Each subprocess corresponds to a Fortran 90 subroutine that is called by the elevation manager

10.9.2.1 Calc Reg Params (E_OceanParm, E_LandParm)

Calculates the region specific parameters that have not already been determined earlier by the other routines.

10.9.2.2 Create L2 Elevations QA (update_GLA12QA, update_GLA13QA, update_GLA14QA, update_GLA15QA)

Combines QA data from the processes 5.2.2, 5.2.3, and 5.2.4 to create QA statistics for the Level 2 Elevation Computation subsystem.

10.9.2.3 Create Elevation QA Statistics (wrapUpQAP06, wrapUpQAP12_15)

Wraps up and writes to file the QA Statistics for the Level 1B and 2 Elevation Computation subsystems. WrapUpQAP06 will handle the Level 1B subsystem, while wrapUPQAP12_15 will handle the Level 2 subsystem.

Section 11

GLAS_Atm

11.1 Overview

GLAS_Atm is a core GSAS PGE. It uses the Atmosphere subsystem to create GLAS Level 1B and 2 data from the Level 1 GLAS atmosphere data products. GLAS_Atm will read the GLA02 file created by GLAS_L1A and the ANC36 file created by Atm_Anc to create the GLA07-11 products.

11.2 Function

The function of the Levels 1B and 2 Atmosphere Computations subsystem is to create atmosphere parameters for the standard data products GLA07-11 and to generate associated meta-data and quality assessment (QA) data.

11.3 Design Approach

The following design criteria are specific to GLAS_Atm

- GLAS_Atm fully uses the standard routines from the model GSAS PGE.
- GLAS_Atm can perform partial processing. However, due to the 20 second buffering, the Level 2 data is always processed together even under reprocessing scenarios. Data products GLA08-11 are always created together.
- The Level 1B product (GLA07) is output at one record per 1 sec.
- The processing of Level 2 data is buffered for 20 seconds irrespective of time gaps between data records.
- The Level 2 products (GLA08-11) are output at one record per 4 seconds.
- Cloud products are reported at once per 4 seconds, 1 second, and 5 Hz from 21 to 0 km, and at 40 Hz below 10 km.
- Aerosol products are reported at once per 4 seconds from 21 to 0 km and at once per 20 sec from 41 to 21 km.
- Twenty second averaging requires that at least ten seconds of valid profiles are available. Likewise, four second averaging requires that at least two seconds of valid profiles are available.
- Met data sets at times before and after the time of the profile are interpolated to the time of the profile. If either of the met data sets are missing, then the available met data set is used without interpolation. If no met data sets are available, then standard atmosphere data are used instead

11.4 Input and Output Files

Table 11-1 lists the required inputs to GLAS_Atm. Table 11-2 lists the outputs created by GLAS_Atm. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding these files..

Table 11-1 GLAS_Atm Inputs

| File Spec | Type | Source | Short Description |
|-----------------|-------------------|--------------|---|
| anc01*.dat | Dynamic Ancillary | met_util | Meteorological subset files. Data sets at times before and after the time of the profile are interpolated to the time of the profile. If either of the ANC01 data sets are missing, then the available ANC01 data set is used without interpolation. If no ANC01 data sets are available, then standard atmosphere data are used instead. |
| anc04*.dat | Dynamic Ancillary | UTexas | IERS Polar Motion and Earth Rotation Data File. |
| anc07*_0000.dat | Static Ancillary | Science Team | Error file. |
| anc07*_0001.dat | Static Ancillary | Science Team | Global constants file. |
| anc07*_0002.dat | Static Ancillary | Science Team | Atm constants file. |
| anc07*_0005.dat | Static Ancillary | Science Team | L1A constants file. |
| anc08*.dat | Dynamic Ancillary | UTexas | Precision Orbit file. |
| anc09*.dat | Dynamic Ancillary | UTexas | Precision Attitude file. |
| anc12*_0000.dat | Static Ancillary | Science Team | DEM file. |
| anc12*_0001.dat | Static Ancillary | Science Team | DEM mask file. |
| anc13*.dat | Static Ancillary | Science Team | Geoid file. |
| anc18*.dat | Static Ancillary | Science Team | Standard atmosphere file. |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion file. |
| anc30*.dat | Static Ancillary | Science Team | Global aerosol categorization map file. |
| anc31*.dat | Static Ancillary | Science Team | Aerosol tropospheric classification map file. |
| anc33*.dat | Dynamic Ancillary | Science Team | UTC time conversion file. |
| anc35*.dat | Static Ancillary | Science Team | Ozone file. |
| anc36*.dat | Dynamic Ancillary | atm_anc | Atmosphere Calibration file. |

Table 11-1 GLAS_Attn Inputs (Continued)

| File Spec | Type | Source | Short Description |
|-----------------|------------------|------------------|---------------------------------|
| anc38*.dat | Static Ancillary | Science Team | Multiple-scattering table file. |
| anc45*_0002.dat | Static Ancillary | Science Team | GLA02 metadata input file. |
| anc45*_0007.dat | Static Ancillary | Science Team | GLA07 metadata input file. |
| anc45*_0008.dat | Static Ancillary | Science Team | GLA08 metadata input file. |
| anc45*_0009.dat | Static Ancillary | Science Team | GLA09 metadata input file. |
| anc45*_0010.dat | Static Ancillary | Science Team | GLA10 metadata input file. |
| anc45*_0011.dat | Static Ancillary | Science Team | GLA11 metadata input file. |
| Control File | Control | ISIPS Operations | Control file. |
| gla02*_*.dat | Level-1A Product | GLAS_L1A | L1A Atmosphere product file. |
| gla05*_*.dat | Level-1B Product | GLAS_Alt (wf) | L1B Waveform product file. |

Table 11-2 GLAS_Attn Outputs

| File Spec | Type | Destination | Short Description |
|------------|-----------------|-------------|--|
| gla07*.dat | L1B Atm Product | Archive | L1B Global Backscatter product file. Contains full 532 nm and 1064 nm calibrated attenuated backscatter profiles at 5 times per second, and from 10 to -1 km, at 40 times per second. Also included will be calibration coefficient values and molecular backscatter profiles at once per second. |
| gla08*.dat | L2 Atm Product | Archive | L2 Planetary Boundary Layer and Elevated Aerosol Layer Height product file. Contains elevated aerosol layer height data consisting of top and bottom heights for up to 5 aerosol layers below 20 km at once per 4 seconds, and top and bottom heights for up to 3 aerosol layers above 20 km at once per 20 seconds. |

Table 11-2 GLAS_Atm Outputs (Continued)

| File Spec | Type | Destination | Short Description |
|------------------|-------------------|--------------------|---|
| gla09*.dat | L2 Atm Product | Archive | L2 Cloud Layer Height product file. Contains top and bottom heights for up to 10 layers below 20 km at once per 4 seconds, once per second, 5 times per second, and 40 times per second (below 4 km only). Ground heights will also be provided at each resolution. |
| gla10*.dat | L2 Atm Product | Archive | L2 Aerosol Vertical Structure product file. Contains cloud and aerosol backscatter and extinction cross section profiles. |
| gla11*.dat | L2 AtmProduct | Archive | L2 Thin Cloud/Aerosol product file. Contains optical depths for clouds for up to 10 layers, the planetary boundary layer, and aerosols for up to 8 layers. |
| qap07*.dat | L2 Atm Quality | QA | L1B Global Backscatter quality file. |
| qap08*.dat | L2 Atm Quality | QA | L2 Planetary Boundary Layer and Elevated Aerosol Layer Height quality file. |
| qap09*.dat | L2 Atm Quality | QA | L2 Cloud Layer Height quality file. |
| qap10*.dat | L2 Atm Quality | QA | L2 Aerosol Vertical Structure quality file. |
| qap11*.dat | L2 Atm Quality | QA | L2 Thin Cloud/Aerosol quality file. |
| anc06*.dat | Dynamic Ancillary | ISIPS Operations | Standard metadata/processing log file. |

11.5 Functions

shows the top-level structure chart of GLAS_Atm. The basic processing algorithm is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)

- Print the control file (Print_Cntl)
- Write version info (Write_LibVer, Write_AncVer)
- Read ancillary files (ReadAnc)
- Write execution flags information (Write_eCntl)
- Until all data are processed...
 - Input data to process (ReadData)
 - Execute the Atm_Manager

Close all files and generate summaries (MainWrap).

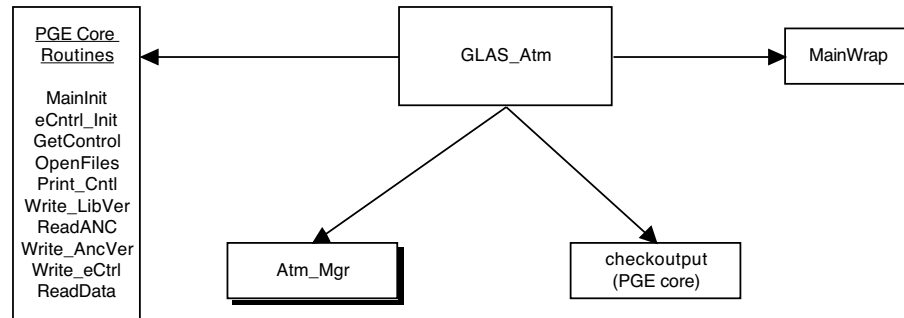


Figure 11-1 GLAS_Atm Structure Chart

11.5.1 PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer
- ReadANC
- Write_AncVer
- Write_eCntl

- ReadData
- MainWrap

11.5.2 Atm Manager (Atm_Mgr)

The Atm Manager controls execution of the Atmosphere subsystem, passes variables from the input GLA02 product to the output GLA07-11 products, and handles granule start/stop. The manager controls execution of the science algorithms based on flags received from GLAS_Atm. Figure 11-2 shows the Atm_Mgr structure chart.

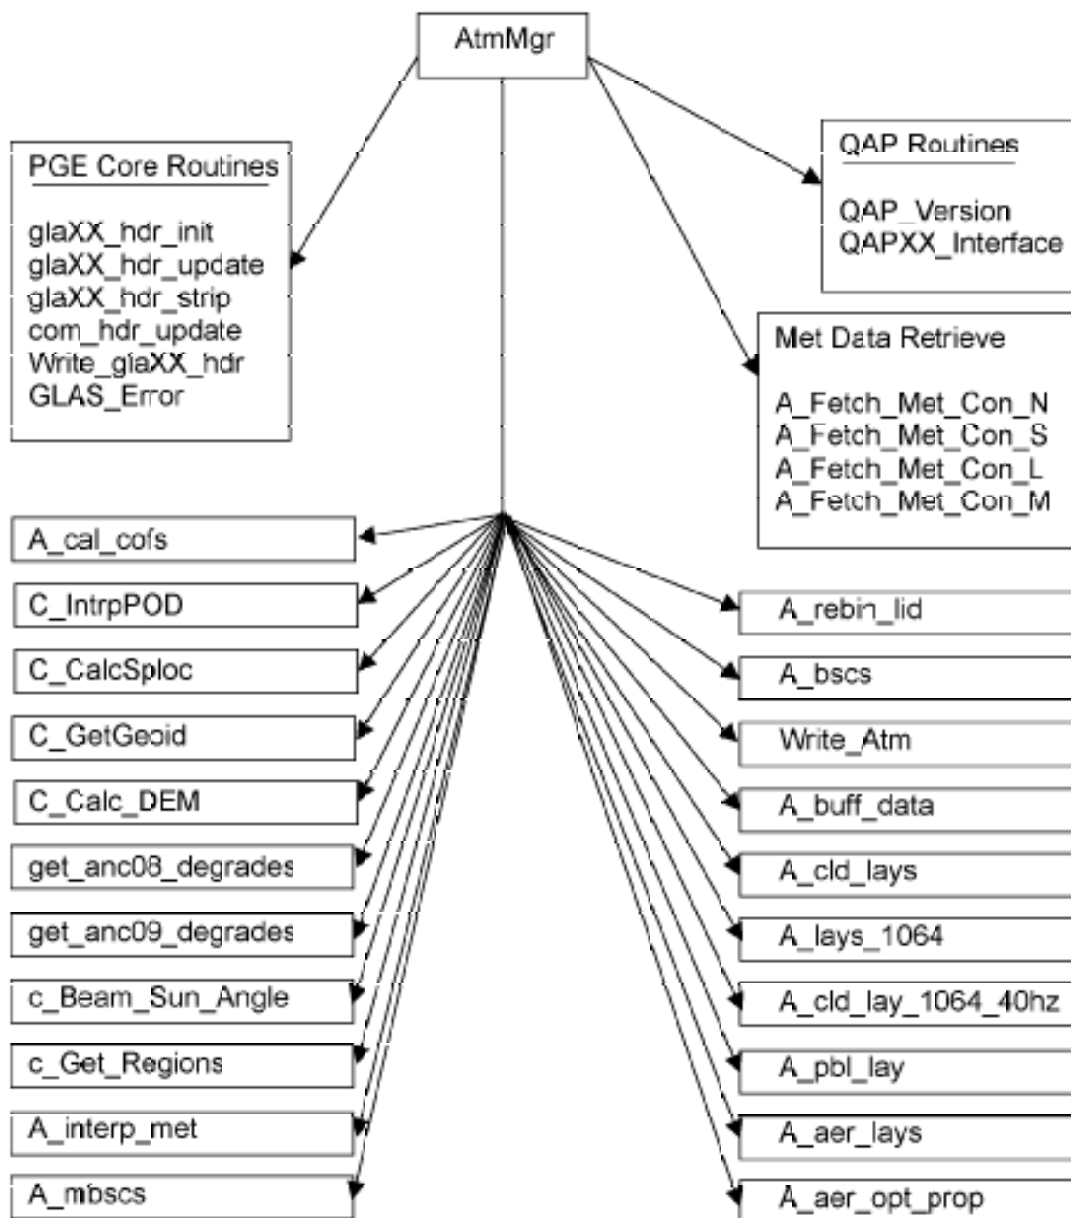


Figure 11-2 Atm_Mgr Structure Chart

Figure 11-3 shows a flow chart of the Atm Manager..

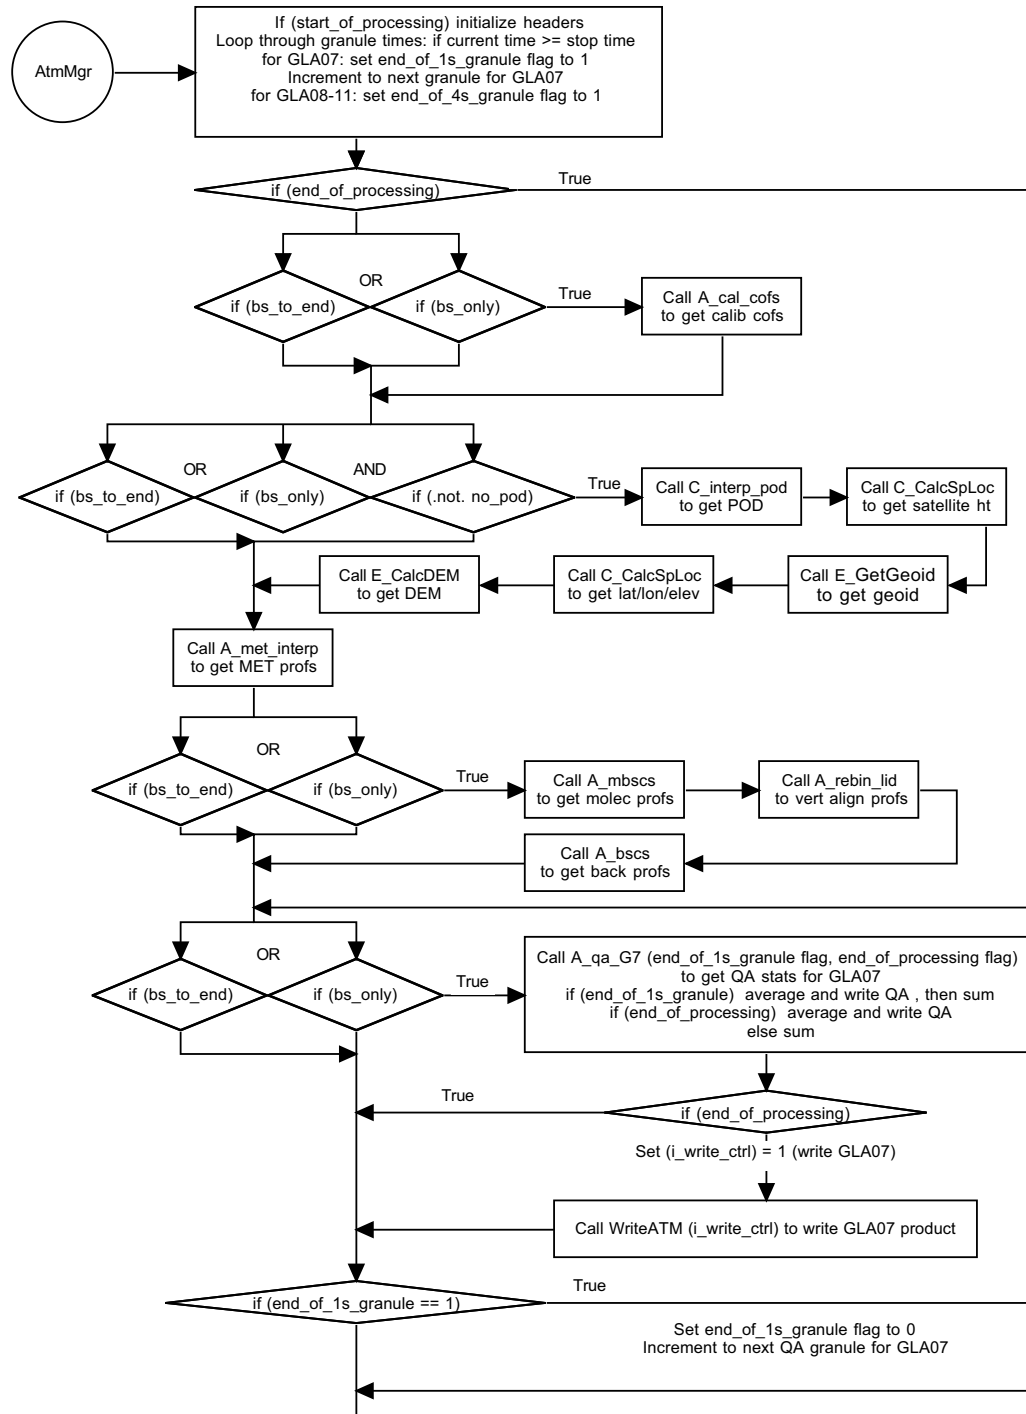


Figure 11-3 ATM Manager - Part 1

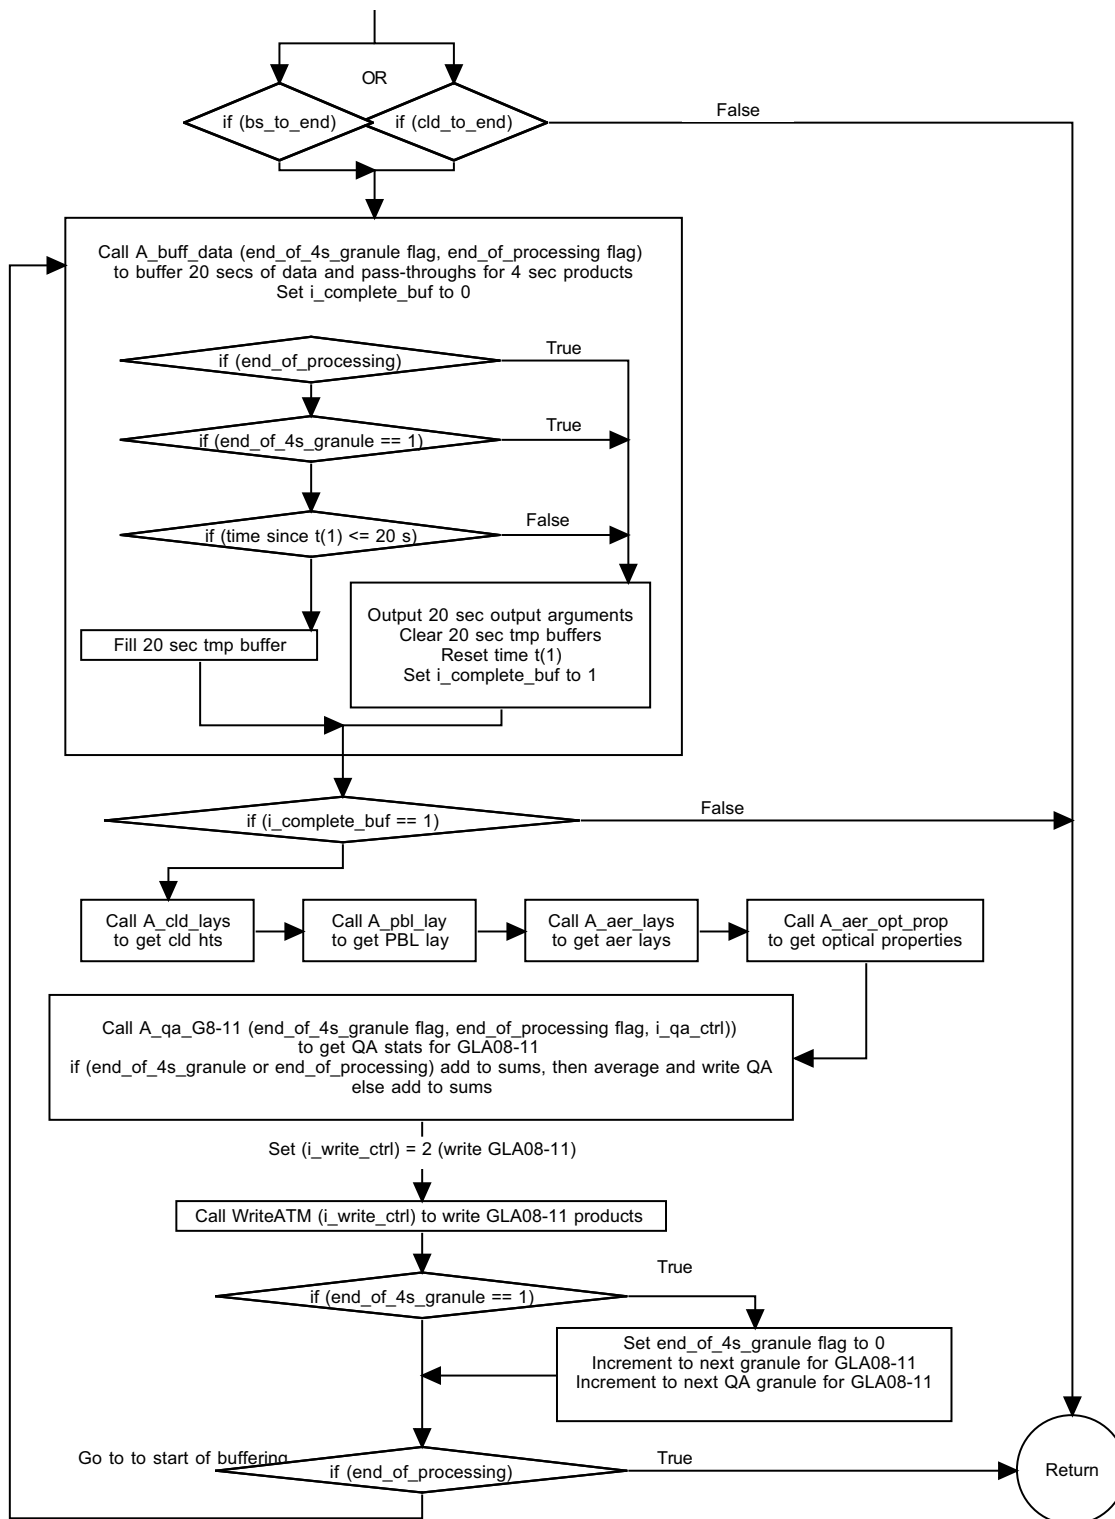


Figure 11-4 ATM Manager - Part 2

Atm_Mgr is passed arrays of output file control structures and execution flags. It accesses product and algorithm data directly from the requisite public data structures. Execution flags are defined in eCntl_mod; file control structures defined in the fCntl_mod component of the exec_lib, and product/algorithm data within the GLA02 and GLA07-11 components of the product_lib.

The first thing the manager does is check for an end-of-granule condition within each defined output file by comparing the nominal time of data (set by ReadData_mod) with the appropriate stop time within the specific file data structure. If an end-of-granule condition is detected, wrap-up and final QA routines are called and the product and QA files are closed. If another granule of the same type has been specified in the control file, the manager opens the appropriate product and QA files and loops to verify the stop time of the new granule is greater than the nominal time of data.

After checking the granule times, processing begins. The manager calls A_cal_coefs to get calibration coefficients from ANC36. It then calls common library geolocation and DEM routines to compute position and elevation and A_interp_met to get meteorological data.

Next, the manager buffers the data and executes several science algorithms based on its execution flags and data availability. These algorithms are discussed in the DFD section. Each returns a flag indicating if the appropriate data product should be written. Values which are passed directly from one product to another are set appropriately.

QA routines are called to process QA information and the WriteAtm routine is called with the appropriate flags to write data to the product files. Before writing a record, WriteAtm verifies that the appropriate output file exists and that the nominal time of data is greater than the start time specified in file control structure. If the nominal time is less than the start time, the data record is not written. An appropriate error message is written to ANC06 if a record is skipped.

11.6 Atm_Subsystem

The function of the ATM L1B Calculate Calibration Coefficients, Profile Locations, and DEM process is to geolocate the lidar data, calculate the range of the satellite to the geoid height, compute the DEM elevation for the profile location, and compute the 532 nm and 1064 nm calibration coefficients.

The function of the ATM L1B Calculate Backscatter Cross Section Profiles process is to create parameters for the Level 1b Global Backscatter Data Product GLA07 including meteorological profiles and 532 nm and 1064 nm attenuated backscatter cross section profiles.

The function of the ATM L1B Create QA Statistics and Write ATM process is to create Level 1B granule QA statistics, write the QAP07 QA product files, and write the GLA07 data product files.

The function of the ATM L2 Buffer 20 Seconds process is to buffer 20 seconds of Level 1b data for input into the level 2 processes. The processing of Level 2 data is buffered for 20 seconds irrespective of time gaps between data records.

The function of the ATM L2 Calculate Layer Heights process is to create parameters for the Level 2 Global Planetary Boundary Layer and Elevated Aerosol Layer Heights Product

GLA08 and the Level 2 Global Cloud Heights for Multi-layer Clouds Product GLA09. This process determines, at several resolutions, the top and bottom elevations of multiple cloud and aerosol layers, ground detection heights, and the planetary boundary layer (PBL) height.

The function of the ATM L2 Calculate Optical Properties process is to create parameters for the Level 2 Global Aerosol Vertical Structure Data Product GLA10 and the Level 2 Global Thin Cloud and Aerosol Optical Depths Data Product GLA11. This process creates cloud and aerosol backscatter cross section profiles and extinction cross section profiles. Optical depths for multiple cloud and aerosol layers and the planetary boundary layer are also created.

The function of the ATM L2 Create QA Statistics and Write ATM process is to create Level 2 granule QA statistics, write the QAP08-11 QA product files, and write the GLA08-11 data product files

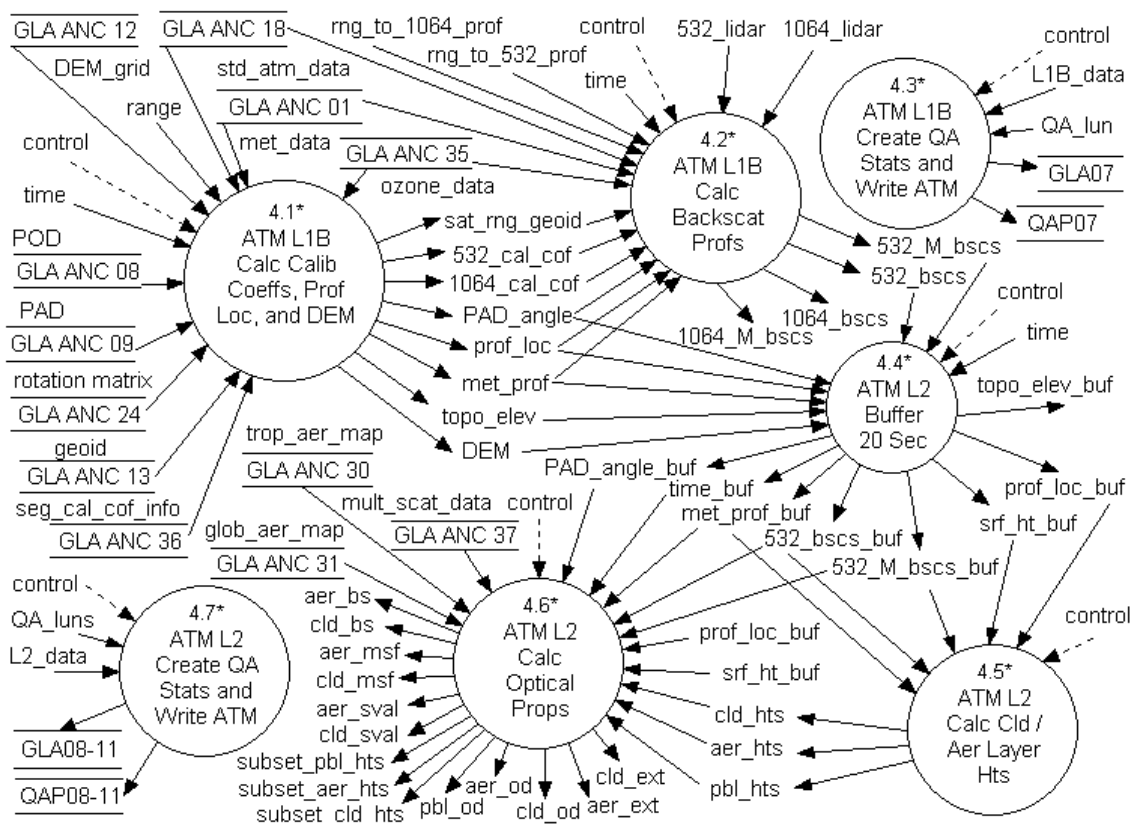


Figure 11-5 Atmosphere Subsystem Processes

11.6.1 DFDs and their Descriptions

Below is a breakdown of each of the atmosphere processes into subprocesses. Each subprocess corresponds to a Fortran 90 subroutine (name in parentheses) that is called by the atmosphere manager. Below are general comments:

- Subprocesses do not call each other, but are called in turn by the atmosphere manager (AtmMgr) which is itself a subroutine. Therefore data are passed as arguments

between subprocesses. Likewise, data products are written by a separate subprocess and not by the subprocesses creating the output data.

- Only subprocesses directly called by the atmosphere manager are shown in the diagrams.
- Each subprocess that shows a dotted control line in the diagram is under control which means that it is only selectively called by the atmosphere manager based upon the processing scenario selected in an input control file.
- Each subprocess calls a common error routine (GLAS_Error) when an error condition occurs. Depending on the severity of the error, the processing may continue or stop, but in any case, all error messages are written to a common ancillary log file (ANC06).

11.6.1.1 ATM L1B Calculate Calibration Coefficients, Profile Locations, and DEM Subprocesses

The ATM L1B Calculate Calibration Coefficients, Profile Locations, and DEM process is divided into five subprocesses. Following is a description of each subprocess:

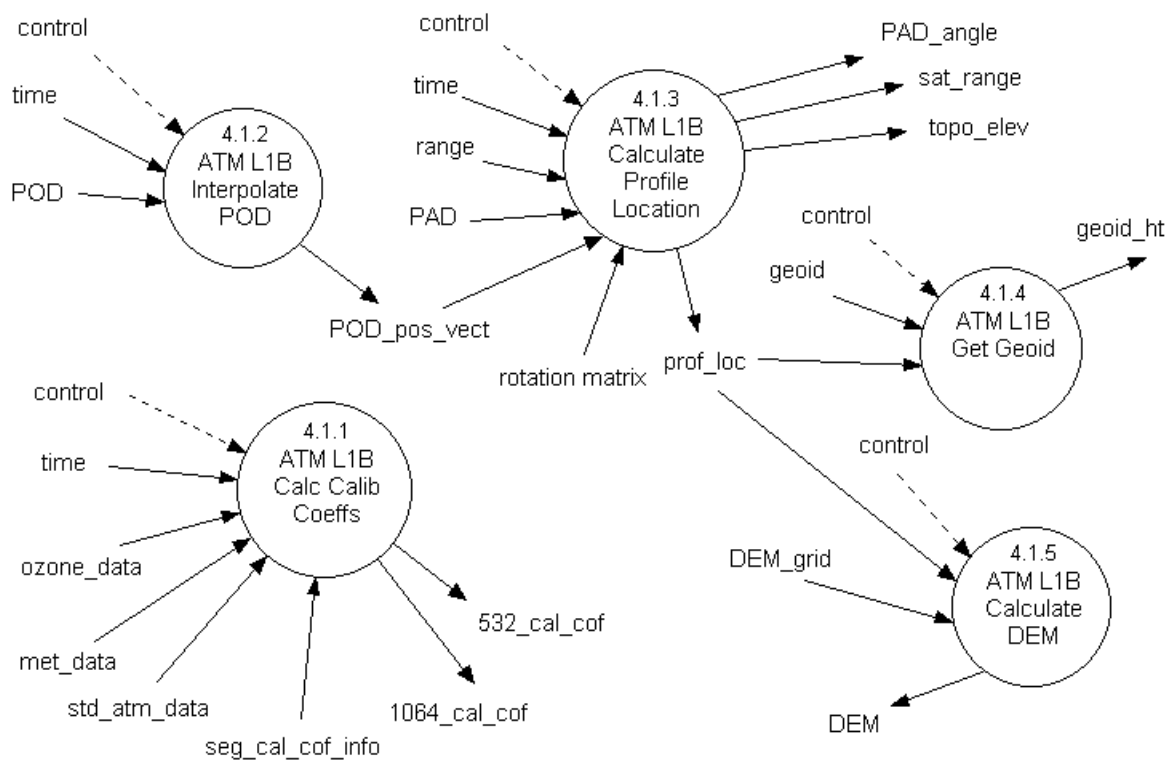


Figure 11-6 ATM L1B Calculate Calibration Coefficients, Profile Locations, and DEM Subprocesses

11.6.1.1.1 ATM L1B Calculate Calibration Coefficients (A_cal_cofs)

Reads a file containing the entire granule's worth of 532 nm and 1064 nm backscatter calibration coefficients output in x minute segments. Depending on options used in the ancillary atmosphere constants file, 532 nm and 1064 nm calibration coefficients are calculated for

each second of the granule. Options include averaging the segment coefficients or using lab-measured coefficients instead, since the calculated coefficients, especially the one at 1064 nm, may be unreliable due to low signal at high altitude.

11.6.1.1.2 ATM L1B Interpolate POD (C_IntrpPOD)

Creates the precision orbit determination (POD) position vector based on time. This is a common routine used by several processes.

11.6.1.1.3 ATM L1B Calculate Profile Locations (C_CalcSpLoc)

Utilizes the POD position vector to generate the profile location at 1 second. This is a common routine used by several processes. It also computes the satellite range to ellipsoid. When the precision attitude determination (PAD) and range are input, it calculates the attitude angle and topographic elevation.

11.6.1.1.4 ATM L1B Get Geoid (C_GetGeoid)

Utilizes the profile location to generate the geoid height at that location. This is a common routine used by several processes. The geoid height is used to compute the satellite range to geoid.

11.6.1.1.5 ATM L1B Calculate DEM (E_CalcDEM)

Utilizes the profile location to generate the Digital Elevation Model (DEM) height at that location. This is a common routine used by several processes.

11.6.1.2 ATM L1B Backscatter Subprocesses

The ATM L1B Calculate Backscatter Cross Section Profiles process is divided into four subprocesses. Following is a description of each subprocess

11.6.1.2.1 ATM L1B Interpolate Met Data (A_interp_met)

Interpolates and combines meteorological (met) data and standard atmosphere data to generate met profiles at 1 second. Standard atmosphere data are used to augment the met data at higher altitudes and are used for the entire output profile if met data are unavailable.

11.6.1.2.2 ATM L1B Calculate Molecular Backscatter Cross Sections (A_mbscs)

Utilizes met profiles at 1 second to create 532 nm and 1064 nm molecular transmission profiles and backscatter cross section profiles at 1 second.

11.6.1.2.3 ATM L1B Vertically Align Profiles (A_rebin_lid)

Combines and vertically aligns 532 nm and 1064 nm lidar signals to create lidar profiles at 5 Hz and 40 Hz. For 532 nm, the 5 Hz profiles range from 41 to -1 km below the surface. For 1064 nm, the 5 Hz profiles range from 20 to -1 km below the surface. In both wavelengths, the 40 Hz profiles range from 10 to -1 km below the surface.

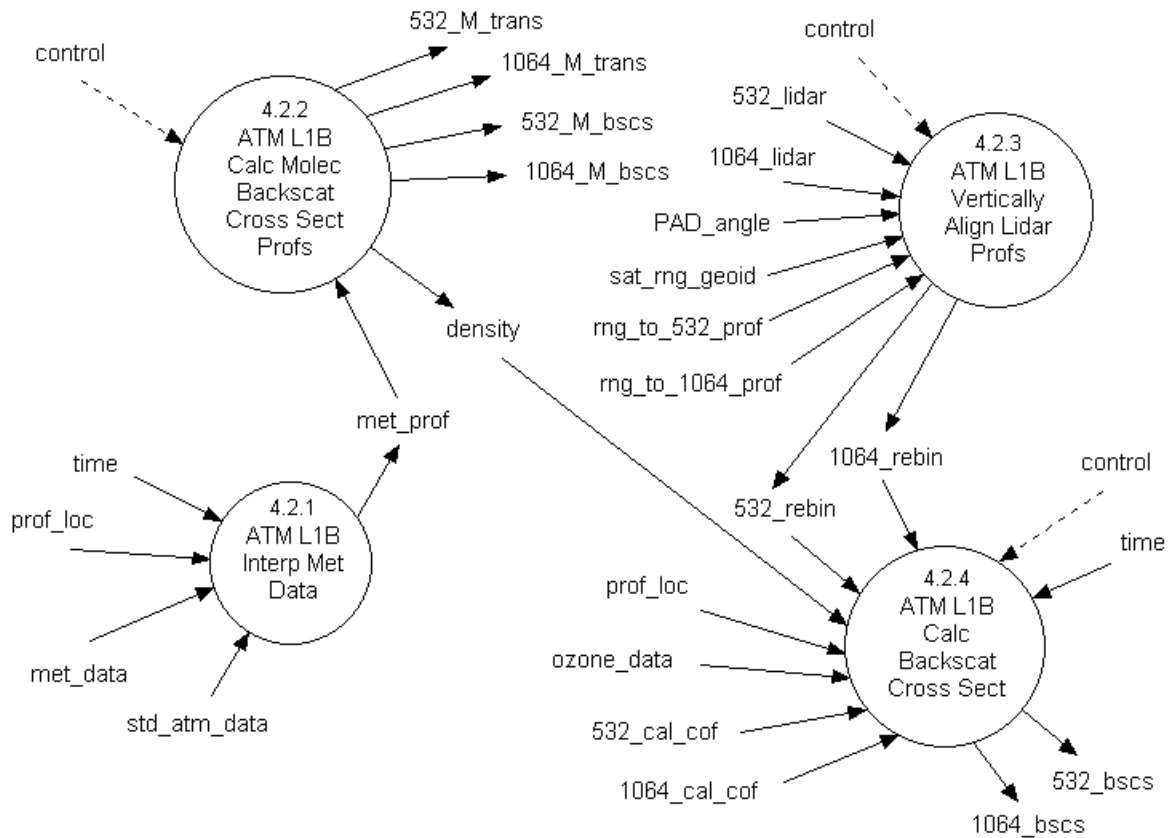


Figure 11-7 ATM L1B Backscatter Subprocesses

11.6.1.2.4 ATM L1B Calculate Backscatter Cross Section Profiles (A_bscs)

Calibrates the 532 nm and 1064 nm lidar profiles by the backscatter calibration coefficients to create the attenuated backscatter cross section profiles at 5 Hz and 40 Hz. If the 532 nm backscatter signal is saturated, it is an option to replace it with the corresponding 1064 nm backscatter value.

11.6.1.3 ATM L1B QA Statistics and WriteATM Subprocesses

The ATM L1B Create QA Statistics and Write ATM process is divided into two subprocesses. Following is a description of each subprocess

11.6.1.3.1 ATM L1B Create QA Statistics (A_qa_G7)

Creates Level 1B QA statistics for the granule and outputs them to the QAP07 QA product file.

11.6.1.3.2 ATM L1B Write Atmosphere (WriteAtm)

Writes Level 1B data to the GLA07 data product file.

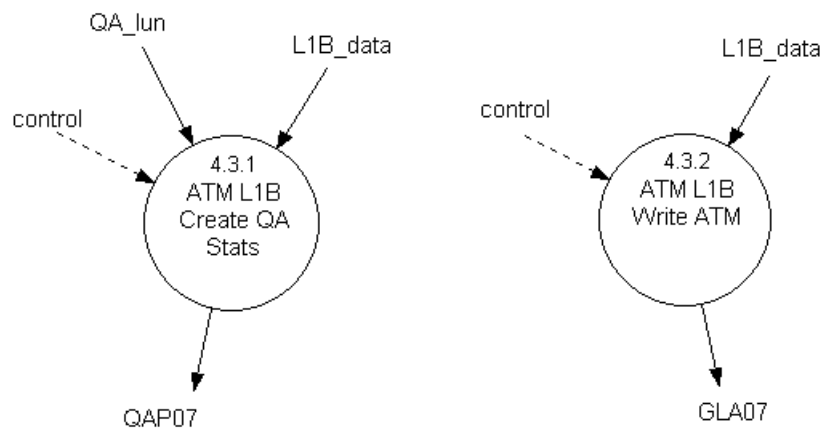


Figure 11-8 ATM L1B QA Statistics and WriteATM Subprocesses

11.6.1.4 ATM L1B L2 Buffer 20 Seconds Subprocess

The ATM L2 Buffer 20 Seconds process is a single process. Following is a description

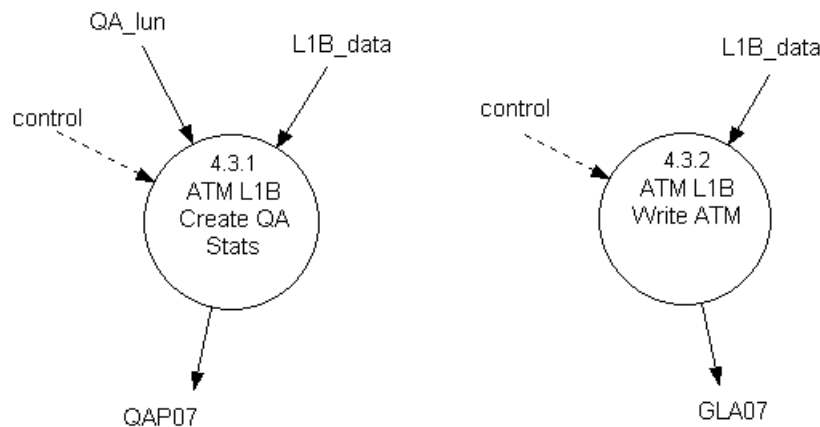


Figure 11-9 ATM L1B QA Statistics and WriteATM Subprocesses

11.6.1.4.1 ATM L2 Buffer 20 seconds (A_buff_data)

Buffers Level 1B data for 20 seconds for input into the Level 2 processing. This is necessary because lidar signals need to be collected for 20 seconds for high altitude aerosol detection. Twenty seconds of data are buffered irrespective of time gaps between data records.

11.6.1.5 ATM L2 Calculate Layer Heights Subprocesses

The ATM L2 Calculate Layer Heights process is divided into three subprocesses. Following is a description of each subprocess:

11.6.1.5.1 ATM L2 Calculate Cloud Layers (A_cld_lays)

Detects cloud layer heights and ground heights at once per 4 seconds, 1 second, 5 Hz, and 40 Hz. Up to 10 cloud layers may be detected below 20 km, except at the 40 Hz resolution where

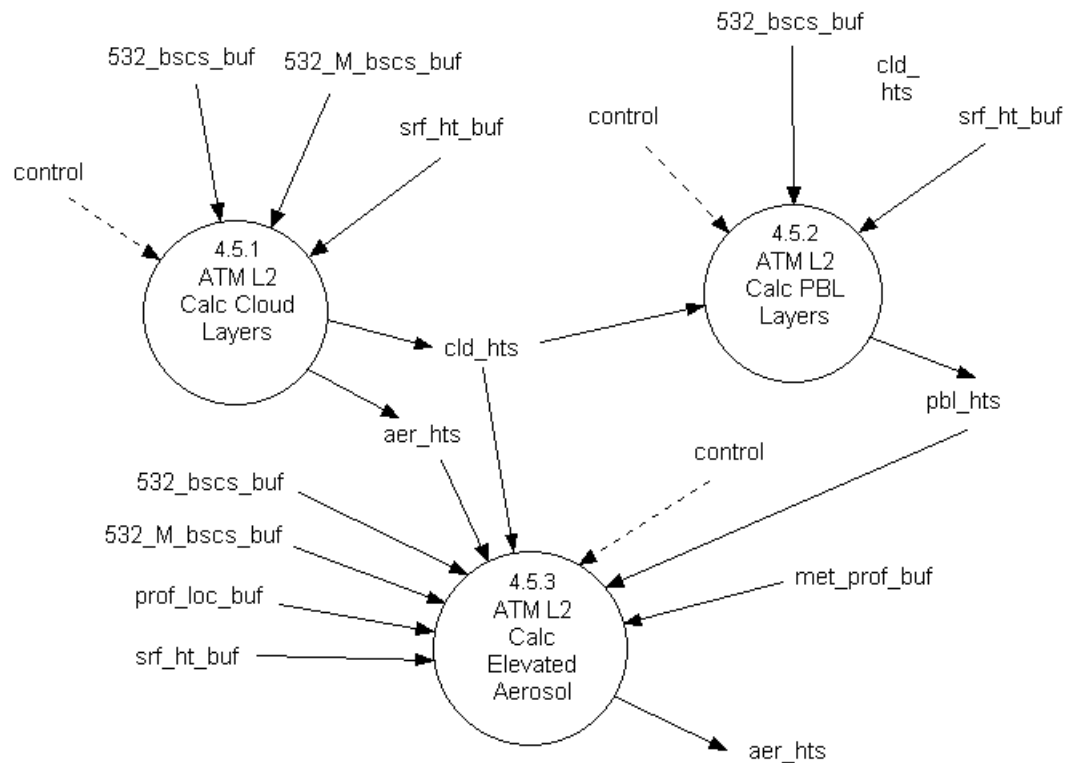


Figure 11-10 ATM L2: Cloud / Aerosol Layer Heights Subprocesses

up to 1 layer may be detected under 4 km. Layers may only be detected at the higher resolutions if they were detected at the lower resolutions. A cloud/aerosol discrimination routine discriminates some of the layers detected at once per 4 seconds as elevated aerosol layers.

11.6.1.5.2 ATM L2 Calculate PBL Layer (A_pbl_lay)

Detects planetary boundary layer (PBL) heights and ground heights at once per 4 seconds and 5 Hz.

11.6.1.5.3 ATM L2 Calculate Elevated Aerosol Layers (A_aer_lays)

Detects elevated aerosol layer heights. Up to 3 aerosol layers may be detected above 20 km at once per 20 seconds, while up to 5 aerosol layers may be detected below 20 km at once per 4 seconds. It is an option whether to use this algorithm to detect aerosol layers below 20 km or to keep the aerosol layers detected by the cloud detection algorithm.

11.6.1.6 ATM L2 Calculate Optical Properties

The ATM L2 Calculate Optical Properties process is a single process. Following is a description:

11.6.1.6.1 ATM L2 Calculate Aerosol Optical Properties (A_aer_opt_prop)

Creates cloud and aerosol backscatter and extinction cross section profiles, and cloud, PBL, and aerosol optical depths. Cloud data are created at 1 second while PBL and elevated aero-

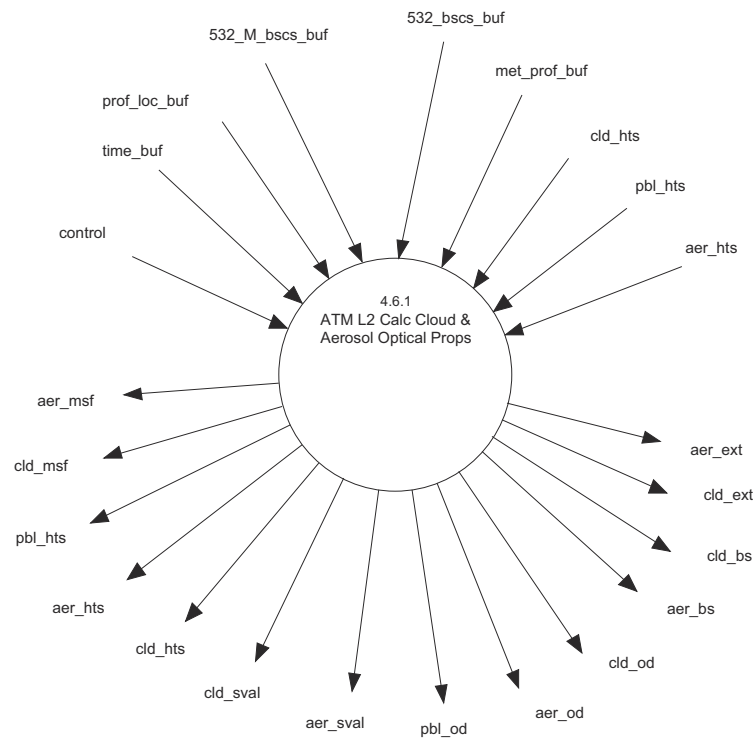


Figure 11-11 Atmosphere Subsystem: Optical Properties Subprocesses

sol data are created at once per 4 seconds. Optical depths for up to 10 cloud layers are calculated, while up to 8 elevated aerosol optical depths are created.

11.6.1.7 ATM L2 QA Statistics and WriteATM Subprocesses

The ATM L2 Create QA Statistics and Write ATM process is divided into two subprocesses. Following is a description of each subprocess

11.6.1.7.1 ATM L1B Write Atmosphere (WriteAtm)

Writes Level 2 data to the GLA08-11 data product files. Data products GLA08-11 are always created together. Aerosol layer heights are written to GLA08, cloud layer heights are written to GLA09, cloud and aerosol backscatter and extinction profiles are written to GLA10, and cloud and aerosol optical depths are written to GLA11.

11.6.2 Structure Charts

The following structure charts illustrate the organization of the atmosphere computations software modules. Modules are called top to bottom and from left to right. Input variables point downwards to the modules that are receiving them while output variables point upwards from the module which created them. Control is not an argument, but indicates which modules are only selectively called by the atmosphere manager for partial reprocessing.

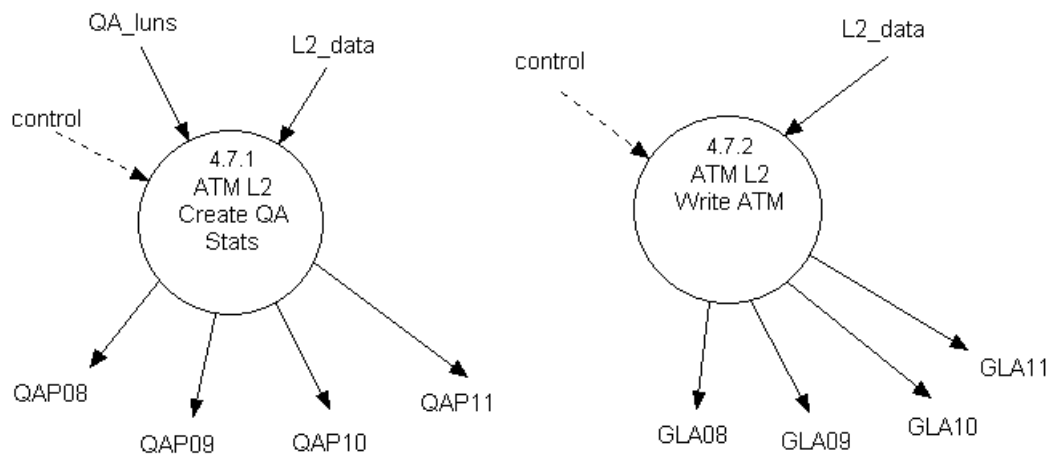


Figure 11-12 ATM L2 QA Statistics and WriteATM Subprocesses

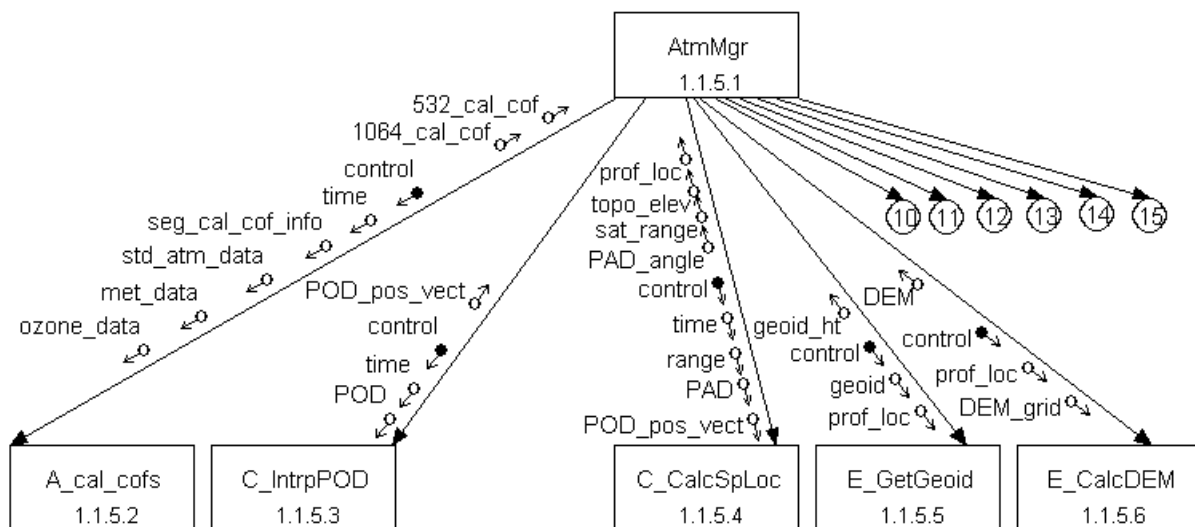


Figure 11-13 ATM Calibration Coefficient / Profile Location / DEM Modules

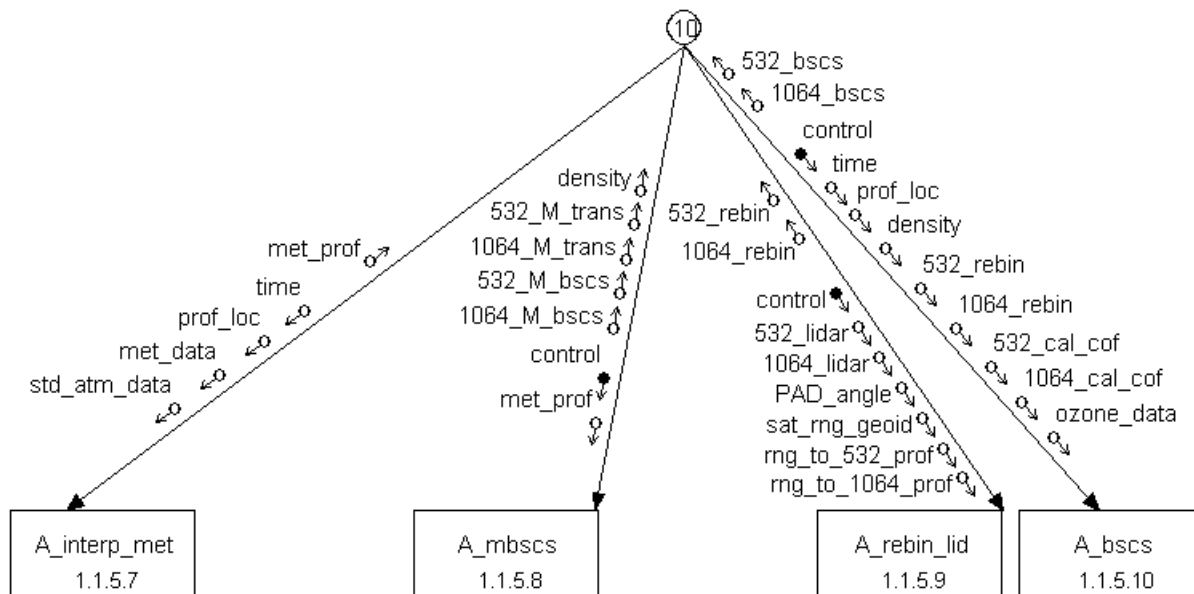


Figure 11-14 ATM Backscatter Modules

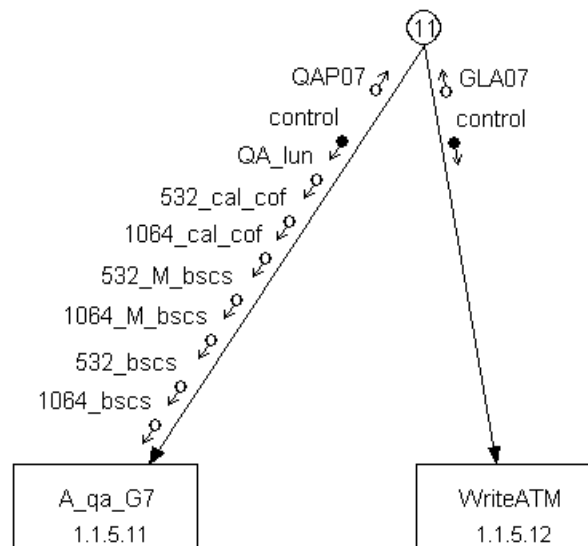
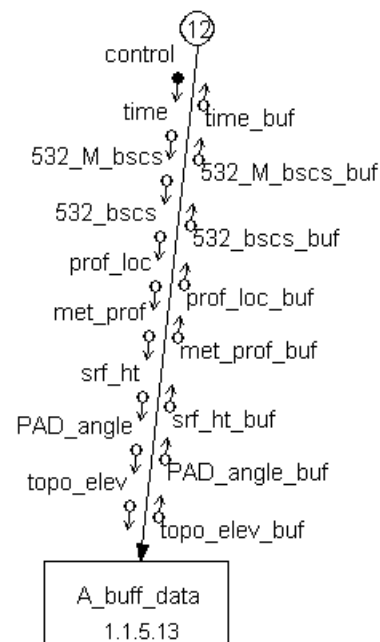
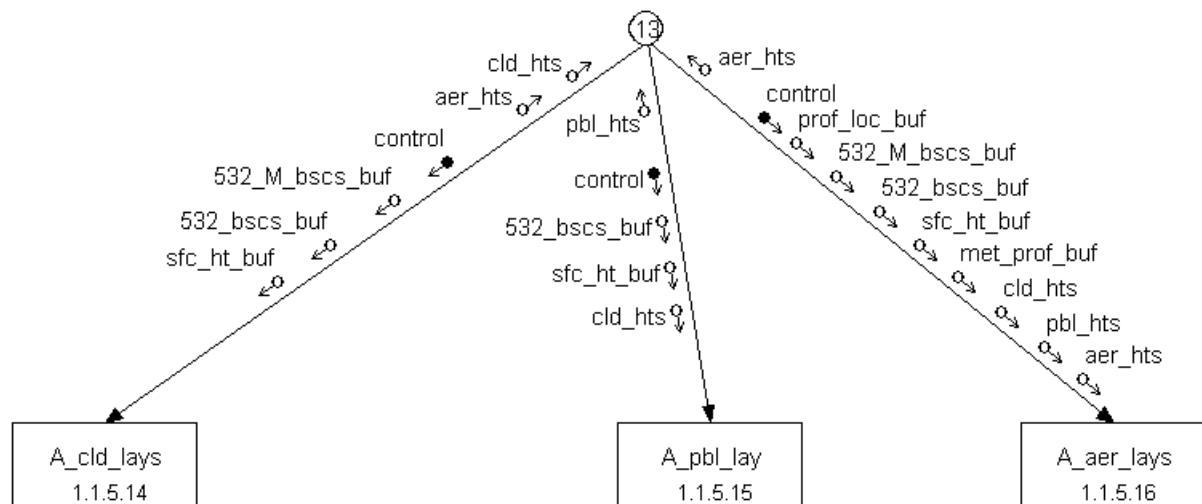
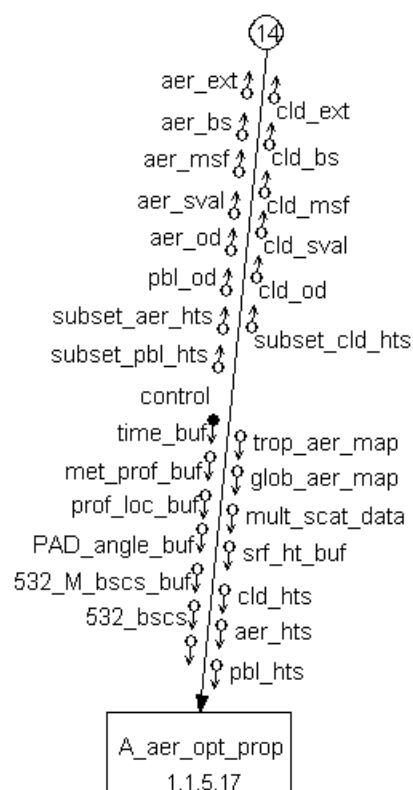
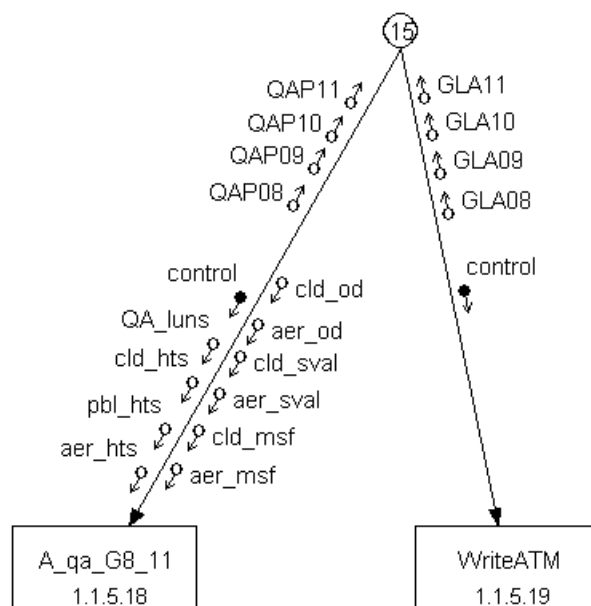


Figure 11-15 ATM L1B QA Statistics / Write ATM Modules

**Figure 11-16 ATM 20 sec Buffering Module****Figure 11-17 ATM Cloud / Aerosol Layer Heights Modules**

**Figure 11-18 ATM Optical Properties Module****Figure 11-19 L2 QA Statistics / Write ATM Modules**

Section 12

GLAS_Reader

GLAS_Reader is a utility GSAS PGE.

12.1 Function

GLAS_Reader is a utility GSAS PGE. It reads various GLAS files and creates human-readable text output files.

12.2 Design Approach

The following design criteria are specific to GLAS_Reader

- GLAS_Reader fully uses the standard routines from the model GSAS PGE.
- Output files are named by adding extensions to the input file name.
- GLAS_Reader provides a rudimentary user interface when executed without a control file command-line argument.

12.3 Input and Output Files

Table 12-1 lists the potential input files to GLAS_Reader. All or some of these files may be specified. Note, however, that GLA00 APID files may not be specified without also specifying a corresponding ANC29 file. See the appropriate section of this document or the GLAS Data Products Specifications Volumes for details regarding the non-specific files.

Table 12-1 GLAS_Reader Inputs

| File Spec | Type | Source | Short Description |
|---------------|-------------------|--------------|---|
| anc01*_??.dat | Dynamic Ancillary | met_util | Subsetted meteorological files. There is a separate ANC01 file per data type. All of the ANC01 files must be specified. |
| anc07*_00.dat | Static Ancillary | Science Team | GLAS error file. |
| anc07*_01.dat | Static Ancillary | Science Team | GLAS global constants file. |
| anc07*_02.dat | Static Ancillary | Science Team | GLAS waveform constants file. |
| anc07*_03.dat | Static Ancillary | Science Team | GLAS elevation constants file. |
| anc07*_04.dat | Static Ancillary | Science Team | GLAS atmosphere constants file. |
| anc07*_05.dat | Static Ancillary | Science Team | GLAS L1A constants file. |
| anc08*.dat | Dynamic Ancillary | UTexas | Precision orbit file. |
| anc12*_01.dat | Static Ancillary | Science Team | DEM mask file. |

Table 12-1 GLAS_Reader Inputs (Continued)

| File Spec | Type | Source | Short Description |
|---------------------------|------------------------------------|----------------------|---|
| anc13*.dat | Static Ancillary | Science Team | Geoid file |
| anc16*.dat | Static Ancillary | Science Team | Ocean Tide file |
| anc17*.dat | Static Ancillary | Science Team | Load Tide file |
| anc18*.dat | Static Ancillary | Science Team | Standard Atmosphere file |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion file. |
| anc27*.dat | Static Ancillary | Science Team | Regional mask files. |
| anc30*.dat | Static Ancillary | Science Team | Aerosol file |
| anc31*.dat | Static Ancillary | Science Team | Troposphere file |
| anc32*.dat | Dynamic Ancillary | GLAS_L0proc | Frequency board to GPS time correlation file. |
| anc33*.dat | Dynamic Ancillary | Science Team | UTC time conversion file. |
| anc36*.dat | Dynamic Ancillary | atm_anc | Atmosphere Calibration file. |
| anc45*.dat | Static Ancillary | Science Team | Metadata input files. |
| Control File | Control | ISIPS Operations | Control file. |
| gla00*.dat/ ANC29*.dat | Level-0 APID/ Dynamic Ancillary | EDOS/ GLAS_L0proc | GLAS Level-0 APID files and the requisite ANC29 index file. |
| gla*.dat | GLAS Product | GSAS | GLAS Product files. |
| Gla*.qap | GLAS Product QA | GSAS | GLAS Product Quality Assurance file. |

GLAS_Reader will create an output file for each type of input file requested. GLAS_Reader will add a '.txt' extension to the name of the file which is processed. Time selection for the output files is based on the time specified with the input files or the user interface.

A corresponding ANC29 file is required to process GLA00 APID files. When processing GLA00 APID files, GLAS_Reader writes all output to the ANC29 text file, instead of to individual APID files. The benefit of this is that the output is created in time-aligned fashion. Also note that specific APID files may be processed even though the ANC29 file was created with a superset of the selected APIDs.

12.4 GLAS_Reader

The basic processing algorithm is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)

- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read ancillary files (ReadAnc)
- Write version info (Write_LibVer)
- Print ancillary files (PrintAnc)
- Print quality Assurance Files (PrintQAP)
- Until all input files are processed...
 - Read and write data until all data written (ReadData, PrintData)
- Close all files and generate summaries (MainWrap)

PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- Cntl_Init
- GetControl
- OpenFiles
- Print_Cntl
- ReadAnc
- Write_LibVer
- Write_eCntl
- PrintAnc
- PrintQAP
- ReadData
- PrintData
- MainWrap

Section 13

met_util

13.1 Overview

met_util is a GSAS utility which uses the minimum functionality of the GSAS core PGE model. met_util is simply a processing shell wrapped around wgrib legacy code.

13.2 Function

Met_util reads a WGRIB meteorological (MET) file and creates subset files (i.e. temperature, relative humidity, etc.).

13.3 Design Approach

- met_util sets up input/output files and uses a system call to execute the wgrib external program.
- met_util does not fully follow the model GSAS PGE.
- met_util does not perform multi-granule processing or allow for time selection.
- Implementation of the control files does not follow GSAS PGE conventions.
- No log/metadata (ANC06) file is created.

13.4 Input and Output Files

Table 13-1 lists the required inputs to met_util. Table 13-2 lists the outputs created by met_util. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files..

Table 13-1 met_util Inputs

| File Spec | Type | Source | Short Description |
|------------|-------------------|-----------|--|
| anc40*.dat | Dynamic Ancillary | GSFC DAAC | Input NCEP Global Analysis met file. 1 by 1 degree gridded data set with sampling every 6 hours. Variables included are temperature, geopotential height, and relative humidity at standard upper atmospheric pressure levels. The MET files are in the GRIB format, which is the WMO (World Meteorological Organization) standard for exchanging gridded binary data. |

Table 13-1 met_util Inputs

| File Spec | Type | Source | Short Description |
|---------------|------------------|------------------|-------------------------------|
| anc07*_06.dat | Static Ancillary | Science Team | Utility error/constants file. |
| Control File | Control | ISIPS Operations | Control file. |

Table 13-2 met_util Outputs

| File Spec | Type | Destination | Short Description |
|---------------|-------------------|--|--|
| anc01*_00.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological header file. Sub-setted NCEP Global Analysis file. |
| anc01*_01.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological precipitable water file. Subsetted NCEP Global Analysis file. |
| anc01*_02.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological height file. Sub-setted NCEP Global Analysis file. |
| anc01*_03.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological relative humidity file. Subsetted NCEP Global Analysis file. |
| anc01*_04.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological temperature file. Subsetted NCEP Global Analysis file. |
| anc01*_05.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological wind speed u file. Subsetted NCEP Global Analysis file. |
| anc01*_06.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological wind speed v file. Subsetted NCEP Global Analysis file. |
| anc01*_07.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological PBL height file. Subsetted NCEP Global Analysis file. |
| anc01*_08.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological specific humidity file. Subsetted NCEP Global Analysis file. |
| anc01*_09.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological above ground temperature file. Subsetted NCEP Global Analysis file. |
| anc01*_10.dat | Dynamic Ancillary | atm_anc GLAS_Atm GLAS_Alt (elev) | Meteorological total cloud cover file. Subsetted NCEP Global Analysis file. |

13.5 Functions

met_util includes the following functions:

- - M_read_control_mod.f90: Reads the control file and passes the input and output file names to the program.
- - wgrib: A stand alone 'C' program developed at NCEP to manipulate and decode GRIB files. This routine is used extensively to extract relevant MET parameters and create global data files. See <http://wesley.wwb.noaa.gov/wgrib.html> for details on wgrib.

13.6 Functional Overview

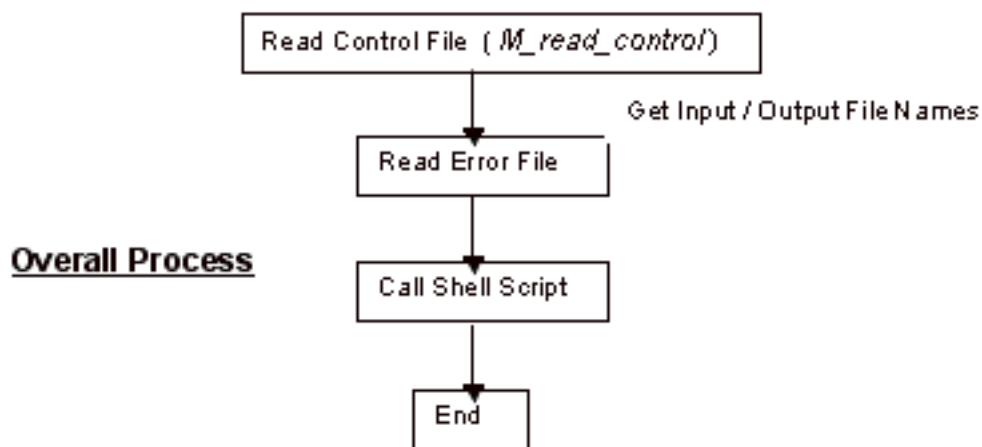


Figure 13-1 Process Flow Diagram: Overall Process

The driver calls the routine that reads the control file and passes back the input and output file names. These names are passed to a script which calls an executable (wgrib) that creates the subset files

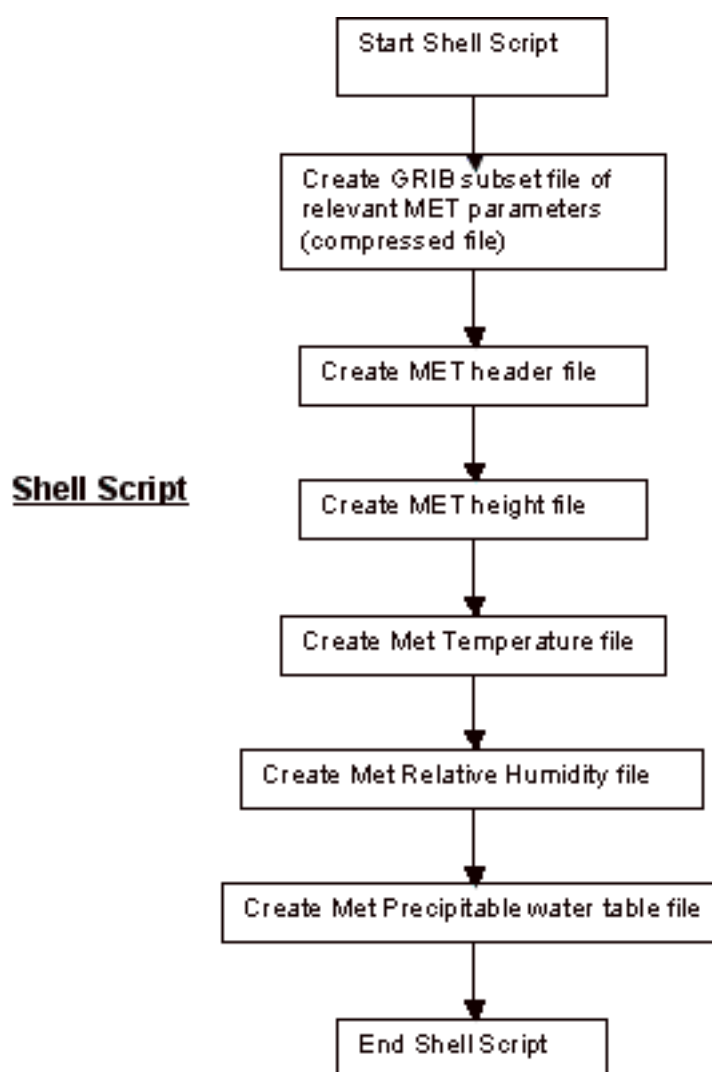


Figure 13-2 Process Flow Diagram: Shell Script

Section 14

reforbit_util

14.1 Overview

reforbit_util is a GSAS utility. It does not follow the GSAS core PGE model.

14.2 Function

The purpose of the reforbit_util program is to process a given Reference Orbit file for all ascending equatorial crossings. Each ascending equatorial crossing will be given a track number. The first track west of Greenwich (or on Greenwich) will be assigned a Track number of 1 and its time will be determined. All consecutive tracks after that (in increasing time order) will be assigned numbers 2, 3, 4, and so on. All tracks that were to the right of Track 1, will be wrapped around the last track on the left and numbered accordingly.

14.3 Design Approach

- reforbit_util does not follow the model GSAS PGE.
- reforbit_util does use facilities of the common libraries.
- reforbit_util does not perform multi-granule processing or allow for time selection.
- Implementation of the control files does not follow GSAS PGE conventions.
- No log/metadata (ANC06) file is created.

14.4 Input and Output Files

Table 14-1 lists the required inputs to reforbit_util. Table 14-2 lists the outputs created by reforbit_util. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files..

Table 14-1 createGran_util Inputs

| File Spec | Type | Source | Short Description |
|---------------|-------------------|------------------|-------------------------------|
| anc26*.dat | Dynamic Ancillary | UTexas | Reference orbit t file. |
| anc07*_06.dat | Static Ancillary | Science Team | Utility error/constants file. |
| Control File | Control | ISIPS Operations | Control file. |

14.5 Functions

reforbit_util includes the following functions:

- rd_reforb_cntrl_mod.f90: Reads the control file and passes the input and output file names to the program.

Table 14-2 createGran_util Outputs


| File Spec | Type | Destination | Short Description |
|------------|-------------------|-------------|---|
| anc22*.dat | Dynamic Ancillary | I-SIPS | Track file. The first record contains the average period of the tracks (in seconds), and the number of tracks in the reference orbit file. All subsequent records contain the longitude (in degrees E longitude), the track number, time in seconds relative to Track 1, the actual MJD time (in days), and the seconds of day. |
| anc43*.dat | Dynamic Ancillary | SCF | SCF track file. |
| anc28*.dat | Dynamic Ancillary | ISIPS | NOSE track file |

- `c_profRefOrbit_mod.f90`: Reads the Reference Orbit file and determines the ascending equatorial crossing longitudes and track numbers.
- `c_legacyintrpPOD_mod.f90`: Interpolates the reference orbit data to determine the position vectors for a given time.
- `c_calcploc_mod.f90`: Calculates the location (lat, lon) that corresponds to a given position vector.

14.6 Functional Overview

The driver calls the routine that reads the control file and passes back the input and output file names. It then opens these files and passes their lon numbers to `c_procRefOrbit`. The `c_procRefOrbit` routine will read the reference orbit file one record at a time and geolocate using `c_calcploc`. It will be looking for records that straddle the equator in the ascending direction. When such records are found, the exact equatorial crossing location and time is determined. This is done by determining the location at a time that is midway between the two records that straddle the equator. If the latitude is within tolerance limits, an ascending equatorial crossing has been found. If not, the location of the midpoint between the recently located point and one of the previous points on the other side of the equator is determined, and checked if it is on the equator. This process is repeated until the exact equator crossing is determined (within tolerance limits).

The `c_procRefOrbit` routine will then assign a track number to this equator crossing, and will continue the above process until all records are read or until it starts reading repeat tracks. The routine will then search through all the equator crossing longitudes to find the first crossing west of (or on) Greenwich. That track will be assigned a Track number of 1 and its time will be determined. All consecutive tracks after that (in increasing time order) will be assigned numbers 2, 3, 4, and so on. All tracks that were to the right of Track 1, will be wrapped around the last track on the left and numbered accordingly.

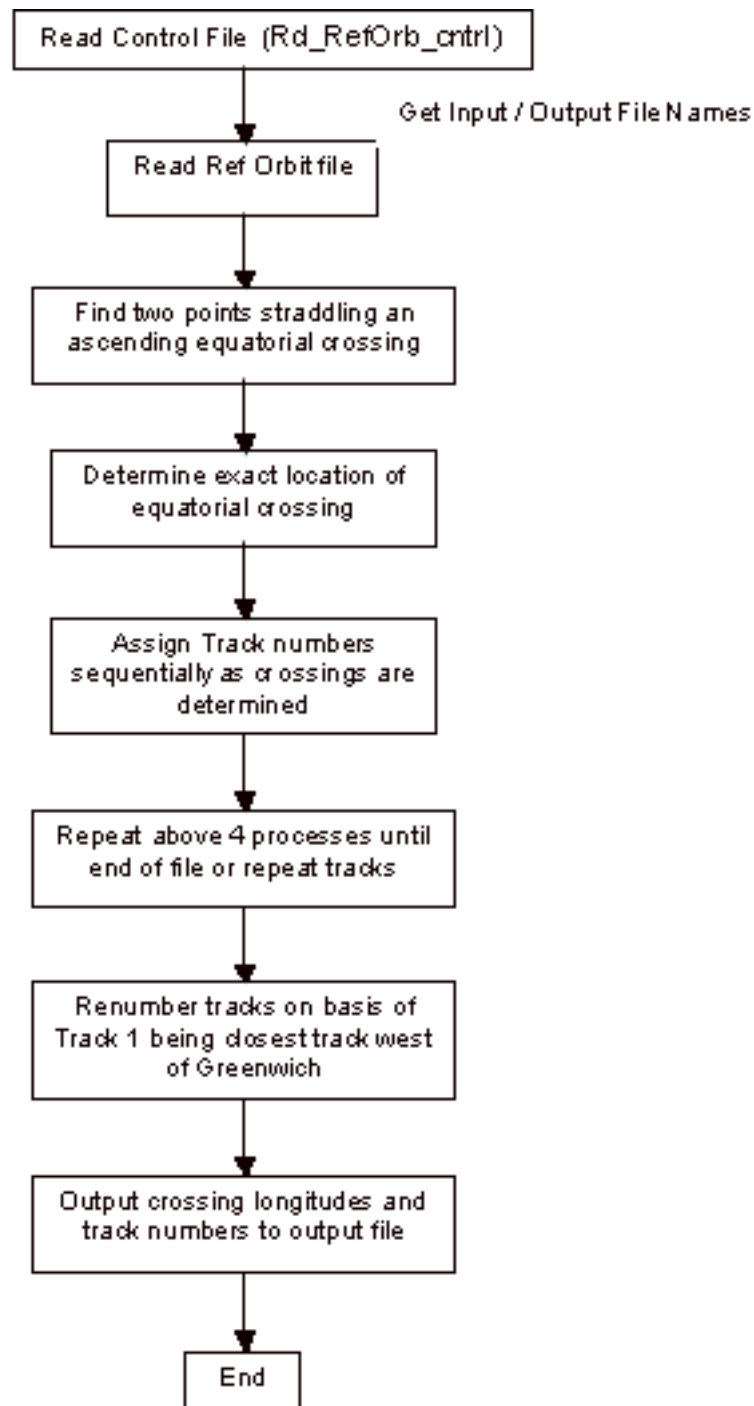**Figure 14-1 Process Flow Diagram**

Section 15

createGran_util

15.1 Overview

createGran_util is a GSAS utility. It does not use the functionality of the GSAS core PGE model.

15.2 Function

The purpose of the createGran_util program is to process a given Predicted Orbit file for all ascending equatorial crossings, and +/- 50 degree latitude crossings. The +/-50 degree latitude crossings will be designated by segment numbers. The segment numbers are defined as follows:

- Segment 1 - start of +50 degree latitude crossing (on the ascending portion of the track),
- Segment 2 - start of +50 degree latitude crossing (on the descending portion of the track),
- Segment 3 - start of a -50 degree latitude crossing (on the descending portion of the track),
- Segment 4 - start of a -50 degree latitude crossing (on the ascending portion of the track).

15.3 Design Approach

- createGran_util does not follow the model GSAS PGE.
- createGran_util does use facilities of the common libraries.
- createGran_util does not perform multi-granule processing or allow for time selection.
- Implementation of the control files does not follow GSAS PGE conventions.
- No log/metadata (ANC06) file is created.

15.3.1 Definitions

The reference orbit information will be stored in the Oracle database, and will henceforth be referred to as the Reference Orbit table. The Reference Orbit table will contain the following information for each of the Reference Orbits to be used during data processing:

1) The Repeat groundtrack phase (p):

where,

P=1 for 8-day

P=2 for 183-day

P=3 for transfer orbit

2) Reference Orbit number (r):

This number will start at 1, and increment each time we receive a new reference orbit. It will be unique for each set of ground tracks.

3) Instance (k):

The instance will start at 1, and increment by one every time we change from one reference orbit to another.

4) Cycle (ccc):

The cycle number will restart at 1 every time the instance number, k, changes. The cycle number will then increment within the instance every time track 1 for that orbit is reached. It should be noted that most instances will begin in an arbitrary track (not 1) because of how we are numbering the tracks.

5) Track (tttt):

Tracks are defined from a reference orbit. Each track begins and ends at the ascending equator crossing. Tracks will be numbered such that track 1 is the closest track to Greenwich from the west, and then contiguous in time after that. For transfer orbits, for which we have no predefined reference orbit, track 1 is the first track for which we have data for that instance, k.

6) Begin Time:

Begin time to use the reference orbit file.

7) End Time:

End time to use the reference orbit file.

8) Begin Track Number:

The first track number that is before the Begin time.

9) Time into Begin Track:

Time into the begin track. This will be difference between the Begin Time of the reference orbit file and the beginning time of the Begin Track.

10) Number of tracks per cycle:

The number of tracks per cycle for the reference orbit.

11) Begin Rev number:

TBD

12) Track file name:

The Track file name will be the name of the track file that corresponds to the reference orbit file. This file will contain all the tracks that are relevant to the reference orbit file,

along with their ascending node longitudes. These tracks will be numbered according to the convention mentioned above in 5.

15.3.2 Assumptions

- 1) A start and end time will be provided by UTCSR for each reference orbit. The start time will be provided before we get data or a predicted orbit file for that reference orbit. The end time will be provided at a later date.
- 2) The reference orbit file will be cataloged in the reference orbit ID table after the reference orbit tracks are created. The name of the reference orbit track file will be noted in this table.
- 3) For transfer orbits we will not receive real reference orbits from UTCSR, and will need to use the tracks generated from the predicted orbit file. This will be done by running the reference orbit track program on the predicted orbit file.
- 4) Each predicted orbit file will be for 48 hours, starting at noon on day $n-1$, and going until noon on day $n+1$, where n is the day for which we want to use the file. A day starts at 00 hours, and ends at midnight.
- 5) When a predicted orbit file is received, the reference orbit files pertaining to this predicted orbit file should already be in the reference orbit ID table.
- 6) For GLA01, 05, and 06, each granule starts at the beginning of each segment (for all tracks).
- 7) For GLA02, and GLA07, each granule starts at segment 1 of odd track numbers.
- 8) For GLA08 through GLA15, each granule starts at segment 1, when the track number MODed by 14 equals 1.
- 9) The start of each new instance, or the start of a new cycle, will automatically create a new granule.
- 10) During normal processing, the granule files will start with the first granule encountered in the predicted orbit file. When there is a new instance, then the first granule will be the granule preceding the first encountered granule. Its start time will be the actual start time of the data. The next granule will be the first encountered granule, with its start time. All subsequent granules will be numbered and processed as in the normal case.
- 11) A predicted orbit file can cover more than one reference orbit.
- 12) The SCF rev file will always start with rev number 1, and increment for every rev.
- 13) The cycle in a transfer orbit will span only one track (as opposed to 119 tracks in an 8-day orbit file).

15.4 Input and Output Files

Table 15-1 lists the required inputs to createGran_util. Table 15-2 lists the outputs created by createGran_util. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files..

Table 15-1 createGran_util Inputs

| File Spec | Type | Source | Short Description |
|---------------|-------------------|------------------|------------------------------|
| anc26*.dat | Dynamic Ancillary | UTexas | Predicted orbit file |
| anc42*.dat | Dynamic Ancillary | ISIPS | Reference orbit table |
| anc07*_01.dat | Static Ancillary | Science Team | Global constants file |
| anc07*_06.dat | Static Ancillary | Science Team | Utility error/constants file |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion |
| Control File | Control | ISIPS Operations | Control File |

Table 15-2 createGran_util Outputs

| File Spec | Type | Destination | Short Description |
|-----------|-------------------|-------------|--|
| -none- | Dynamic Ancillary | I-SIPS | Quarter rev file. Contains the quarter rev start time (in J2000 seconds), repeat ground track phase, reference orbit number, instance, product type (1 for quarter rev granule), cycle number, track number, and segment number for all the quarter rev granules determined from the predicted orbit file. |
| -none- | Dynamic Ancillary | I-SIPS | Two rev file. Contains the two rev start time (in J2000 seconds), repeat ground track phase, reference orbit number, instance, product type (2 for two rev granule), cycle number, track number, and segment number for all the two rev granules determined from the predicted orbit file.. |

Table 15-2 createGran_util Outputs (Continued)

| File Spec | Type | Destination | Short Description |
|-----------|-------------------|-------------|---|
| -none- | Dynamic Ancillary | I-SIPS | Fourteen rev file. Contains the fourteen rev start time (in J2000 seconds), repeat ground track phase, reference orbit number, instance, product type (3 for two rev granule), cycle number, track number, and segment number for all the fourteen rev granules determined from the predicted orbit file. |
| -none- | Dynamic Ancillary | I-SIPS | SCF rev file. Contains the relative rev numbers, starting from 1 (during each execution), that were determined from the given predicted orbit file. |

15.5 Functions

createGran_util includes the following functions:

- `rd_GranCntrl_mod.f90`: Reads the control file and passes the input and output file names to the program.
- `createGranule_mod.f90`: Reads the Predicted Orbit file and determines the ascending equatorial crossing longitudes and times, as well as the granule start times and locations (latitudes and longitudes). The results are output to the two files indicated in the control file.
- `c_legacyintrpPOD_mod.f90`: Interpolates the predicted orbit data to determine the position vectors for a given time.
- `c_calcploc_mod.f90`: Calculates the location (lat, lon) that corresponds to a given position vector.

15.6 Functional Overview

The driver calls the routine that reads the control file and passes back the input and output file names. It will then open two scratch files (a rev file, and a granule file). The LUN numbers of these files, along with the predicted orbit file, will be passed to the createGranule routine. This routine will read the predicted orbit file, and calculate the ascending equatorial crossing locations and times (which will be written to the rev file), and the segment locations and times (which will be written to the granule file). Once the rev and granule files have been populated, the utility will check to see what the processing mode has been set to. If it is set to REFORB, then the update_RefTab routine will be called. This routine will read the reference orbit ID file, and check to see which of the reference orbits do not have a begin track. It will then check if that reference orbit is a candidate for update. This will be determined by the reference orbit begin time and the predicted orbit start and stop time. The routine will then

determine the closest rev to the reference orbit begin time or the predicted orbit start time (which ever is greater). The track number corresponding to the closest rev will be determined from the reference orbit track file. The begin track number will then be determined, as well as the time into the begin track. If it is a transfer orbit, then the begin track will be set to 1, and the period will be set to the period of the rev file.

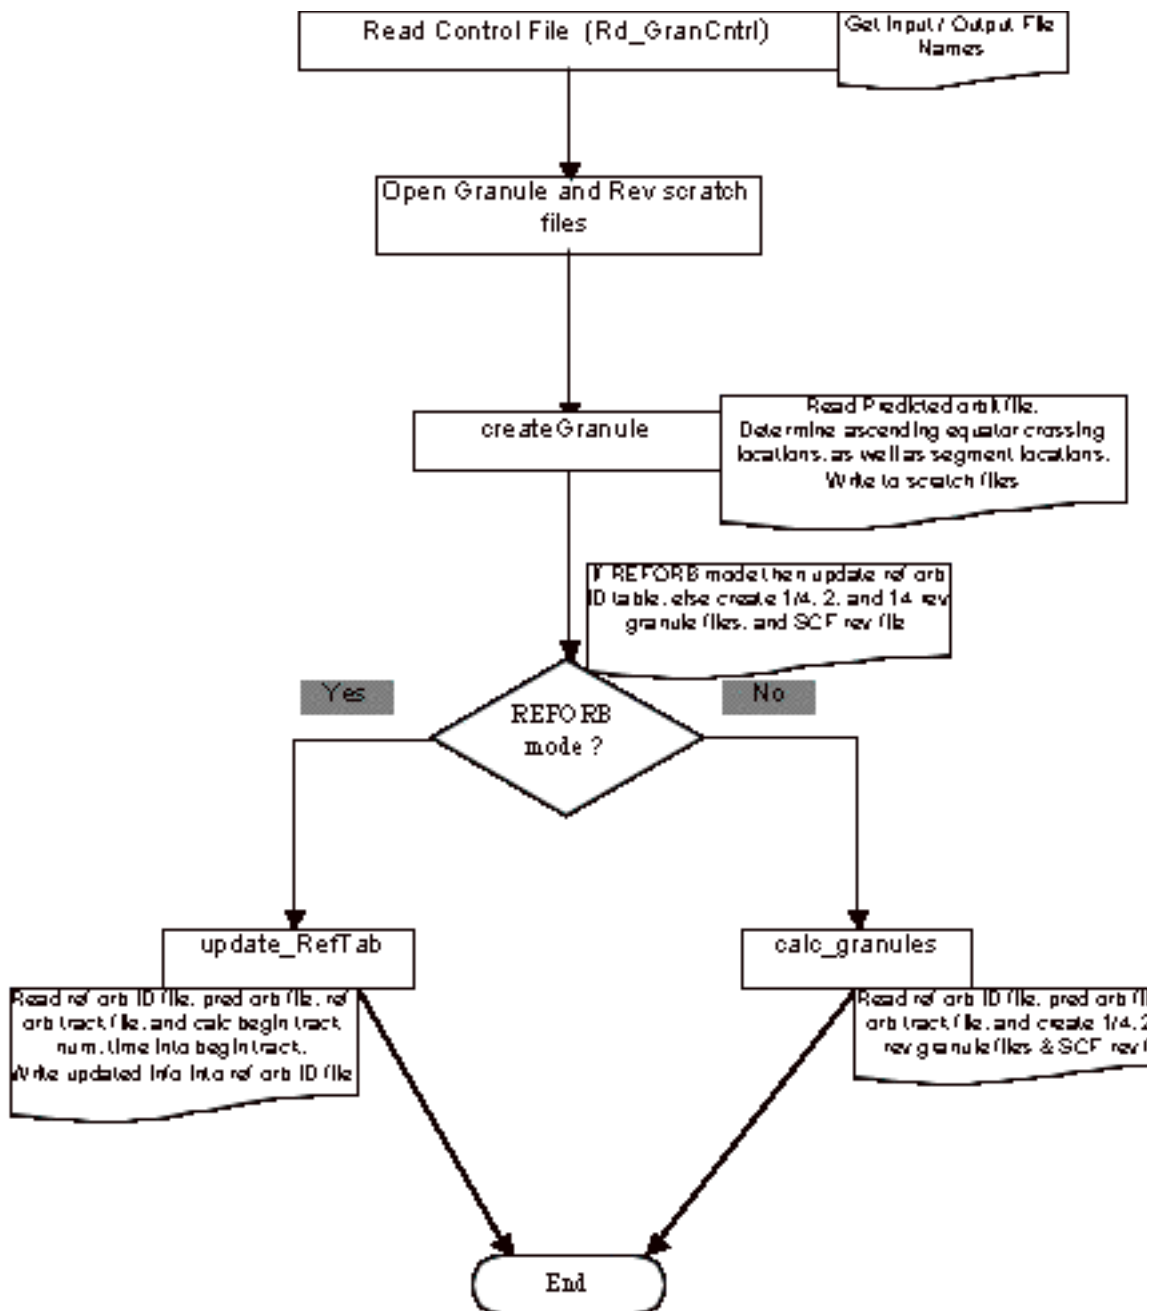


Figure 15-1 Process Flow Diagram

If the processing mode is set to PREDORB, then the calc_granules routine will be called. The predicted orbit file will be read, and processing will start from the predicted orbit start time or the reference orbit begin time (which ever is greater). The processing will continue until the reference orbit end time (if it is greater than zero), or the predicted orbit end time (which ever is less). The cycle number will be determined at the beginning on the basis of the granule start time and the reference orbit start time. The start track number will also be determined. All subsequent tracks will be increments of the start track. The 1/4 rev, 2 rev, and 14 rev granules will be written out to appropriate 1/4 rev, 2 rev, and 14 rev granule files. Using the information from the 1/4 rev information file, a SCF rev file will also be created. The first rev on that file will be rev 1, and its start time will be the start of the actual rev that the 1/4 rev information file started with. All subsequent revs will be increments of rev 1, and will ignore any change of reference orbit files during the run.

Section 16

atm_anc

16.1 Overview

atm_anc is a GSAS utility. It does not use the functionality of the GSAS core PGE model.

16.2 Function

Atm_anc reads a GLA02 product file and computes 532 nm and 1064 nm calibration coefficients for specified-time segments. The coefficients per segment are output to an ancillary (ANC36) file which is used in the level 1B atmosphere data processing. A second ancillary file (ANC44) contains the 532 and 1064 data for clouds that were detected above about 10 km.

16.3 Design Approach

- atm_anc does not follow the model GSAS PGE.
- atm_anc does use facilities of the common libraries.
- atm_anc does not perform multi-granule processing or allow for time selection.
- Implementation of the control files does not follow GSAS PGE conventions.
- No log/metadata (ANC06) file is created.

16.4 Input and Output Files

Table 16-1 lists the required inputs to atm_anc. Table 16-2 lists the outputs created by atm_anc. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files..

Table 16-1 atm_anc Inputs

| File Spec | Type | Source | Short Description |
|---------------|-------------------|--------------|---|
| gla02*.dat | L1A Product | GLAS_L1A | GLAS L1A Atmosphere product file. |
| anc01*_?.dat | Dynamic Ancillary | met_util | Subsetted MET files. There is a separate MET file per MET data type. All of the MET files (1-10) must be specified. |
| anc07*_00.dat | Static Ancillary | Science Team | GLAS error file. |
| anc07*_02.dat | Static Ancillary | Science Team | GLAS atmosphere constants file. |
| anc18*.dat | Static Ancillary | Science Team | Standard Atmosphere file |

Table 16-1 atm_anc Inputs (Continued)

| File Spec | Type | Source | Short Description |
|--------------|------------------|------------------|-------------------|
| anc35*.dat | Static Ancillary | Science Team | Ozone file |
| Control File | Control | ISIPS Operations | Control file. |

Table 16-2 atm_anc Outputs

| File Spec | Type | Destination | Short Description |
|------------|-------------------|--------------|------------------------------|
| anc36*.dat | Dynamic Ancillary | atm_util | Atmosphere Calibration file. |
| anc44*.dat | Dynamic Ancillary | Science Team | Atm 1064 Cirrus CAL File |

16.5 Functions

atm_anc includes the following functions:

- A_common_mod.f90: Contains common parameters and structures
- A_read_control_mod.f90: Reads the control file and passes back the input and output file names to the program
- A_prod_reader_mod.f90: Opens and reads the product file
- A_open_met_mod.f90: Opens and reads the MET and standard atmosphere files
- A_open_ozone_mod.f90: Opens and reads the ozone file
- A_sum_lidar_mod.f90: Sums and averages lidar data over time segments
- A_seg_cal_cofs_mod.f90: Creates 532 nm and 1064 nm calibration coefficients for each time segment and writes results to an output file

16.6 Functional Overview of Calibration Modules

This portion is taken from the document, "Calibration Processing ATBD v4.1.doc" written January, 2001 by Steve Palm of the GLAS lidar science team. The atmosphere ancillary utility was written to perform the algorithms described in this document. The A_sum_lidar_mod.f90 subroutine performs the functions of the SAM module described below and the A_seg_cal_cofs_mod.f90 subroutine performs the functions of the CALM module.

16.6.1 Segment Averaging Module (SAM)

The segment averaging reads in the output from GLA02 and produces segment averages of the data at two calibration heights. There is an upper calibration height and a lower calibration height. The upper calibration height is fixed (or at least specified by input from the constants file), while the lower calibration height is calculated from the minimum average signal between 8 and 15 km. SAM also eliminates profiles that are cloud contaminated from the segment average (this only applies to the lower calibration height). The steps (directly from the ATBD) are given below:

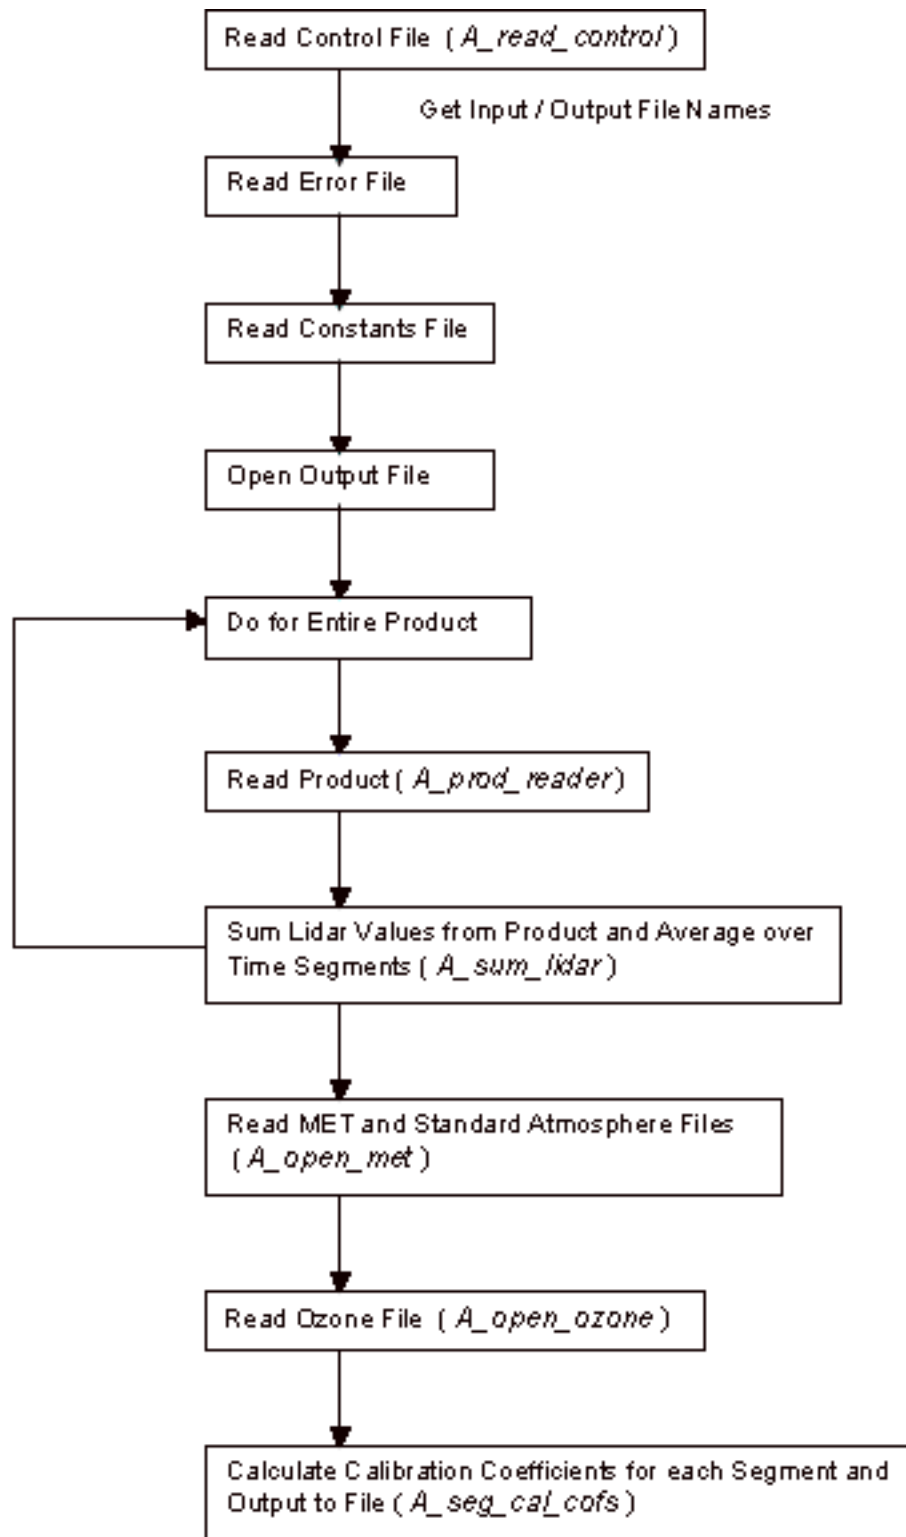


Figure 16-1 Process Flow Diagram

- 1) Construct a 1 Hz continuous profile of P' from -1 to 41 km for the 532 channel and from -1 to 20 km for the 1064 channel.
- 2) Add the background to 'summing' variables for each channel
- 3) Sum the P'532 data from H1 to H2 km and add it to a 'summing' variable. The values of H1 and H2 will be roughly 29 and 31, respectively, but will be changeable and read in from the constants file. Increment an 'upper counter'.
- 4) Check for clouds from 22 km to 8 km above ground. If clouds were not found for this second, then do the following (number 5 below):
- 5) Add the 1 Hz data (each bin) between 8 and 15 km to a 'summing' array for each channel. Increment a 'lower counter'.
- 6) If you have been doing this for t minutes, where t is read in from the constants file (default value: t=10), and at least 50 percent of the expected number of seconds have been summed (based on the 'upper counter'), then do the following:
 - compute the average 532 signal from H1 to H2 km for the entire 't' minute segment. Call this P2(532) from the sum generated in step 3 above.
 - If the 'lower counter' exceeds 50 percent of the expected number of seconds, then perform c, d, and e below. Otherwise, set P1(532) and P1(1064) to invalid and skip c, d and e. This effectively means that clouds have made calculations impossible at the lower height.
 - Compute the average 532 and 1064 profiles between 15 and 8 km from the summing array produced in steps 4 and 5 above.
 - Find the height of the minimum in the 532 average profile between 8 and 15 km call this hmin – this is the lower calibration height
 - Compute the average of the data between hmin+D and hmin-D km for both the 532 and 1064 channels, where D is in km and is read from the constants file (default = 1km). Call these P1(532) and P1(1064).
 - Compute the average background for the segment for each channel call these B532 and B1064
 - Output to a structure: P1(532), P1(1064), P2(532), B532, B1064, hmin, D, H1, H2 and: the latitude, longitude and time at 'm' points along the segment, where m is a variable read from the constants file, not to exceed 30. A default value for m is 20. These points would be t/m minutes apart.
- 7) 1. If after 't' minutes, less than 50 percent of the expected number of seconds have been summed (based on the 'upper counter'), then output missing values (invalid) for P1(532), P1(1064), P2(532), B532, B1064, and the other output described in 6g above.
- 8) Zero out summing variables, summing array and counters
- 9) Process next 't' minute segment in the same manner

16.6.2 CALibration Module (CALM)

The function of CALM is to compute the calibration constant for each of the segments output by SAM. The following steps summarize the process:

- 1) Read in the output from the segment averaging utility (run after GLA02 completes). This output contains segment averages (maybe 20-30 per granule) at the two calibration heights. For each segment average, there is maybe 10-20 latitude/longitude pairs (these are the *m* points along the orbit segment, described in 6g above). NOTE: If the SAM and CALM modules are combined into one module, obviously this step is skipped.
- 2) For each segment that has a valid (not invalid) P1(532), P1(1064) or P2(532) do steps 3-6 below. If all 3 of these are invalid, then there is no need to perform steps 3-6, below. In this case, we set the 3 calibration values to invalid and skip to step 9 below)
- 3) At each lat/lon point, compute the average attenuated molecular backscatter at the two calibration heights using ATBD equations 3.2.5 and 3.2.11 (here average means a vertical average – nominally 2 km). This requires access to the MET data at that lat/lon.
- 4) At each lat/lon point, compute the ozone transmission from the top of the atmosphere to the calibration height (ATBD, equation 3.2.8).
- 5) Compute the average attenuated molecular backscatter for the segment at the two calibration heights and the average ozone transmission for the segment (average of the values calculated in steps 3 and 4).
- 6) Compute the calibration constant as the ratio of the segment signal average to the average attenuated molecular backscatter times the average ozone transmission (ATBD, equation 3.2.6).
- 7) Repeat steps 2-6 for each of the 20-30 segment averages. This will yield 20-30 of the following: C1(532) – the lower 532 calibration constant, C1(1064) – the 1064 calibration constant and C2(532) – the upper 532 calibration constant.
- 8) For each segment, write out to a file the following: 1) The start and end time for the segment, 2) the 3 calibration values (532 upper and lower, and 1064 lower), 3) the standard deviations of the C values (s1(532), s1(1064) and s2(532)), 4) the three segment signal averages (532 upper and lower, 1064 lower), 5) the segment average attenuated molecular backscatter at the two calibration heights, 6) the segment average ozone transmission from the top of the atmosphere to the calibration height, 7) the center height and thickness of the upper calibration zone, 8) the center height and thickness of the lower calibration zone, 9) the segment average 532 background (B532). Note that if calibration points are thrown out during step 8 above, they are still output to the file, but have the value of ‘invalid’.

Section 17

GLAS_Meta

17.1 Function

GLAS_Meta is a utility GSAS PGE. It will read product header records and the ANC45 meta-data input files to create inventory-level EOS metadata files.

17.2 Design Approach

The following design criteria are specific to GLAS_Meta

- With the exception of ReadData, GLAS_Meta fully uses the standard routines from the model GSAS PGE.
- Only the header information is read from the product files.

17.3 Input and Output Files

Table 17-1 lists the required inputs to GLAS_Meta. Table 17-2 lists the outputs created by GLAS_Meta. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files..

Table 17-1 GLAS_Meta Inputs

| File Spec | Type | Source | Short Description |
|-----------------|-------------------|--------------|---|
| gla*.dat | GLAS Products | GSAS | GLAS product files. |
| anc45*.dat | Static Ancillary | Science Team | Product metadata input files. |
| anc04*.dat | Dynamic Ancillary | UTexas | IERS Polar Motion and Earth Rotation Data File. |
| anc46*_0004.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC09. |
| anc08*.dat | Dynamic Ancillary | UTexas | Precision Orbit file. |
| anc46*_0008.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC08. |
| anc09*.dat | Dynamic Ancillary | UTexas | Precision Attitude file. |
| anc46*_0009.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC09. |
| anc20*.dat | Dynamic Ancillary | UTexas | Predicted orbit file. |
| anc46*_0020.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC20. |
| anc22*.dat | Dynamic Ancillary | ISIPS | Track file. |

Table 17-1 GLAS_Meta Inputs (Continued)

| File Spec | Type | Source | Short Description |
|------------------|-------------------|------------------|--|
| anc46*_0022.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC22. |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion file. |
| anc46*_0025.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC25. |
| anc33*.dat | Dynamic Ancillary | Science Team | UTC time conversion file. |
| anc46*_0033.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC33. |
| anc37*.dat | Dynamic Ancillary | UTEXAS | Spacecraft CG file. |
| anc46*_0037.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC37. |
| anc39*.dat | Dynamic Ancillary | UTEXAS | GPS file. |
| anc46*_0039.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC39. |
| anc51*.dat | Static Ancillary | GSAS Operations | SRTM Track files. |
| anc46*_0051.dat | Static Ancillary | GSAS Operations | Ancillary metadata input file for ANC51 |
| anc52*.dat | Static Ancillary | Science Team | Saturation Correction Tables |
| anc46*_0052.dat | Static Ancillary | Science Team | Ancillary metadata input file for ANC52 |
| anc07*_0001.dat | Static Ancillary | Science Team | GLAS global constants file. |
| Control File | Control | ISIPS Operations | Control file. |

Table 17-2 GLAS_Meta Outputs

| File Spec | Type | Destination | Short Description |
|------------------|-------------|--------------------|---|
| gla*.met | Metadata | ECS | ECS-compliant metadata inventory files. |
| anc04*.met | Metadata | ECS | IERS Polar Motion and Earth Rotation metadata File. |
| anc08*.met | Metadata | ECS | Precision Orbit metadata file. |
| anc09*.met | Metadata | ECS | Precision Attitude metadata file. |
| anc20*.met | Metadata | ECS | Predicted orbit metadata file. |
| anc22*.met | Metadata | ECS | Track metadata file. |

Table 17-2 GLAS_Meta Outputs (Continued)

| File Spec | Type | Destination | Short Description |
|------------------|-------------------|--------------------|--|
| anc25*.met | Metadata | ECS | GPS/UTC conversion metadata file. |
| anc33*.mett | Metadata | ECS | UTC time conversion metadata file. |
| anc37*.met | Metadata | ECS | Spacecraft CG metadata file. |
| anc39*.met | Metadata | ECS | GPS metadata file. |
| Anc51*.met | Metadata | ECS | SRTM metadata file. |
| Anc52*.met | Metadata | ECS | Range saturation metadata file. |
| anc06*.txt | Dynamic Ancillary | ISIPS Operations | Standard metadata/processing log file. |

17.4 GLAS_Meta

The basic processing algorithm for GLAS_Meta is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read ancillary files (ReadAnc)
- Write version info (Write_LibVer, Write_AncVer)
- Loop through available Product and Ancillary Types...
 - Parse header and control data using appropriate ANC45/46 information to create inventory-level metadata.
- Close all files and generate summaries (MainWrap)

17.4.1 PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer

- ReadANC
- Write_AncVer
- MainWrap

17.4.2 Metadata Processing

The process of creating metadata files first begins with the GSAS library routines. Based on input file availability, the readGLAxx subroutine reads input product/ancillary header records and control information and parses the data into common and local header data structures. The common header data structure is further subsetting into a metadata substructure by matching header keywords with keywords found in the appropriate ANC45/46 file. The header is parsed in a very specific way. It is important to note that the first keyword found which does not match a keyword in the ANC45/46 files causes the rest of the header information to be stored in the common_header data structure (NOT in the metadata substructure). It is critical that the metadata information within the product headers be contiguous and consistent with the ANC45/ANC46 files. Inconsistency will prevent the metadata information from being filled correctly.

After the header information is parsed, WriteMetaFile walks through the ANC45/ANC46 keywords and finds appropriate values from the header metadata substructure. It then replaces default values found in the ANC45/ANC46 file with actual values contained within the product headers. It writes the keywords and values in a format specific to EOS inventory-level metadata.

17.4.3 ANC45/ANC46 File Updates

The manually created ANC45/ANC46 text files share information contained in the ECS descriptor files. The descriptor files are created in cooperation with ECS. There is a descriptor for each product and selected ancillary files. The descriptor files contain a section of comments on implemented changes, followed by collection and core (inventory) metadata information in ODL (Object Description Language) format. Changes made to the ECS descriptor files will produce a new MCF file and will be delivered to the developer from ECS when requested. MCF files contain strictly inventory/core metadata, and product specific attribute information. MCF files are in Object Description Language format.

The first section of the ANC45 file contains global metadata parameters, and remains the same for all products. The second section contains additional attributes. The last section contains the parameters/GCMD keywords that are specific to a particular product, and can be traced back to the collection level for a particular product. When a new MCF file is created by ECS it may have changes that will require the ANC45/ANC46 file to be changed. Addition or removal of additional attributes, or changes in the parameters are possible changes that would require an ANC45 change. Changes to the parameters or additional attributes must be coordinated with ECS, then the ANC45 can be edited by hand to make the changes. The format of the ANC45 file must not be altered outside of additional attribute or parameter container changes. The EOSDIS ICD Between ECS and SIPS Volume 0 Interface Mechanisms 423-41-57 explains the exchange of MCF files, and .met files between EOSDIS and I-SIPS.

The ANC46 file contains only the global metadata parameters section. Product specific attributes, and parameters have not been defined for the selected ancillary files that have descriptors.

Partial Sample of an ANC45 file

#

Global Metadata Parameters

#

ReprocessingPlanned = further update anticipated using enhanced PGE

ReprocessingActual = processed once

LocalGranuleID = NOT SET

ProductionDateTime = NOT SET

LocalVersionID = NO SET

OrbitNumber = NOT SET

EquatorCrossingLong = NOT SET

EquatorCrossingTime = NOT SET

EquatorCrossingDate = NOT SET

ShortName = NOT SET

VersionID = 1

InputPointer = NOT SET

RangeBeginningTime = NOT SET

RangeEndingTime = NOT SET

RangeBeginningDate = NOT SET

RangeEndingDate = NOT SET

PGEVersion = NOT SET

#

Additional Attributes

#

Additional_Attribute = Track

Track = NOT SET

Additional_Attribute = Track_Segment

Track_Segment = NOT SET

Additional_Attribute = ReferenceOrbit

ReferenceOrbit = NOT SET

Additional_Attribute = Instrument_State

Instrument_State = NOT SET

Additional_Attribute = Instrument_State_Date

Instrument_State_Date = NOT SET

Additional_Attribute = Instrument_State_Time

Instrument_State_Time = NOT SET

Additional_Attribute = Cycle

Cycle = NOT SET

Additional_Attribute = Instance

Instance = NOT SET

#

Parameters - Waveform

#

ParameterName=Waveform

AutomaticQualityFlag = Passed

AutoQualFlagExpl = Passed indicates parameter passed for specific automatic test; Failed, parameter failed specific automatic test.

OperationalQualityFlag= Inferred Passed

OpQualFlagExpl = Passed,parameter passed the specified operational test. Inferred Pass,parameter terminated with warnings. Failed parameter terminated with fatal errors.

ScienceQualityFlag = Inferred Passed

SciQualFlagExpl = Passed,parameter passed the specified science test. Inferred Pass,parameter terminated with warnings for specified science test. Failed parameter terminated with fatal errors for specified science test.

QAPercentMissingData = 0

QAPercentOutofBounds = 0

Section 18

GLAS_Tick

18.1 Function

GLAS_Tick reads ANC09, ANC32 and (optionally) GLA03 input files and creates ANC50_00 and ANC50_01 output files. The ANC50_00 contains merged ANC09/ANC32 information which is written at a GPS update event. The ANC50_01 contains 6 hour statistics for oscillator and engineering data.

18.2 Design Approach

The following design criteria are specific to GLAS_Tick.

- GLAS_Tick fully uses the standard routines from the model GSAS PGE.
- GLA03 processing is optional. GLAS_Tick performs GLA03 processing based on the presence of a GLA03 input file
- There are no execution scenarios for GLAS_Tick (besides that determined by the presence or absence of GLA03 inputs).

18.3 Input and Output Files

Table 18-1 lists the required inputs to GLAS_Tick. Table 18-2 lists the outputs created by GLAS_Meta. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files..

Table 18-1 GLAS_Tick Inputs

| File Spec | Type | Source | Short Description |
|--------------------------|-------------------|------------------|-------------------------------|
| anc07*_00.dat | Static Ancillary | Science Team | Error file. |
| anc07*_01.dat | Static Ancillary | Science Team | Global constants file. |
| anc07*_05.dat | Static Ancillary | Science Team | L1A constants file. |
| anc09*.dat | Dynamic Ancillary | UTexas | Precision Attitude file. |
| anc25*.dat | Dynamic Ancillary | Science Team | GPS/UTC conversion file. |
| anc32*.dat | Dynamic Ancillary | GLAS_L0proc | GPS time correlation file. |
| anc33*.dat | Dynamic Ancillary | Science Team | UTC time conversion file. |
| gla03*.dat (optional) | L1A Product | GLAS_L1A | L1A Engineering product file. |
| Control File | Control | ISIPS Operations | Control file. |

Table 18-2 GLAS_Tick Outputs

| File Spec | Type | Destination | Short Description |
|-----------------|-------------------|------------------|--|
| anc50*_0000.txt | Text file | ISF/Science Team | Merged ANC09/ANC32 file. |
| anc50*_0001.txt | Text file | ISF/Science Team | Frequency trend file. |
| anc06*.txt | Dynamic Ancillary | ISIPS Operations | Standard metadata/processing log file. |

18.4 GLAS_Tick

The basic processing algorithm for GLAS_Meta is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read ancillary files (ReadAnc)
- Write version info (Write_LibVer, Write_AncVer)
- Initialize output Headers
- Initialize Statistics
- Until all data are processed
 - Compute Statistics
 - Write Tick Data upon GPS Time Update
 - Write Engineering Statistics at desired frequency
- Close all files and generate summaries (MainWrap)

18.4.1 PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer
- ReadANC
- Write_AncVer

- MainWrap

18.4.2 Engineering Statistics Processing

Selected statistical Engineering parameters are computed at a 6 hour interval. Statistics reported include minimum, maximum, and mean. Precision problems are avoided by using offsets to perform computations on the deltas of parameters (as opposed to using the whole values). Common routines from the math library (lib_math) are used to ensure consistency.

18.4.3 GPS Update Processing

GPS update information is written only when a GPS update event occurs (nominally every 10 seconds.) Please reference the “Construction of the Lookup Table of GLAS Clock Oscillator Frequencies” memo by C. Field, X. Sun, and D. Hancock for algorithm specifications.

Section 19

GLAS_APID

GLAS_APID is a utility GSAS PGE. It will read ANC29, ANC32, and/or GLA00 APID files and create tab-delimited text output files of the data. Currently, the only APID supported is APID19. Future versions of this utility will provide support for APID12 and APID13.

19.1 Function

GLAS_APID creates tab-delimited text output files for ANC29, ANC32 and APID19. The APID19 data are split among multiple files, the data being separated by subpacket type.

19.2 Design Approach

The following design criteria are specific to GLAS_APID

- With the exception of ReadData, GLAS_APID fully uses the standard routines from the model GSAS PGE.
- Output files are named by adding extensions to the input file name.
- Multiple-input files (of differing types) is supported. Multiple-granule input is not supported since APID19 output granules must be multiple-granule.
- All products are output at one record per 1 sec. Only the first of the 40/second shot times is output in APID19.

19.3 Input and Output Files

Table 19-1 lists the required inputs to GLAS_APID. Table 19-2 lists the outputs created by GLAS_APID. See the GLAS Data Products Specifications Volumes or GLAS Science Data Management Plan for details regarding the these files. Those files which are only required by specific subsystems are noted within the table..

Table 19-1 GLAS_APID Inputs

| File Spec | Type | Source | Short Description |
|---------------|-------------------|------------------|--|
| gla00*_19.dat | Level-0 APID19 | EDOS | GLAS Level-0 APID19 files. |
| anc07*_00.dat | Static Ancillary | Science Team | GLAS error file. |
| anc07*_01.dat | Static Ancillary | Science Team | GLAS global constants file. |
| anc29*.dat | Dynamic Ancillary | GLAS_L1A | Index file correlating APID times. |
| anc32*.dat | Dynamic Ancillary | GLAS_L1A | GPS time correction file used for precision timing of GLAS data. |
| Control File | Control | ISIPS Operations | Control file. |

Table 19-2 GLAS_APID Outputs

| File Spec | Type | Destination | Short Description |
|------------------------|---------------------|--------------------|--|
| gla00*_19.dat.time.txt | Tab-delimited text. | User | Time-related APID19 parameters. |
| gla00*_19.dat.ac.txt | Tab-delimited text. | User | Altimeter-digitizer-related APID19 parameters. |
| gla00*_19.dat.pc.txt | Tab-delimited text. | User | Photon-counter-related APID19 parameters. |
| gla00*_19.dat.cd.txt | Tab-delimited text. | User | Cloud digitizer-related APID19 parameters. |
| gla00*_19.dat.time.txt | Tab-delimited text. | User | Time-related APID19 parameters. |
| gla00*_19.dat.gps.txt | Tab-delimited text. | User | GPS-related APID19 parameters. |
| gla00*_19.dat.ct.txt | Tab-delimited text. | User | C&T-related APID19 parameters. |
| anc29*.dat.txt | Tab-delimited text. | Users | Index file parameters. |
| anc32*.dat.txt | Tab-delimited text. | Users | GPS time correction parameters. |
| anc06*.dat | Dynamic Ancillary | ISIPS Operations | Standard metadata/processing log file. |

19.4 GLAS_APID

The basic processing algorithm is summarized below:

- Initialize (MainInit)
- Set the local execution flags (eCntrl_Init)
- Parse the Control File (GetControl)
- Open the specified files (OpenFiles)
- Print the control file (Print_Cntl)
- Read ancillary files (ReadAnc)
- Write version info (Write_LibVer, Write_AncVer)
- Write requested ANC29 data
- Write requested ANC32 data
- Loop through available APID Types...
 - If APID is input, ProcessAPID
- Close all files and generate summaries (MainWrap)

19.4.1 PGE Core Routines

PGE core routines are used exactly as defined in the Core PGE Section of this document.

- MainInit
- eCntrl_Init
- GetControl
- OpenFiles
- Print_Cntl
- Write_LibVer
- ReadANC
- Write_AncVer
- MainWrap

Maker

20.1 Overview

Maker is a GSAS utility, but it does not use the functionality of the GSAS core PGE model.

20.2 Function

The Shuttle Radar Topography Mission (SRTM) was flown in February 2000. Interferometric Synthetic Aperture Radar data collected on that mission was used to produce a high resolution DEM of world land areas visible during the mission. This data was processed by the NASA Jet Propulsion Laboratory (JPL) into a product consisting of a set of 1-degree square cells of elevations suitable for distribution and research. Cell granularity is 1200 increments per coordinate degree of latitude and longitude, with some degradation at the extreme latitude limits. Data is available between 60°N and 56°S latitudes.

The purpose of the Maker program is to access and assimilate this data and to generate a set of pre-sorted, ICESat specific Track Files of SRTM DEM data which follow the fixed ICESat orbital tracks. The ultimate goal is to use to Maker's output Track Files quickly and efficiently to attach high resolution SRTM DEM data to GSAS Product Files.

20.3 Design Approach

Maker is a stand-alone utility that does not follow any of the GSAS prescriptions, libraries, or processing techniques discussed in previous chapters. It is essentially a single use utility, though it may be necessary to regenerate the track files if any initial conditions such as the fixed orbits are changed or the SRTM raw data has an update. Multiple files or a single track can be processed. Track Files produced by Maker have a complex series of four levels of self-referencing headers that can be used by software that reads the files to point directly to a desired elevation value if given an input location.

20.4 Input and Output Files

Table 20-1 lists the required input files for Maker. Appendix A of the “Interface Control Document Between ISIPS/ISF and CSR” can provide a description of the reference orbit file. Table 20-2 lists the output files created by Maker.

20.5 Functions

All functions utilized by Maker are contained within the source code. No additional library routines non-specific to FORTRAN are required.

Table 20-1 Maker Input Files

| File Spec | Type | Source | Short Description |
|------------------|---------------|-----------------|--|
| "Control_Params" | text | user | NAMelist format text file of parameters governing program execution. |
| "cell_names.txt" | text | user | Comprehensive list of available cell files, derived from directory listing of files |
| Orbit File | Direct access | GSAS Operations | SCF ICESat Reference Orbit file |
| Cell Files | Direct access | USGS | Set of direct access binary files of DEM elevations arranged in 1° x 1° cell according to latitude and longitude |

Table 20-2 Maker Output Files

| File Spec | Type | Destination | Short Description |
|------------------|-------------|------------------------------|--|
| "Pointings.txt" | text | Transient computational file | List of pointings along the path of the reference orbit being processed at the incremental granularity of the cell files in latitude. |
| "Swath.txt" | text | Transient computational file | List of pointings along the reference orbit path for a given latitude and within a longitudinal limit of the central point. DEM values are attached. |

Table 20-2 Maker Output Files (Continued)

| File Spec | Type | Destination | Short Description |
|------------------|---------------|------------------------|--|
| "Tracknnnn.DAT" | Direct access | Track Files | Internally indexed file with multiple layers of headers containing DEM data. |
| "P_ref_orb.txt" | Text | Diagnostic | Text listing of reference orbit file. |
| Screen display | Text | Status and Diagnostics | Text listing of program progress. |

20.6 Functional Overview

Processing for the Maker program is strictly linear. Each step makes use of the preceding event, whether it be successful opening of a file, reading of a file, or creation of a file. A failure at any step terminates processing with an error message. The program performs the following primary algorithmic steps to build a track file:

- Get control parameters from namelist file.
- Read reference orbit to obtain values of latitude and longitude from specified orbit track.
- Identify a maximum list of SRTM cells crossed by track swath, utilizing the east/west bounds for any given time point, and based solely on possible track locations.
- Compare the maximum list with the directory of available cells, and flag those that can be used.
- Create the sequential pointings file for every potential central pointing. This set of pointings is continuous along the orbit, with no skips other than those for values deemed to be outside the useful range (e.g. high latitude).
- Rewind the pointings file, for use as an input.
- Create a sequential swath file containing an entry for every pointing. Use the saved coordinate data to compute each SRTM file name and internal location, and to then access the elevations along a swath line and attach them to the pointing data in the new swath file.
- Rewind the swath file, for use as input.
- Allocate a direct access file for the output track file.
- Cycle through the swath file to accumulate statistics needed in the Level One and Level Two headers.
- Create basic header data in the track file, and insert times in Level Three headers as placeholders instead of record numbers.

- Rewind the swath file, for use as input.
- Cycle through the swath file data a second time, accumulate the records of elevations at the end of the existing track file, and insert locations for that data into existing header records.

Appendix A

Processing Scenarios

A.1 Scenarios

All identified scenarios that will be eventually tested.

Table A-1 Reprocessing Scenarios

| Scenario | Primary Inputs | Output | Dependencies | Processes |
|--|---|--------------------------|----------------------------|--|
| End to end Lidar | Level 0, ANC data (POD, Met, Cal file), Cntrl | GLA02, 7-11, Meta-data | | L1A Atm ATBD, L1B Atm ATBD, L2 Atm ATBD, POD interp, Met interp |
| End to end Altimeter | Level 0, POD, PAD, Met, Cal file, Cntrl | GLA05,6,12-15, Meta-data | | L1A Altimeter ATBD, L1B Waveform ATBD, L1B Elevation, L2 Elevation, POD, PAD, Geoloc |
| Level 1A Altimeter | Level 0, Cal file, Cntrl | GLA01, Metadata | | L1A Altimeter ATBD |
| Level 1B Waveform | GLA01, POD, PAD, Cal file, ANC 19, surf_type_grid, Cntrl | GLA05, Metadata | | L1B Waveform ATBD, POD, PAD, Geoloc, surf_type interp |
| Level 1B Elevation | GLA05, GLA09&11 (if avail), tide coeff, geoid, ANC 12, DEM, Met | GLA06, Metadata | GLA09 and 11 from GLAS_Atm | Geoid, Tides, Geoloc, Met, DEM interp, Instr Range Cor (5) Reflectance, Atm Flag |
| Level 2 Elevation | GLA05, GLA06, 4 Masks | GLA12-15, Metadata | | Geoloc, Instr Cor Range Region-Specific Parameter Calculations |
| Waveform Algorithm changes (standard, ice sheet, sea ice, ocean, land) | GLA01, GLA05, Cal file | GLA05, Metadata | GLA06, GLA12-15 (1 or all) | Specific Waveform algorithm process, Geolocation |
| Replace POD and/or PAD on GLA05 | GLA05, POD and/or POD | GLA05, Metadata | | POD and/or PAD, Geolocation |

Table A-1 Reprocessing Scenarios (Continued)

| Scenario | Primary Inputs | Output | Dependencies | Processes |
|---|-----------------------------------|---------------------------|---------------------|---|
| Replace PAD and/or POD on GLA06 | GLA06, PAD and/or POD | GLA06, Metadata | GLA12-15 | PAD and/or POD, Geolocation |
| Met changes, redo Met Cor | GLA06, GLA12-15, Met file | GLA06, GLA12-15, Metadata | | Met Interpolation, Geolocation |
| Tides Change, redo tide cor | GLA06, GLA12-15, tide coeff | GLA06, GLA12-15, Metadata | | Tide algorithms, Geolocation |
| Geoid changes | GLA06, GLA12-15, Geoid | GLA06, GLA12-15, Metadata | | Geoid |
| Standard Instr Cor Changes | GLA05, GLA06, GLA12-15 | GLA06, GLA12-15, Metadata | | Standard Instr Cor Algorithm, Geolocation |
| Region Spec Instr Cor Changes | GLA05, GLA06, GLA12-15 | GLA06, GLA12-15, Metadata | | Region Specific Instr Cor Algorithm |
| Reflectance Algorithm changes | GLA05, GLA06, GLA12-15 | GLA06, GLA12-15, Metadata | | Reflectance ATBD |
| Change GLA06 based on WF Algorithm changing for GLA05 | GLA05, GLA06, GLA12-15 | GLA06, GLA12-15, Metadata | | Range Instr Cor Calculation, Geolocation |
| Replace PAD and/or POD on GLA12-15 | GLA12-15, PAD and/or POD | GLA12-15, Metadata | | POD and or PAD, Geolocation |
| Creation of GLA07 BackScatter Profiles | GLA02, Met, POD, 400 sec avg file | GLA07, Metadata | | Interp POD, Interp Met, Molec BackScat Profiles, Calib Coeff, 1064 BackScat Profiles, 532 BackScat Profiles |
| Creation of GLA08 Aerosol Layers | GLA07, Constants, GLA09 | GLA08 | | 1 and 4 sec BackScat averages, PBL/Aerosol <20 km layers, 20-40 km aerosol layers |

Table A-1 Reprocessing Scenarios (Continued)

| Scenario | Primary Inputs | Output | Dependencies | Processes |
|---|--------------------------------|---------------|---------------------|---|
| Creation of GLA09 Cloud Layers | GLA07, Constants | GLA09 | | 1 and 4 sec BackScat averages, Cloud Layers |
| Creation of GLA10 Cross Section Profiles and Creation of GLA11 Optical Depths | GLA07, GLA08, GLA09, Constants | GLA10, GLA11 | | Cloud Optical Properties, Aerosol Optical Properties, 1 and 4 sec BackScat averages |

Appendix B

Makefiles and Libraries

Developers are “strongly” encouraged to use standard GSAS libraries and makefiles. GSAS libraries leverage existing code to speed development and ease maintenance. Makefiles ensure common compiler flags and allow developers to deliver their software as part of a general GSAS delivery.

B.1 Compilation

Note: This documentation is specific to the GLAS development environment. It assumes that the core directory of the GLAS software is located at “/glas/vob”.

B.1.1 To compile the whole distribution

```
cd /glas/vob/src
make
```

B.1.2 To compile only the libraries

```
cd /glas/vob/src
make libs
```

B.1.3 To recompile a library in debug mode

```
cd /glas/vob/src/library_directory
make debug
```

B.1.4 To recompile a library in optimized mode

```
cd /glas/vob/src/library_directory
make fast
```

B.1.5 To compile a specific executable

(requires that the libraries are compiled beforehand)

```
cd /glas/vob/src/executable_directory
make
```

B.1.6 To compile a specific executable in debug mode

(requires that the libraries are compiled beforehand)

```
cd /glas/vob/src/executable_directory
make debug
```

B.1.7 To compile a specific executable in optimized mode

(requires that the libraries are compiled beforehand)

```
cd /glas/vob/src/executable_directory
make fast
```

B.2 Using Libraries

This section details the use of libraries, both at development and run time stages.

B.2.1 Development

To use a library, you need to include the path and the library name in your Makefile. The following example shows how to use the `platform_lib` (which is stored in the `/glas/vob/src/lib` directory) to compile a test program:

```
f90 test.f90 -L/glas/vob/src/lib -lplatform -otest
```

The next example show how to use the file and anc libraries as well. (A side note: By unix convention the full filenames are `libplatform.sl`, `libfile.sl`, and `libanc.sl`, however when they are specified with the `-l` argument on the compile line, the “lib” and “.sl” parts are dropped).

```
f90 test.f90 -L/glas/vob/src/lib -lplatform -lanc -lfile -otest
```

ORDER IS IMPORTANT. See Foundation Libraries section of this document to verify that the libraries are specified in the correct order on the compile line.

B.2.2 Runtime

GSAS libraries are dynamically-linked shared libraries. What this means is that the libraries are not statically linked with executables, but dynamically linked on demand at runtime. With this in mind, it is important that the executable be able to determine the location of the libraries at runtime. During compilation, the location of the libraries is stored in the executable code. If the executable is moved, and the location is relative, the libraries will not be found upon execution. In this case, a developer should use the following procedure to allow executables to link to dynamic libraries, no matter their location.

```
chatr +s enable <executable_name>  
setenv SHLIB_PATH <pathname to libraries>
```

This procedure tells the executable to use the `SHLIB_PATH` environmental variable to find its libraries, then sets that variable to the path of the shared libraries.

The other way of handling this is to link the libraries into the current directory. The executable is set to look in the current directories first for its libraries.

B.3 Some Development Hints

- If you want to use the GLAS libraries, simply compile them (as above) and include the appropriate lines in your makefile (again, as above).
- As long as you model the Makefile for your executable after that of the GLAS PGEs, you will be using shared libraries and will not need to recompile your executable after recompiling a library - unless global data structures or subroutine arguments are changed.
- If you would like to debug the routines in a specific library, `cd` to that directory and do a `make clean`; `make debug`. Next time you run your executable (you don't have to recompile it), it will run with the debug version of the library.

- Using the `-g` and `+check=all` flags (included with `make debug`) is a good idea during testing.
- If you want to get fancy and create a custom makefile for a special purpose, simply use another name for the makefile and use `make -f mymakefile`.
- You may add custom options to the standard makefiles by putting the options on the `gF90_AUX_FLAGS` line. For example, if you wish to define a custom flag (`DEBUG_TIME`) for debugging purposes, define it as follows:

```
gF90_AUX_FLAGS= -DDEBUG_TIME
```

B.4 Makefile Details

This is an attempt to explain how GLAS makefiles work. This assumes the reader is somewhat familiar with the GLAS VOB layout.

B.5 Types of Makefiles

There are different types of makefiles. This section identifies each.

B.5.1 The Main Makefile

This makefile is located at `/glas/vob/Makefile`. This makefile builds all GSAS software and installs the binaries and libs in the `/glas/vob/bin` and `/glas/vob/lib` directories. This makefile is primarily used during production, not development. Developers should always use/link to the binaries and libraries within the `src` directory, not those in the `/bin` and `/lib` directories since the top-level makefile is the only one which populates such directories.

B.5.2 The src Makefile

This makefile is located at `/glas/vob/src/Makefile`. It is the main development makefile which will recursively build all GSAS deliverable software. There are options to:

- build all deliverable GLAS Libraries (`make libs`)
- build all deliverable GLAS binaries (`make progs`)
- build all deliverable Libraries and binaries (`make all`) -the default
- build all deliverable Libraries and binaries in debug mode (`make debug`)
- build all deliverable Libraries and binaries in optimization mode (`make fast`)
- clean up all object code and module files (`make clean`)

B.5.3 Library Makefiles

These makefiles are located at `src/common_libs/*/Makefile`. There are options to:

- Compile library source and install library (`make`)
- Compile library source in debug mode and install library (`make debug`)
- Compile library source in optimization mode and install library (`make fast`)

The libraries are derived objects and installed into /glas/vob/src/lib

B.5.4 Subsystem Makefiles

These makefiles are located at /glas/vob/src/*_lib/Makefile (where * = l1a, atm, elev, wf)

- Compile library source and install library (make)
- Compile library source in debug mode and install library (make debug)
- Compile library source in optimization mode and install library (make fast)

The libraries are derived objects and installed into /glas/vob/src/lib. When installed, the libraries are stored in /glas/vob/lib.

B.5.5 Exec makefiles

These makefiles are located in the directory of each delivered executable: src/GLAS_L1A/Makefile, src/GLAS_L0proc/Makefile, etc. There are options to:

- Compile binary source (make)
- Compile binary source in debug mode (make debug)
- Compile binary source in optimization mode (make fast)

The executables are derived objects and installed into /glas/vob/bin.

B.6 A Sample Heavily-Commented Makefile

```
# NAME:      Makefile
#
# FUNCTION:  Makefile for GLAS_Exec
#
# FILES ACCESSED: See TARGETS definition.
#              ALL DIRECTORY SPECIFICATIONS SHOULD BE RELATIVE, NOT ABSOLUTE,
PATHS!!
#
# COMMENTS:  None.
#
# HISTORY:
#
#   1998 December 18, JLee, Initial Version
#   1999 January  14, JLee, Ported to HP
#   1999 October  18, JLee  Removed default DEBUG, removed recursion
#   1999 October  24, JLee  Set the bit to do SHLIB_PATH
#
#----- Set filepaths
#
# PATHLVL is the path you use to get to /glas/vob/src, but it should
#         be a relative path so that we can compile outside the VOB.
#
PATHLVL=..
#
# UTILDIR is where the GLAS makefile includes can be found. These files
#         contain settings specific to GLAS Makefiles.
#         /glas/vob/cc_util is the actual path.
#
UTILDIR=$(PATHLVL)/../cc_util
```

```

#
# Include Standard GLAS Definitions
#
include $(UTILDIR)/make_defs.$(BRAND)
include $(UTILDIR)/make_defs.incl
#
# Define libraries we will need. They are located in /glas/vob/src/lib.
# This path is pre-defined (relatively) in the GLAS include files.
# The actual filename for -lwf is libwf.sl, -file is libfile.sl
#
LIBS= -llla -latm -lwf -lelev -lprod -lfile -ltime -lanc -lcntrl \
-lerr -lplatform
#
# Define the Production directory where we will copy the binary upon
# creating a production build
#
PRODDIR=$(PATHLVL/./bin)
#
# Define the target binary
#
TARGET=GLAS_Exec
#
# Define the objects will are needed by the Target
#
OBJECTS= \
    CntlDefs_mod.o fCntl_mod.o eCntl_mod.o \
    MainInit_mod.o ReadData_mod.o GetControl_mod.o \
    CloseFiles_mod.o OpenFiles_mod.o WriteL1A_mod.o WriteWF_mod.o \
    WriteAtm_mod.o WriteElev_mod.o MainWrap_mod.o \
    ReadAnc_mod.o L1AMgr_mod.o ElevMgr_mod.o WFMgr_mod.o AtmMgr_mod.o \
    vers_exec_mod.o GLAS_Exec.o
#
# Custom Rules
#
gF90_AUX_FLAGS=
#
# Make our Target by default
#
all: $(TARGET)
#
# TARGET, LIBS and OBJECTS are defined in this makefile.
# LINK_EXE.f90 and FFLAGS are defined in the GLAS includes.
# chart +s enable allows the executable to use the SHLIB_PATH to
# look for its shared libraries.
#
$(TARGET): $(OBJECTS) Makefile
    $(LINK_EXE.f90) $(FFLAGS) -o $(TARGET) $(OBJECTS) $(LIBS); \
    chatr +s enable $(TARGET)
#
# Include Standard GLAS Dependencies
#
include $(UTILDIR)/make_depends.incl
#
# End of MakeFile
#

```


Abbreviations & Acronyms

| | |
|-----------|--|
| A2P | Algorithm-to-Product Conversion |
| ALT | Altimeter or Altimetry, also designation for the EOS-Altimeter spacecraft series |
| ANCxx | GLAS Ancillary Data Files |
| APID | GLAS Level-0 Data file |
| ATBD | Algorithm Theoretical Basis Document |
| ATM | Atmosphere |
| CCB | Change Control Board |
| ClearCase | GSAS version tracking software |
| CR | Change Request |
| DAAC | Distributed Active Archive Center |
| DEM | Digital Elevation Model |
| DFD | Data Flow Diagram |
| DLT | Digital Linear Tape |
| EDOS | EOS Data and Operations System |
| EDS | Expedited Data Set |
| ELEV | Elevation |
| EOC | EOS Operating Center |
| EOS | NASA Earth Observing System Mission Program |
| EOSDIS | Earth Observing System Data and Information System |
| GB | Gigabyte |
| GDS | GLAS Ground Data System |
| GLAS | Geoscience Laser Altimeter System instrument or investigation |
| GLAxx | GLAS Science Data Product Files |
| GLOP | GLAS Level-0 PGE (correctly called GLAS_L0proc) |
| GPS | Global Positioning System |
| GSAS | GLAS Science Algorithm Software |
| GSFC | NASA Goddard Space Flight Center at Greenbelt, Maryland |
| GSFC/WFF | NASA Goddard Space Flight Center/Wallops Flight Facility at Wallops Island, Virginia |

| | |
|-----------|--|
| HDF | Hierarchal Data Format |
| HDF-EOS | EOS-specific Hierarcial Data Format |
| I-SIPS | Icesat Science Investigator Led Processing System |
| I/O | Input/Output |
| ICESAT | Ice, Cloud and Land Elevation Satellite |
| ID | Identification |
| ID | Identification |
| IEEE | Institute for Electronics and Electrical Engineering |
| ISF | Instrument Support Facility |
| IST | Instrument Star Tracker |
| KB | Kilobyte |
| JPL | Jet Propulsion Laboratory |
| L0 | Level 0 |
| L1A | Level-1A |
| L1B | Level-1 B |
| L2 | Level-2 |
| LASER | Light Amplification by Stimulated Emission of Radiation |
| LASER | Light Amplification by Stimulated Emission of Radiation |
| LIDAR | Light Detection and Ranging |
| LIDAR | Light Detection and Ranging |
| LPA | Laser Pointing Array |
| LRS | Laser Reference System |
| MB | Megabyte |
| MET | (context sensitive) Mission Elapsed Time or Meteorological |
| N/A or NA | Not (/) Applicable |
| NASA | National Aeronautics and Space Administration |
| NOAA | National Oceanic and Atmospheric Administration |
| NOSE | Nominal Orbital Spatial Extent |
| P2A | Product-to-Algorithm Conversion |
| PAD | Precision Attitude Determination |
| PDF | Portable Document Format |
| PDS | Production Data Set |

| | |
|------|--|
| PGE | Product Generation Executable |
| POD | Precision Orbit Determination |
| POD | Precision Orbit Determination |
| PR | Problem Report |
| QA | Quality Assessment |
| QAP | Quality Assessment Processing |
| SC | Structure Chart |
| SCF | Science Computing Facility |
| SDMP | Science Data Management Plan |
| SDMS | Scheduling and Data Management System |
| SDP | Standard Data Products |
| SRS | Stellar Reference System |
| SRTM | Shuttle Radar Topography Mission |
| SSMP | Science Software Management Plan |
| SSRF | Science Software Requirements Document |
| TBD | to be determined, to be done, or to be developed |
| UNIX | the operating system jointly developed by the AT&T Bell Laboratories and the University of California-Berkeley System Division |
| UTC | Universal Time Correlation |
| WF | Waveform |

Glossary

| | |
|-----------|---|
| aggregate | A collection, assemblage, or grouping of distinct data parts together to make a whole. It is generally used to indicate the grouping of GLAS data items, arrays, elements, and EOS parameters into a data record. For example, the collection of Level 1B EOS Data Parameters gathered to form a one-second Level 1B data record. It could be used to represent groupings of various GLAS data entities such as data items aggregated as an array, data items and arrays aggregated into a GLAS Data Element, GLAS Data Elements aggregated as an EOS Data Parameter, or EOS Data Parameters aggregated into a Data Product record. |
| array | An ordered arrangement of homogenous data items that may either be synchronous or asynchronous. An array of data items usually implies the ability to access individual data items or members of the array by an index. An array of GLAS data items might represent the three coordinates of a georeference location, a collection of values at a rate, or a collection of values describing an altimeter waveform. |
| file | A collection of data stored as records and terminated by a physical or logical end-of-file (EOF) marker. The term usually applies to the collection within a storage device or storage media such as a disk file or a tape file. Loosely employed it is used to indicate a collection of GLAS data records without a standard label. For the Level 1A Data Product, the file would constitute the collection of one-second Level 1A data records generated in the SDPS working storage for a single pass. |
| header | A text and/or binary label or information record, record set, or block, prefacing a data record, record set, or a file. A header usually contains identifying or descriptive information, and may sometimes be embedded within a record rather than attached as a prefix. |
| item | Specifically, a data item. A discrete, non-decomposable unit of data, usually a single word or value in a data record, or a single value from a data array. The representation of a single GLAS data value within a data array or a GLAS Data Element. |
| label | The text and/or binary information records, record set, block, header, or headers prefacing a data file or linked to a data file sufficient to form a labeled data product. A standard label may imply a standard data product. A label may consist of a single header as well as multiple headers and markers depending on the defining authority. |
| Level 0 | The level designation applied to an EOS data product that consists of raw instrument data, recorded at the original resolution, in time order, with any duplicate or redundant data packets removed. |
| Level 1A | The level designation applied to an EOS data product that consists of reconstructed, unprocessed Level 0 instrument data, recorded at the full resolution with time referenced data records, in time order. The data are annotated with ancillary information including radiometric and geometric calibration coefficients, and georeferencing parameter data (i.e., ephemeris data). The included, computed coefficients and parameter data have not however been applied to correct the Level 0 instrument data contents. |

| | |
|-----------|--|
| Level 1B | The level designation applied to an EOS data product that consists of Level 1A data that have been radiometrically corrected, processed from raw data into sensor data units, and have been geolocated according to applied georeferencing data. |
| Level 2 | The level designation applied to an EOS data product that consists of derived geophysical data values, recorded at the same resolution, time order, and georeference location as the Level 1A or Level 1B data. |
| Level 3 | The level designation applied to an EOS data product that consists of geophysical data values derived from Level 1 or Level 2 data, recorded at a temporally or spatially resampled resolution. |
| Level 4 | The level designation applied to an EOS data product that consists of data from modeled output or resultant analysis of lower level data that are not directly derived by the GLAS instrument and supplemental sensors. |
| metadata | The textual information supplied as supplemental, descriptive information to a data product. It may consist of fixed or variable length records of ASCII data describing files, records, parameters, elements, items, formats, etc., that may serve as catalog, data base, keyword/value, header, or label data. This data may be parsable and searchable by some tool or utility program. |
| orbit | The passage of time and spacecraft travel signifying a complete journey around a celestial or terrestrial body. For GLAS and the EOS ALT-L spacecraft each orbit starts at the time when the spacecraft is on the equator traveling toward the North Pole, continues through the equator crossing as the spacecraft ground track moves toward the South Pole, and terminates when the spacecraft has reached the equator moving northward from the South Polar region. |
| model | A graphical representation of a system. |
| module | A collection of program statements with four basic attributes: input and output, function, mechanics and internal data. |
| parameter | Specifically, an EOS Data Parameter. This is a defining, controlling, or constraining data unit associated with a EOS science community approved algorithm. It is identified by an EOS Parameter Number and Parameter Name. An EOS Data Parameter within the GLAS Data Product is composed of one or more GLAS Data Elements |
| pass | A sub-segment of an orbit, it may consist of the ascending or descending portion of an orbit (e.g., a descending pass would consist of the ground track segment beginning with the northernmost point of travel through the following southernmost point of travel), or the segment above or below the equator; for GLAS the pass is identified as either the northern or southern hemisphere portion of the ground track on any orbit |
| PDL | Program Design Language (Pseudocode). A language tool used for module programming and specification. It is at a higher level than any existing compilable language. |
| process | An activity on a dataflow diagram that transforms input data flow(s) into output data flow(s). |

| | |
|--------------------------|---|
| product | Specifically, the Data Product or the EOS Data Product. This is implicitly the labeled data product or the data product as produced by software on the SDPS or SCF. A GLAS data product refers to the data file or record collection either prefaced with a product label or standard formatted data label or linked to a product label or standard formatted data label file. Loosely used, it may indicate a single pass file aggregation, or the entire set of product files contained in a data repository. |
| program | The smallest set of computer instructions that can be executed as a stand-alone unit |
| record | A specific organization or aggregate of data items. It represents the collection of EOS Data Parameters within a given time interval, such as a one-second data record. It is the first level decomposition of a product file. |
| Scenario | A single execution path for a process. |
| Standard Data Product | Specifically, a GLAS Standard Data Product. It represents an EOS ALT-L/ GLAS Data Product produced on the EOSDIS SDPS for GLAS data product generation or within the GLAS Science Computing Facility using EOS science community approved algorithms. It is routinely produced and is intended to be archived in the EOSDIS data repository for EOS user community-wide access and retrieval. |
| State Transition Diagram | Graphical representation of one or more scenarios. |
| Stub | (alias dummy module) a primitive implementation of a subordinate module, which is normally used in the top-down testing of superordinate (higher) modules. |
| Structure Chart | A graphical tool for depicting the partitioning of a system into modules, the hierarchy and organization of those modules, and the communication interfaces between the modules. |
| Structured Design | The development of a blueprint of a computer system solution to a problem, having the same components and interrelationships amount the components as the original problem has. |
| Subroutine | A program that is called by another program |
| variable | Usually a reference in a computer program to a storage location, i.e., a place to contain or hold the value of a data item. |

